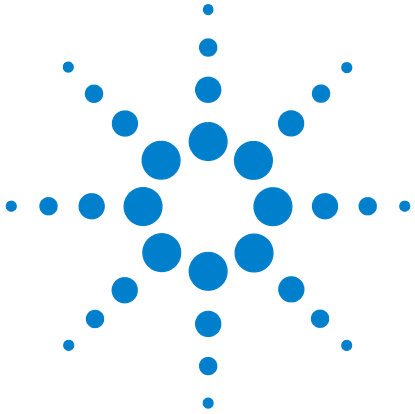

Agilent N5416A USB 2.0 Compliance Test Option

Notes on Electrical Testing

Agilent Technologies

Notices

© Agilent Technologies, Inc. 1997 – 2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

N5416-97007

Edition

Tenth edition, April 2013

Available in electronic format only

Agilent Technologies, Inc.
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

USB Automated Testing—At A Glance

The Agilent N5416A USB 2.0 compliance test option helps you verify USB compliance to specifications using the Agilent 5485xA, 9000 or 80000 or 90000A Series Infiniium digital storage oscilloscope.

The USB 2.0 compliance test option runs under an automated test engine that.

- Lets you select individual or multiple tests to run.
- Lets you identify the device being tested and its configuration.
- Shows you how to make oscilloscope connections to the device under test.
- Automatically checks for proper oscilloscope configuration.
- Automatically sets up the oscilloscope for each test.
- Provides detailed information for each test that has been run and lets you specify the thresholds at which marginal or critical warnings appear.
- Creates a printable HTML report of the tests that have been run.

In This Book

This manual contains notes on the electrical tests that are performed by the USB 2.0 compliance test option; it describes the equipment used, and it describes how the tests are performed.

- Chapter 1, “Installing the USB 2.0 Compliance Test Option” shows how to install and license the automated test application software (if it was purchased separately).
- Chapter 2, “Preparing to Take Measurements” describes the equipment required, how to set up the equipment, how to start the USB 2.0 Compliance Test Option, and how to run tests.
- Chapter 3, “Device Hi-Speed Tests” describes the equipment used for each test setup.
- Chapter 4, “Hub Hi-Speed Tests” describes the equipment used for each test setup.
- Chapter 5, “Host Hi-Speed Electrical Tests” describes the equipment used for each test setup.
- Chapter 6, “Troubleshooting Hi-Speed Test Failures” describes the Debug Mode options that can be used when troubleshooting hi-speed test failures.
- Chapter 7, “Low and Full Speed Tests” describes the equipment used for each test setup.
- Chapter 8, “On-The-Go Electrical Tests” describes the equipment used for the test setup.

See Also

- The USB 2.0 Compliance Test Option’s online help, which describes:
  - Creating or opening a test project.
  - Selecting tests.
  - Configuring selected tests.
  - Connecting the oscilloscope to the DUT.
  - Running tests.
  - Viewing test results.
  - Viewing/printing the HTML test report.
  - Saving test projects.
- The USB 2.0 developers documents are available at the USB Implementers Forum web site, http://www.usb.org/developers/docs. This web page has test procedure documents for the E2683A USB 2.0 Compliance Test Option, which contain test records used for compliance test submission.

Contents

USB Automated Testing—At A Glance 3

In This Book 4

1 Installing the USB 2.0 Compliance Test Option

Installing the Software 16

Installing the License Key 17

2 Preparing to Take Measurements

Required Equipment and Software 20

- Oscilloscope, Software, and Accessories 20
- High-Speed Electrical Test Bed Computer 22
- E2649B USB 2.0 High-Speed Fixture Set 23

Setting Up the Equipment 25

- Infiniium 5485xA, 9000A, 80000 and 90000A Series Digital Sampling Oscilloscope 25
- Differential Connection 25
- Single-Ended Connection 26
- 81130A Digital Signal Generator 27

Starting the USB 2.0 Compliance Test Option 28

Online Help Topics 30

Running Tests 31

3 Device Hi-Speed Tests

Device Hi-Speed Signal Quality Test 35

- Equipment Used 35
- Selecting the Tests 35
- Configuring the Tests 36
- Connecting the Equipment - Differential Connection 36
- Connecting the Equipment - Single-Ended Connection 37
- Running the Tests 38
- Test Instructions, Part 1 38
- Test Instructions, Part 2 38
- Viewing Test Results 40

Device Packet Parameters 41
Equipment Used 41
Selecting the Tests 41
Configuring the Tests 42
Connecting the Equipment 42
Running the Tests 43
Test Instructions, Part 1 43
Test Instructions, Part 2 44
Viewing Test Results 47
Device CHIRP Timing 48
Equipment Used 48
Selecting the Tests 48
Configuring the Tests 49
Connecting the Equipment 49
Running the Tests 50
Test Instructions 50
Viewing Test Results 50
Device Suspend/Resume/Reset Timing 51
Equipment Used 51
Selecting the Tests 51
Configuring the Tests 52
Connecting the Equipment 52
Running the Tests 53
Test Instructions 53
Viewing Test Results 58
Device Test J/K, SE0_NAK 59
Equipment Used 59
Selecting the Tests 59
Configuring the Tests 60
Connecting the Equipment 60
Running the Tests 61
Test Instructions 61
Viewing Test Results 64

Device Receiver Sensitivity 65
Equipment Used 65
Selecting the Tests 66
Configuring the Tests 66
Connecting the Equipment 67
Running the Tests 68
Test Instructions 68
Viewing Test Results 70

4 Hub Hi-Speed Tests

Hub Hi-Speed Signal Quality Test - Upstream Facing Ports 73
Equipment Used 73
Selecting the Tests 73
Configuring the Tests 74
Connecting the Equipment - Differential Connection 74
Connecting the Equipment - Single-Ended Connection. 74
Running the Tests 76
Test Instructions, Part 1 76
Test Instructions, Part 2 77
Viewing Test Results 77
Hub Hi-Speed Signal Quality Test - Downstream Facing Ports 78
Equipment Used 78
Selecting the Tests 78
Configuring the Tests 79
Connecting the Equipment 79
Running the Tests 80
Test Instructions 80
Viewing Test Results 81
Hub Jitter Test - Downstream Facing Ports 82
Equipment Used 82
Selecting the Tests 82
Configuring the Tests 83
Connecting the Equipment 83
Running the Tests 84
Test Instructions 84
Viewing Test Results 85

Hub Disconnect Detect 86
Equipment Used 86
Selecting the Tests 86
Configuring the Tests 87
Connecting the Equipment 87
Running the Tests 88
Test Instructions 88
Viewing Test Results 89
Hub Packet Parameters - Upstream Facing Port 90
Equipment Used 90
Selecting the Tests 90
Configuring the Tests 91
Connecting the Equipment 91
Running the Tests 92
Test Instructions, Part 1 92
Test Instructions, Part 2 93
Viewing Test Results 96
Hub Receiver Sensitivity - Upstream Facing Port 97
Equipment Used 97
Selecting the Tests 98
Configuring the Tests 98
Connecting the Equipment 102
Running the Tests 103
Test Instructions 103
Viewing Test Results 105
Hub Repeater Test - Downstream Facing Port 106
Equipment Used 106
Selecting the Tests 107
Configuring the Tests 107
Connecting the Equipment 107
Running the Tests 109
Test Instructions 109
Viewing Test Results 110

Hub Repeater Test - Upstream Facing Port 111
Equipment Used 111
Selecting the Tests 112
Configuring the Tests 112
Connecting the Equipment 112
Running the Tests 114
Test Instructions, Part 1 114
Test Instructions, Part 2 115
Viewing Test Results 116
Hub CHIRP Timing - Upstream Facing Port 117
Equipment Used 117
Selecting the Tests 117
Configuring the Tests 118
Connecting the Equipment 118
Running the Tests 119
Test Instructions 119
Viewing Test Results 119
Hub Suspend/Resume/Reset Timing - Upstream Facing Port 120
Equipment Used 120
Selecting the Tests 120
Configuring the Tests 121
Connecting the Equipment 121
Running the Tests 122
Test Instructions 122
Viewing Test Results 127
Hub Test J/K, SE0_NAK - Upstream Facing Port 128
Equipment Used 128
Selecting the Tests 128
Configuring the Tests 129
Connecting the Equipment 129
Running the Tests 130
Test Instructions 130
Viewing Test Results 133

Hub Test J/K, SE0_NAK - Downstream Facing Port 134
Equipment Used 134
Selecting the Tests 134
Configuring the Tests 135
Connecting the Equipment 135
Running the Tests 136
Test Instructions 136
Viewing Test Results 139

5 Host Hi-Speed Electrical Tests

Host Hi-Speed Signal Quality 143
Equipment Used 143
Selecting the Tests 143
Configuring the Tests 144
Connecting the Equipment - Differential Connection 144
Connecting the Equipment - Single-Ended Connection 144
Running the Tests 145
Test Instructions, Part 1 145
Test Instructions, Part 2 146
Viewing Test Results 147
Host Controller Packet Parameters 148
Equipment Used 148
Selecting the Tests 148
Configuring the Tests 149
Connecting the Equipment 149
Running the Tests 150
Test Instructions, Part 1 150
Test Instructions, Part 2 151
Viewing Test Results 154
Host Disconnect Detect 155
Equipment Used 155
Selecting the Tests 155
Configuring the Tests 156
Connecting the Equipment 156
Running the Tests 157
Test Instructions 157
Viewing Test Results 158

Host CHIRP Timing 159
Equipment Used 159
Selecting the Tests 159
Configuring the Tests 160
Connecting the Equipment 160
Running the Tests 162
Test Instructions 162
Viewing Test Results 163
Host Suspend/Resume Timing 164
Equipment Used 164
Selecting the Tests 164
Configuring the Tests 165
Connecting the Equipment 165
Running the Tests 166
Test Instructions 166
Viewing Test Results 168
Host Test J/K, SE0_NAK 169
Equipment Used 169
Selecting the Tests 169
Configuring the Tests 170
Connecting the Equipment 170
Running the Tests 170
Test Instructions 170
Viewing Test Results 173

6 Troubleshooting Hi-Speed Test Failures

7 Low and Full Speed Tests

Droop/Drop Test 178
New E2649-66405 Droop/Drop Test Fixture 178
Host and Self-Powered Hubs 180
Bus-Powered Hubs 188

Inrush Current Test 197
Equipment Used 197
Selecting the Tests 197
Configuring the Tests 198
Connecting the Equipment 198
Running the Tests 199
Test Instructions, Part 1 199
Test Instructions, Part 2 199
Viewing Test Results 199
Signal Integrity Test 200
Host Downstream Signal Quality Test 200
Hub Downstream Signal Quality Test 205
Upstream Signal Quality Test 211
Back-Voltage Test Before Enumerate 221
Equipment Used 221
Selecting the Tests 221
Configuring the Tests 222
Connecting the Equipment 222
Running the Tests 222
Test Instructions 222
Viewing Test Results 223
Back-Voltage Test After Enumerate 224
Equipment Used 224
Selecting the Tests 224
Configuring the Tests 224
Connecting the Equipment 224
Running the Tests 225
Test Instructions 225
Viewing Test Results 226
8 On-The-Go Electrical Tests
Equipment Used 228
Installing the USB-OET (OTG Electrical Test) Fixture Driver 229
Selecting the Tests 229
Configuring the Tests 230
Connecting the Equipment 230

Running the Tests 231
E1 E8 A-Device Output Voltage 231
E3 VBUS Rise Time 232
E5 B-Device (SRP capable) to OTG Device Output Voltage 232
E6 B-Device (SRP capable) to Host Output Voltage 232
E19 A-Device Session Valid 232
E20 B-Device VBUS Valid 233
E22 Data-Line Pulsing Test 233
A-Device VBUS Valid (VA_VBUS_VLD) 233
Viewing Test Results 233

Index

1 Installing the USB 2.0 Compliance Test Option

Installing the Software 16
Installing the License Key 17

If you purchased the N5416A USB 2.0 Compliance Test Option separately, you need to install the software and license key.

Installing the Software

1. Make sure you have the correct Infiniium software version by choosing **Help>About Infiniium...** from the main menu.
   - Version 5.71 or greater of Infiniium software 80000 Series Infiniium Digital Storage Oscilloscope OR
   - Version 1.41 or greater of Infiniium software 90000A Series Infiniium Digital Storage Oscilloscope OR
   - Version 2.00 or greater of Infiniium software 9000A Series Infiniium Digital Storage Oscilloscope.
2. Download the latest version of the N5416A USB 2.0 Compliance Test Option software to your oscilloscope:
   a. Go to: http://www.agilent.com/find/scope-apps-sw
   b. Click the N5416A USB 2.0 Compliance Test Option links.
3. Run the setup program, and follow the instructions.

   Be sure to accept the installation of the .NET Framework software; it is required in order to run the USB 2.0 Compliance Test Option.

Installing the License Key

1. Request a license code from Agilent by following the instructions on the Entitlement Certificate.

   You will need the oscilloscope's "Option ID Number", which you can find in the **Help>About Infiniium...** dialog.

2. After you receive your license code from Agilent, choose **Utilities>Install Option License...**.
3. In the Install Option License dialog, enter your license code and click **Install License**.
4. Click **OK** in the dialog that tells you to restart the Infiniium oscilloscope application software to complete the license installation.
5. Click **Close** to close the Install Option License dialog.
6. Choose **File>Exit**.
7. Restart the Infiniium oscilloscope application software to complete the license installation.

2 Preparing to Take Measurements

Required Equipment and Software 20
Setting Up the Equipment 25
Starting the USB 2.0 Compliance Test Option 28
Running Tests 31

This chapter lists all of the required equipment for running the compliance tests. It also includes information on the fundamental equipment connections, accessing help, and running the software. After you gather and set up the required equipment and software, you can start the USB 2.0 Compliance Test Option and begin performing the electrical compliance tests.

Required Equipment and Software

The following tables list the required test equipment and the tests for which they are required.

Oscilloscope, Software, and Accessories

Table 1 Digital Storage Oscilloscope, Software, and Accessories

Equipment Required	TESTS			
	Host Hi-Speed	Hub Hi-Speed	Device Hi-Speed	Low/Full Speed
Agilent 5485xA, 9000A or 80000 or 90000A Series Infiniium oscilloscope.	1[*,†]	1[a,b]	1[a,b]	1[a,b]
Agilent N5416A USB Compliance Test Option.	1	1	1	1
Computer monitor (optional).	optional	optional	optional	optional
Agilent 1131A, 1133A, or 1134A InfiniiMax differential probe.	1	2	1	n/a
Agilent E2669A differential connectivity kit, OR E2678A socketed head.	1	2	1	n/a
Agilent header adapter (P/N 01131-68703), included with E2669A and E2678A purchased after October, 2003.	1[‡]	2[c]	1[c]	n/a
Agilent E2697A 1 Mohm adapter with passive probe, OR 1156A, 1157A, or 1158A active probe.	2	2	2	3[**]
Agilent E2697A high impedance converter, N2774A current probe, and N2775A power supply.	n/a	n/a	n/a	1[d]
Agilent 8710-2063 dual lead adapter (3 units) - to be used with the 10073C passive probe				

* The oscilloscope's memory upgrade option is recommended (Option 001 when ordered with the oscilloscope, or after purchase: E2680A for the 5485xA Series oscilloscopes, or N5404A for the 80000 and 90000A Series oscilloscopes). This gives the automated test software more flexibility in making corner case measurements (and improves test performance).

† The enhanced bandwidth software option is recommended for the Agilent 54855A oscilloscope (Option 008), and the noise reduction software option is recommended for the 80000 and 90000A Series oscilloscopes (Option 005 when ordered with the oscilloscope or N5403A after purchase). This reduces the bandwidth of the oscilloscope to just what is required by the USB-IF (2 GHz for USB 2.0), which can greatly reduce system measurement noise, allowing the maximum measurement margin.

‡ For low/full speed testing, the Agilent 54831B/D or 54832B/D Infiniium oscilloscope with 1165A passive probes and 1147A current probe can be used instead.

**The header adapter is not needed with hi-speed test fixtures (E2649-66401 through E2649-66405).

Table 2 Digital Multimeter

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
Agilent 33401A digital multimeter or equivalent.	1	1	1	1
Mini-clip DMM leads - one each of black and red color.	1	1	1	1

Table 3 Digital Signal Generator

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
Agilent 81130A Pulse/Pattern Generator with 2 channels of Agilent 81132A (660 MHz) option.	n/a	1	1	n/a
1 MB Memory card option for 81130A (option UFJ).	n/a	1	1	n/a
6dB attenuator (Agilent 8493C Option 006) – for scaling the DSG output voltages needed for receiver sensitivity test.	n/a	2	2	n/a
50-ohm coaxial cable with male SMA connectors at both ends (Agilent 8120-4948 or equivalent).	n/a	2	2	n/a
Agilent 82357B USB/GPIB interface	n/a	1	1	n/a

Table 4 Miscellaneous Cables and Devices

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
5 m USB cable (any listed on USB-IF web site).	1	1	1	as needed
1.5 m USB cable (any listed on USB-IF web site).	1	1	n/a	n/a
1 m USB cable (any listed on USB-IF web site).				as needed
Modular AC power cord.	2	2	2	
Hi-Speed USB Hub (any listed on USB-IF web site).	1	n/a	n/a	
Hi-Speed USB Device (any listed on USB-IF web site).	1	n/a	n/a	

Table 4 Miscellaneous Cables and Devices (continued)

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
USB self-powered hub (and power supply). These are the hubs used for compliance testing and are available from the USB-IF. For development testing, in most cases, a hub that has passed USB compliance testing can be used.	n/a	n/a	n/a	5

High-Speed Electrical Test Bed Computer

The high-speed electrical test bed computer hosts a USB 2.0 compliance host controller for hi-speed hub or device electrical test, or serves as a test bed host for a USB 2.0 host controller under test. For instructions on configuring this computer, refer to the High-Speed Electrical Test Toolkit Setup Instruction document which comes with the High-Speed Electrical Test Tool Kit software.

You can download the High-Speed Electrical Test Tool Kit software (USBHSET) from the developers tools page at the USB Implementers Forum web site, http://www.usb.org/developers/tools.

The High-Speed Electrical Test Tool Kit software contains a proprietary EHCI driver stack. The Hi-speed Electrical Test Tool software requires the use of a proprietary EHCI driver stack. The use of this proprietary EHCI driver stack facilitates the electrical testing that requires direct control of the command registers of the USB EHCI host controllers. The end result much more robust test bed environment. Since the proprietary EHCI driver stack is designed for debug and test validation purposes, this driver stack does not support the normal functionality as found in the EHCI drivers from Microsoft (or the device vendor). An automatic driver stack switching function has been implemented into the Hi-speed Electrical Test Tool for easy switching between the proprietary EHCI driver stack and that from Microsoft. Upon invocation of the HS Electrical Test Tool software, the driver stack will automatically switch to the Intel proprietary EHCI driver stack. Upon exit of the HS Electrical Test Tool software, the driver stack will automatically switch to the Microsoft EHCI driver stack.

Table 5 High-Speed Electrical Test Bed Computer

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
High-Speed Electrical Test Bed Computer	1	1	1	1
High-Speed Electrical Test Tool Kit software (USBHSET)	1	1	1	1

E2649B USB 2.0 High-Speed Fixture Set

The E2649B high-speed fixture set includes five test fixtures. In the test procedures, separate instructions may be provided based on the version of the fixture that is being used. Fixture versions are identified by a part number, which are shown in the following table and marked on the fixture.

NOTE The fixture part numbers are provided for *identification* purposes only and cannot be used for ordering.

Table 6 *Five E2649B Fixtures with Identification Numbers and Applicable Tests*

			TESTS			
Test Fixture Description	**New Part Number**	**Old Part Number**	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
Device High Speed Signal Quality Test Fixture	E2649-66401	E2645-66507	1	1	1	n/a
Host High Speed Signal Quality Test Fixture	E2649-66402	E2645-66508	1	1	n/a	n/a
Receiver Sensitivity Test Fixture	E2649-66403	E2645-66503	n/a	1	1	n/a
Host Disconnect Test Fixture	E2649-66404	E2645-66506	1	n/a	n/a	n/a
Droop/Drop Test Fixture	E2649-66405	n/a	n/a	n/a	n/a	1

Table 7 Miscellaneous Equipment for use with Test Fixtures

	TESTS			
Equipment Required	**Host Hi-Speed**	**Hub Hi-Speed**	**Device Hi-Speed**	**Low/Full Speed**
5V test fixture power supply, Agilent P/N 0950-2546 or equivalent	1	1	1	n/a
E2646A/B SQiDD board, included in the USB test option.	n/a	n/a	n/a	1*
100 mA load board (see the schematic in Figure 4 on page 177)				1
500 mA load board (see the schematic in Figure 5 on page 177)				1

* A second SQiDD board is recommended for droop/drop testing (if you are not using the Droop/Drop fixture); additional SQiDD boards can be ordered as Agilent E2646B.

Table 8 Contents of E2649B USB 2.0 High-Speed Fixture Set

Equipment Required	Qty	P/N
USB to right-angle DC-plug cable, 2m long,	1	8121-1966
USB 2.0 A (m) to USB 2.0 micro-B (m) cable, 4 inch	1	8121-2153
Device Hi-Speed Signal Quality test fixture. Includes:	1	n/a
RF SMA (m) vertical 50-ohm connector	2	n/a
USB A-to-B cable, 4 inch	2	E2646-61601
Host Hi-Speed Signal Quality test fixture. Includes:	1	n/a
RF SMA (m) vertical 50-ohm connector	2	n/a
USB A-to-B cable, 4 inch	2	E2646-6160
Receiver Sensitivity test fixture. Includes:	1	n/a
USB A-to-B cable, 4 inch	2	E2646-61601
Host Disconnect test fixture. Includes:	1	n/a
USB A-to-B cable, 4 inch	2	E2646-61601
Droop/Drop test fixture. Includes:	1	n/a
USB A-B I-O 4COND 1.8m long cable, 1.8 meter	2	8121-1482

Setting Up the Equipment

Infiniium 5485xA, 9000A, 80000 and 90000A Series Digital Sampling Oscilloscope

1 Connect keyboard and mouse to oscilloscope.

2 Connect optional computer monitor to the VGA connector on the rear nearest the right side of the instrument.

Differential Connection

3 Attach the Agilent 113xA differential probe to Channel 1 of the oscilloscope.

a Attach the socketed probe head to the differential probe amp.

b Attach the header adapter to the socketed probe head (Figure 1). This step is only needed if you are using the old test fixtures (E2645-66504, E2645-66505, E2645-66506, E2645-66507, E2645-66508). If you are using the new test fixtures (E2649-66401, E2649-66402, E2649-66403, E2649-66404, E2649-66405), you do not need to use a header adapter and can work with a socketed probe head.

c Handle the socketed probe head and header adapter carefully.

d For durability, epoxy can be used to strengthen the assembly. Only apply epoxy to back (noncomponent) side of probe head.

Figure 1 Differential Probe Setup

4 Attach the E2697A adapters or 1156A probes to Channels 2 and 3.

   a When using the E2697A adapter, connect the 10073C miniature passive probes to the E2697A adapter.

NOTE These probe assignments will be used through out the entire test procedure.

5 Turn on the oscilloscope to allow 30 minutes of warm up time prior to use.

6 Configure the second monitor, if being used, while the oscilloscope is warming up.

7 If the ambient temperature has changed more than 5 degrees from the previous calibration, perform the calibration procedure built into the oscilloscope (in the [Calibration...] section of [Utilities] pull down menu).

8 If the E2697A adapter is being used, compensate the passive probes (see probe instructions).

9 Calibrate all the probes.

   a If you will be performing hub hi-speed tests, calibrate out the skew between the differential probes on channel 1 and channel 4 (refer to oscilloscope instructions).

NOTE In certain test situations, there may not be a ground connection between the DSO and the device under test. This may lead to the signal seen by the differential probe to be modulated up and down due to the mid-frequency switching power supply. Connecting the DSO ground to the DUT ground will be required to establish a common ground reference.

Single-Ended Connection

The following tests allow single-ended SMA connection measurements:

- Device Hi-Speed Signal Quality Test
- Device Hi-Speed Manual Tests
- Hub Hi-Speed Signal Quality Test
- Hub Hi-Speed Manual Tests
- Host Hi-Speed Signal Quality Test
- Host Hi-Speed Manual Tests

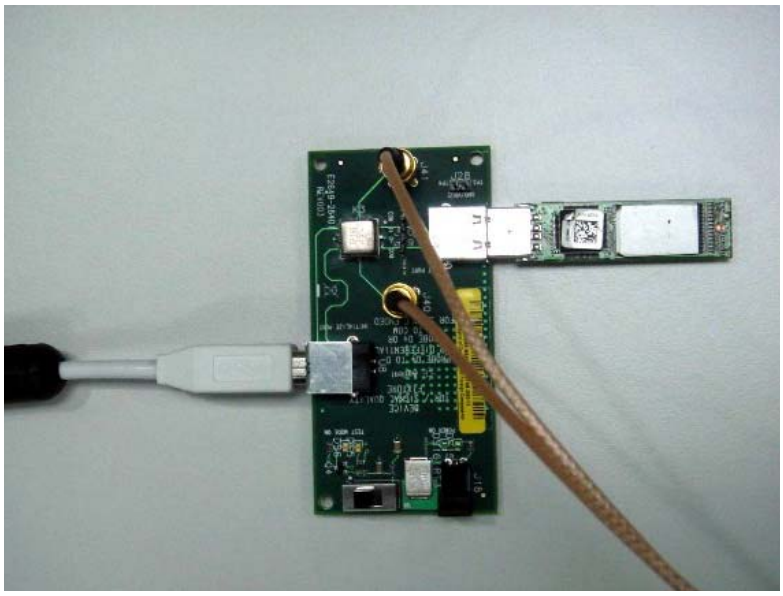

81130A Digital Signal Generator

The digital signal generator is needed to perform hi-speed hub and device receiver sensitivity tests. For energy conservation, you may choose to turn on the digital signal generator about 15 minutes prior to performing these measurements.

Starting the USB 2.0 Compliance Test Option

1 From the Infiniium oscilloscope's main menu, choose **Analyze>Automated Test Apps>USB Test**.

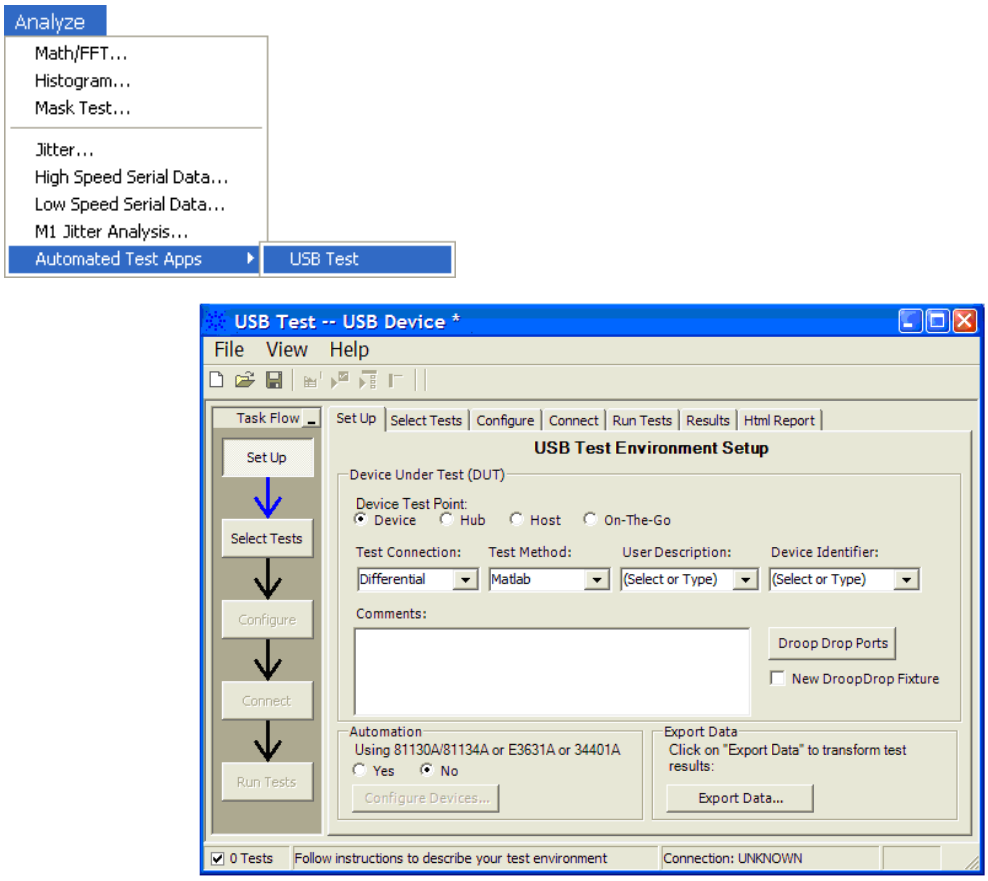

Figure 2 The USB 2.0 Compliance Test Option

NOTE

If "USB Test" does not appear in the Automated Test Apps menu, the USB 2.0 Compliance Test Option has not been installed (see Chapter 1, "Installing the USB 2.0 Compliance Test Option").

Figure 2 shows the USB 2.0 Compliance Test Option main window. The task flow pane, and the tabs in the main pane, show the steps you take in running the automated tests:

Set Up	Lets you identify the test environment, including information about the device being tested and other test instruments that can be automatically configured. The new Hi-Speed fixtures allow you to choose between either differential or single-ended connections (old fixtures only permit differential connections). The **Test Method** choice lets you choose between doing tests automatically or manually. If you want to do the tests automatically, select **Matlab** for this box. If you want to do the tests manually, select **Both** for this box. When you select **Both** and then go under the **Select Tests** tab, you will see that some manual tests appear. These test only use the oscilloscope whereas the automatic ones use Matlab. Also, if you are using the new Drop/Droop test fixture, check the **New DroopDrop Fixture** box and use the button above it to select the test ports.
Select Tests	Lets you select the tests you want to run. The tests are organized hierarchically so you can select all tests in a group. After tests are run, status indicators show which tests have passed, failed, or not been run, and there are indicators for the test groups.
Configure	Lets you configure test parameters (like test type).
Connect	Shows you how to connect the oscilloscope to the device under test for the tests to be run.
Run Tests	Starts the automated tests. If the connections to the device under test need to be changed while multiple tests are running, the tests pause, show you how to change the connection, and wait for you to confirm that the connections have been changed before continuing.
Results	Contains more detailed information about the tests that have been run. You can change the thresholds at which marginal or critical warnings appear.
HTML Report	Shows a compliance test report that can be printed. You can choose between a verbose and compact report.

Online Help Topics

For information on using the USB 2.0 Compliance Test Option, see its online help (which you can access by choosing Help>Contents... from the application's main menu).

The USB 2.0 Compliance Test Option's online help describes:

- Creating or opening a test project.
- Selecting tests.
- Configuring selected tests.
- Connecting the oscilloscope to the DUT.
- Running tests.
- Viewing test results.
  - To show reference images and flash mask hits.
  - To change margin thresholds.
- Viewing/printing the HTML test report.
- Saving test projects.

Running Tests

To run USB electrical compliance tests:

1. Select the tests you want to run.
2. Change test configuration options if necessary.
3. Connect the oscilloscope to the device under test.
4. Run the tests.
5. View the detailed test results.
6. View/print the HTML test report.

3 Device Hi-Speed Tests

Device Hi-Speed Signal Quality Test 35
Device Packet Parameters 41
Device CHIRP Timing 48
Device Suspend/Resume/Reset Timing 51
Device Test J/K, SE0_NAK 59
Device Receiver Sensitivity 65

NOTE

To give the automated test software more flexibility in making corner case measurements (and improve test performance), the oscilloscope's memory upgrade option is recommended (Option 001 when ordered with the oscilloscope, or after purchase: E2680A for the 5485xA Series oscilloscopes, or N5404A for the 80000 and 90000A Series oscilloscopes).

Also, to reduce the bandwidth of the oscilloscope to just what is required by the USB-IF (2 GHz for USB 2.0)—this can greatly reduce system measurement noise, allowing the maximum measurement margin—the enhanced bandwidth software option is recommended for the Agilent 54855A oscilloscope (Option 008), and the noise reduction software option is recommended for the 80000 and 90000A Series oscilloscopes (Option 005 when ordered with the oscilloscope or N5403A after purchase).

In addition to the hi-speed electrical tests described in this chapter, the device under test must also pass the following compliance tests applicable to hi-speed capable devices:

- Upstream full speed signal quality.
- Upstream low speed signal quality.
- Inrush current.
- Back-voltage.

Before Running These Tests

If you haven't already performed the initial equipment set up, see "Setting Up the Equipment" on page 25.

Selecting the Device Test Environment Setup

1 In the USB automated test application, select the **Device** test environment.

2 To do automatic testing, select **Matlab** as the **Test Method**. To do manual testing, select **Both** as the **Test Method**. See page 23 for more information.

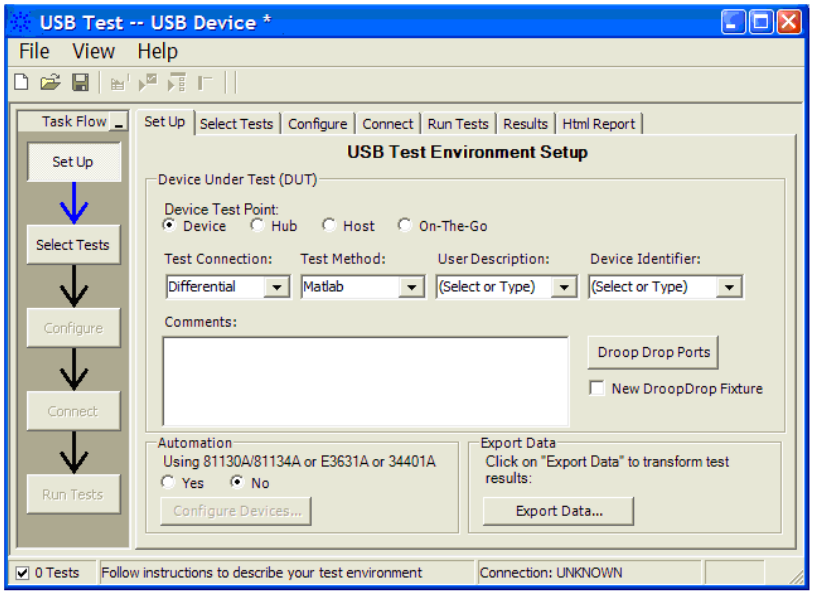

Device Hi-Speed Signal Quality Test

Equipment Used

Table 9 Equipment Used in Device Hi-Speed Signal Quality Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66507)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

Note: To do manual testing, choose **Both** for the **Test Method** option under the **Setup** tab. There will then be several manual tests to choose from under the **Select Test** tab.

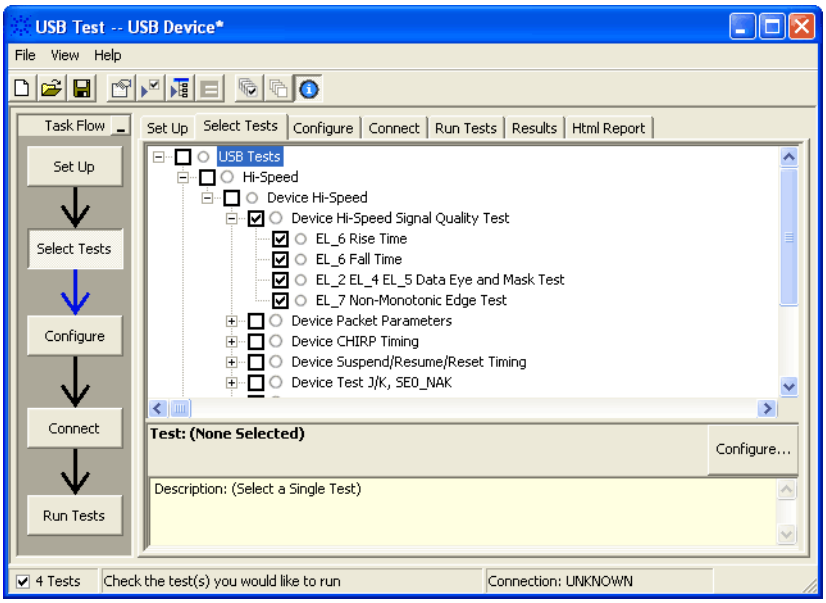

Configuring the Tests

Connecting the Equipment - Differential Connection

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed signal quality test fixture. Leave the TEST switch at the OFF position. Verify the green Power LED is lit and the yellow Test LED is not lit.
2. Connect the [TEST PORT] of the Device Hi-speed Signal Quality test fixture into the upstream facing port of the device under test, using the 4" USB cable.
3. Connect the [INIT PORT] of the test fixture to a Hi-speed capable port of the Test Bed Computer, using a USB cable.
4. Apply power to the device.
5. Attach the differential probe to D+/D- of TP2 on the test fixture, using the damped header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+.
6. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

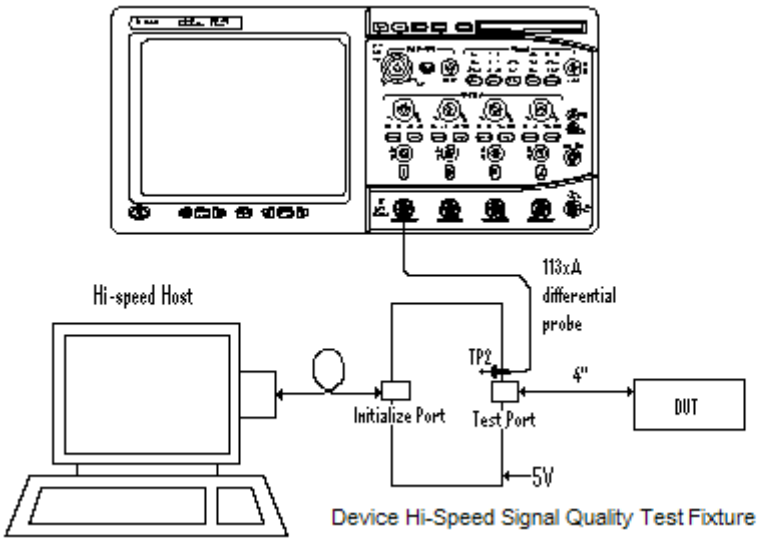

7. Check **I have completed these instructions**.

Connecting the Equipment - Single-Ended Connection

1 Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed signal quality test fixture. Leave the TEST switch at the OFF position. Verify the green Power LED is lit and the yellow Test LED is not lit.

2 Connect the [TEST PORT] of the Device Hi-speed Signal Quality test fixture into the upstream facing port of the device under test, using the 4" USB cable.

3 Connect the [INIT PORT] of the test fixture to a Hi-speed capable port of the Test Bed Computer, using the 5 meter USB cable.

4 Apply power to the device.

5 Attach the SMA cables to the SMA connectors D+ and D- on the test fixture.

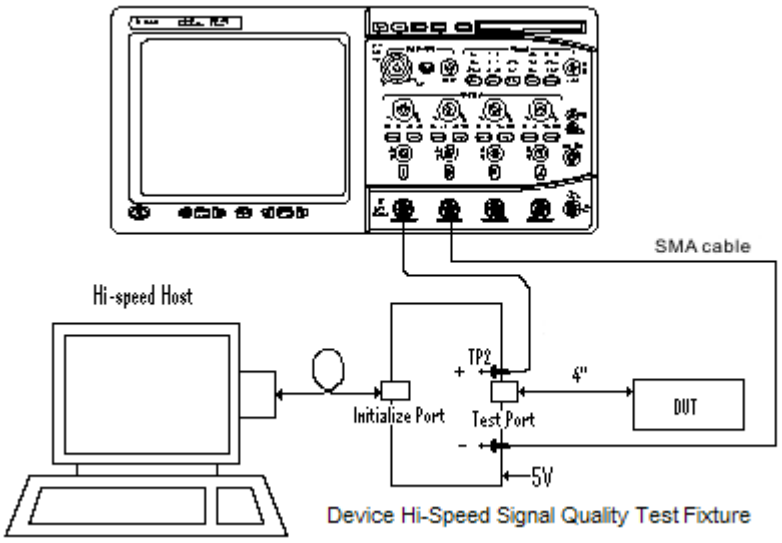

6 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer.

2 Select Device and click the [TEST] button to enter the Device Test menu.

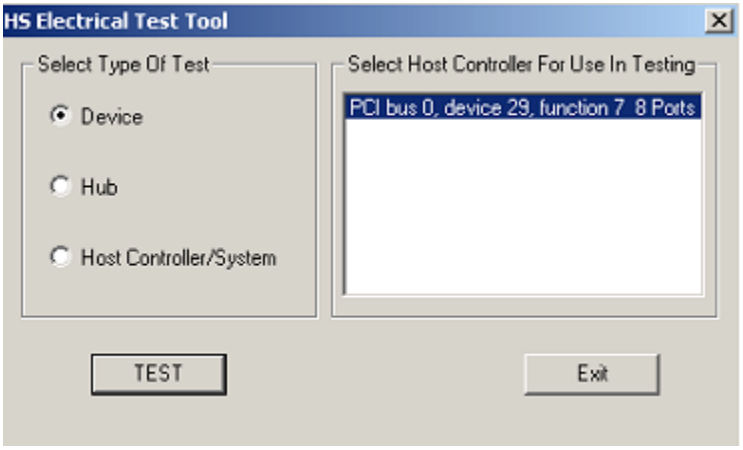

3 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 The device under test should be enumerated with the device's VID shown together with the root port in which it is connected.

2 Select **TEST_PACKET** from the Device Command drop down menu and click **[EXECUTE]**. This forces the device under test to continuously transmit test packets.

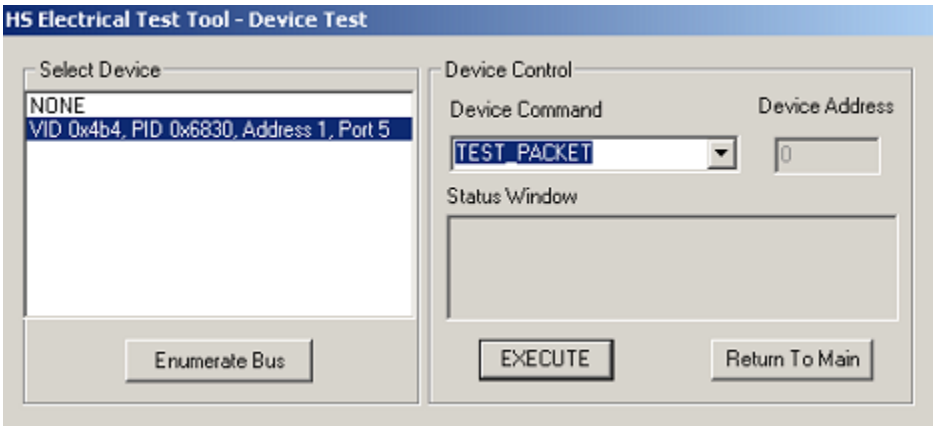

3 Place the Test Switch (S1) in the **TEST** position. Verify the yellow TEST LED is lit. You should see the transmitted test packet on the oscilloscope as below.

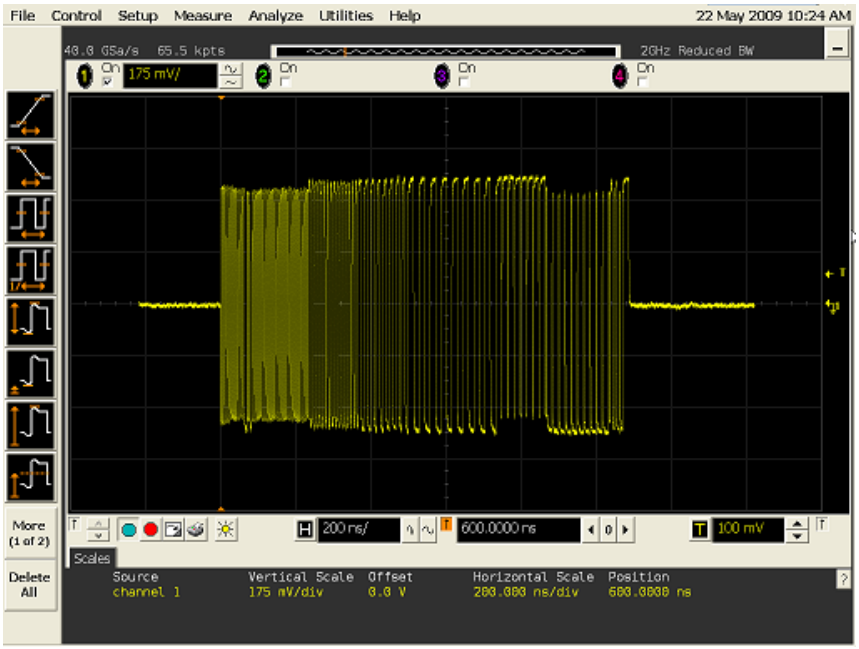

4 Click **OK** to close the Test Instructions dialog.

EL_6 Rise Time

EL_6 Fall Time

EL_2 EL_4 EL_5 Data Eye and Mask Test

After viewing the test results, click **OK** to close the Test Instructions dialog.

EL_7 Non-Monotonic Edge Test

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Device Packet Parameters

Equipment Used

Table 10 Equipment Used in Device Packet Parameters Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66507)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)

Selecting the Tests

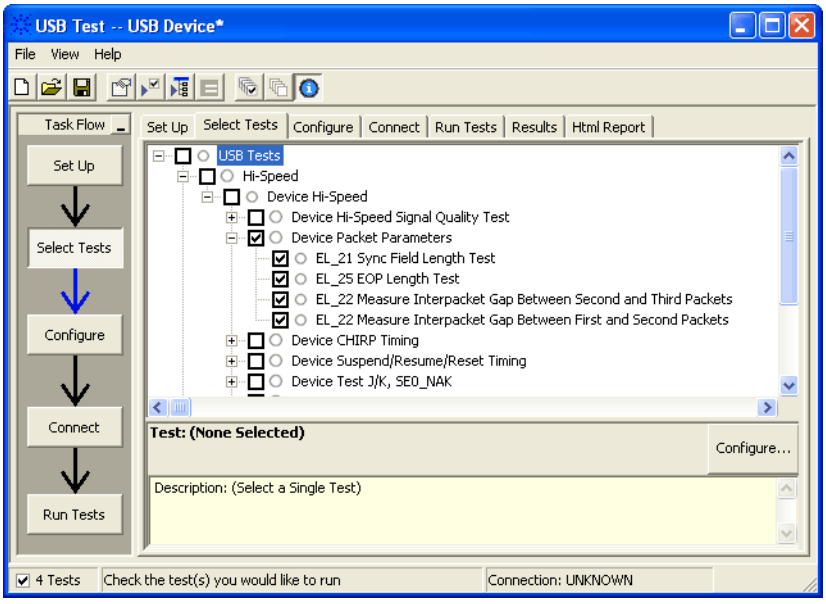

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Remove the 5V supply. Connect the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture ([INIT PORT]) into a high-speed capable port of the test bed, using a USB cable.
2. Connect the test fixture [TEST PORT] into B receptacle of the upstream facing port under test of the device, using the 4" USB cable. Apply power to the device.
3. Ensure that the test switch on the test fixture is in the OFF position, and the test LED is not lit.
4. Attach the Agilent 113xA differential probe to D+/D- of TP2 on the test fixture, using a damped header adapter (the damped header adapter is only needed if you are using the old test fixture).
5. If you are using the new fixture please terminate the SMA connectors with 50 Ohm terminators.

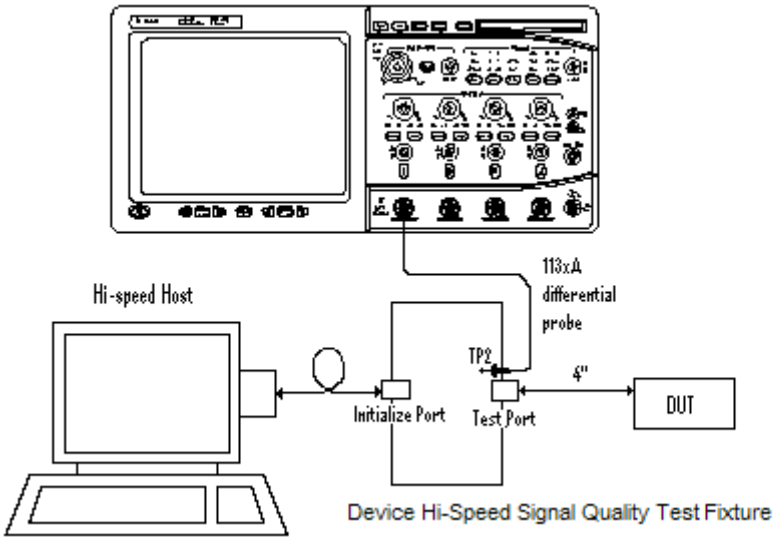

6. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Cycle the device power to restore the device to normal operation. On the Device Test Menu of the HS Electrical Tool, click **Enumerate Bus** once.

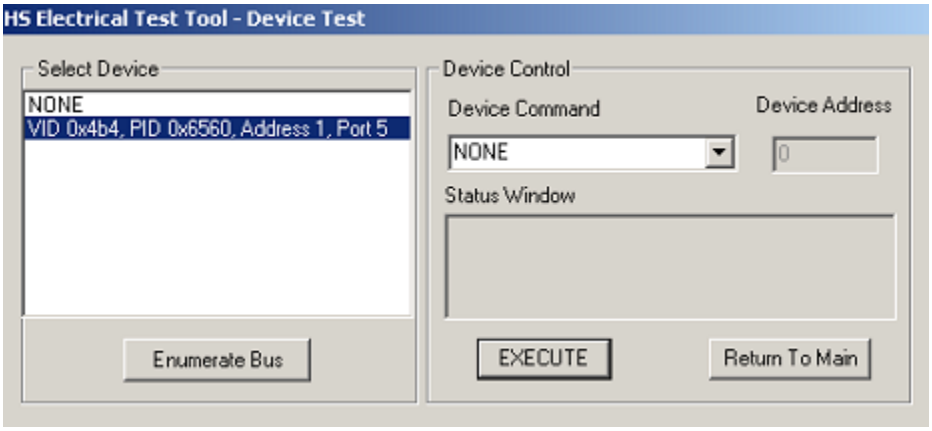

2 Using the oscilloscope, verify the SOFs (Start Of Frame) packets are being transmitted on the port under test. You may need to lower the trigger level to somewhat below 400 mV.

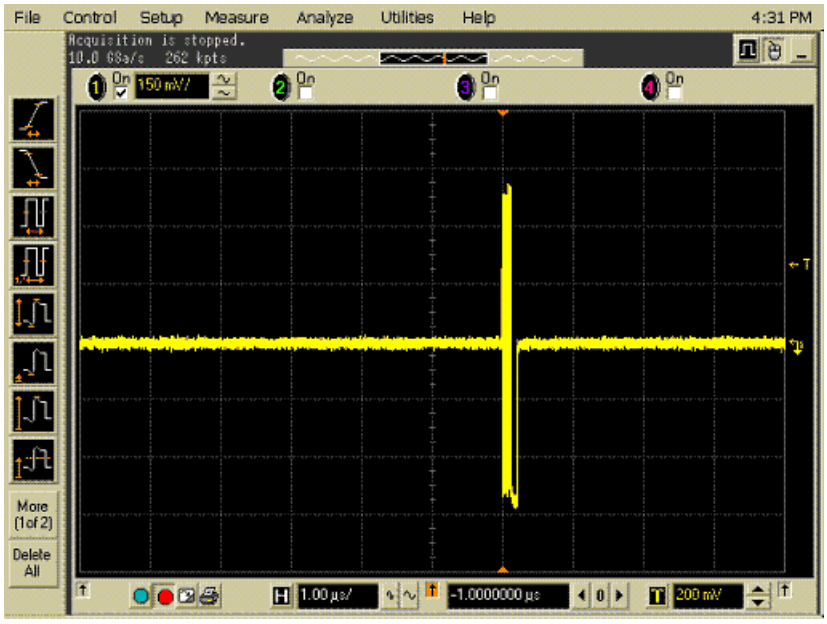

3 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 In the Device Test menu of the HS Electrical Test Tool, ensure that the hub under test is selected.

2 Select **SINGLE STEP SET FEATURE** from the Device Command window. Click **[EXECUTE]** once.

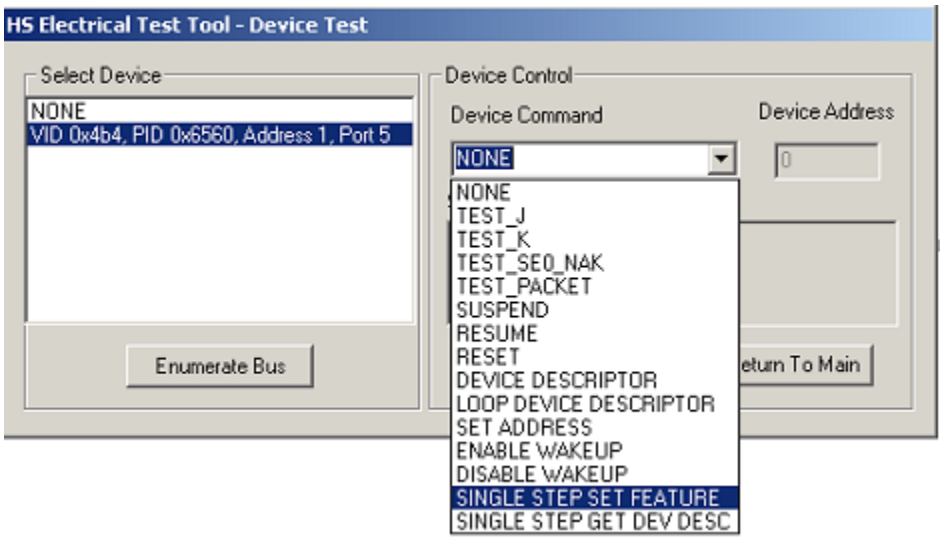

3 You should see the transmitted test packet on the oscilloscope as below.

4 Click **OK** to close the Test Instructions dialog.

EL_21 Sync Field Length Test

EL_25 EOP Length Test

EL_22 Measure Interpacket Gap Between Second and Third Packets

EL_22 Measure Interpacket Gap Between First and Second Packets

The USB automated test application will prompt you to perform these steps:

1 In the Device Test menu of the HS Electrical Test Tool, click **[STEP]** once again. This is the second step of the two-step Single Step Set Feature command.

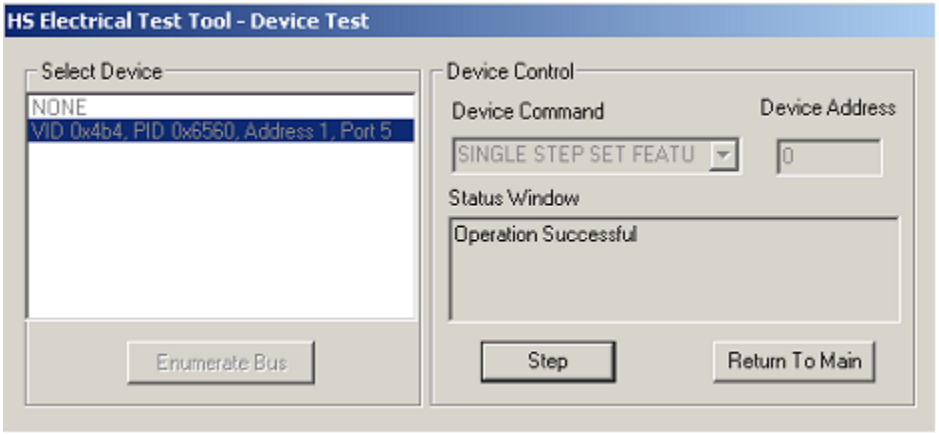

2 You should see the transmitted test packet on the oscilloscope as below.

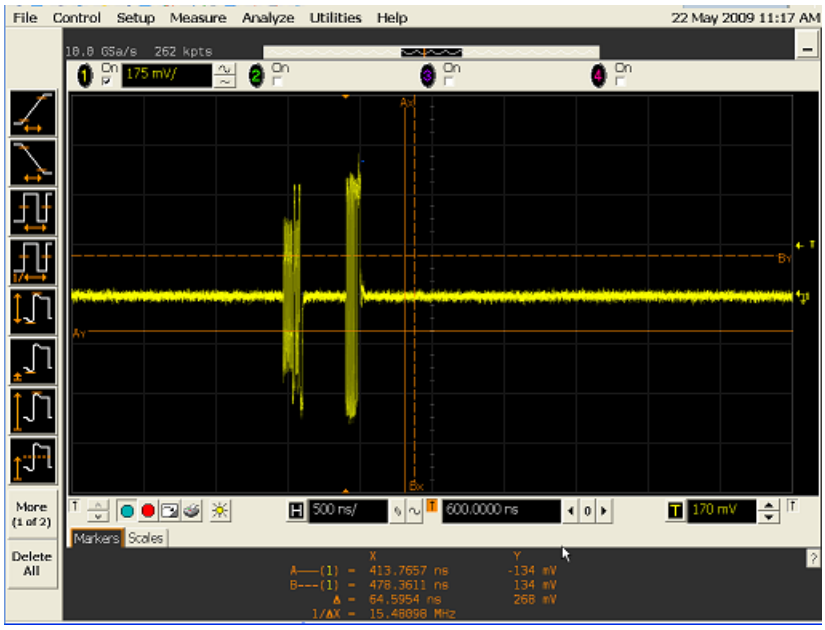

3 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Device CHIRP Timing

Equipment Used

Table 11 Equipment Used in Device CHIRP Timing Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

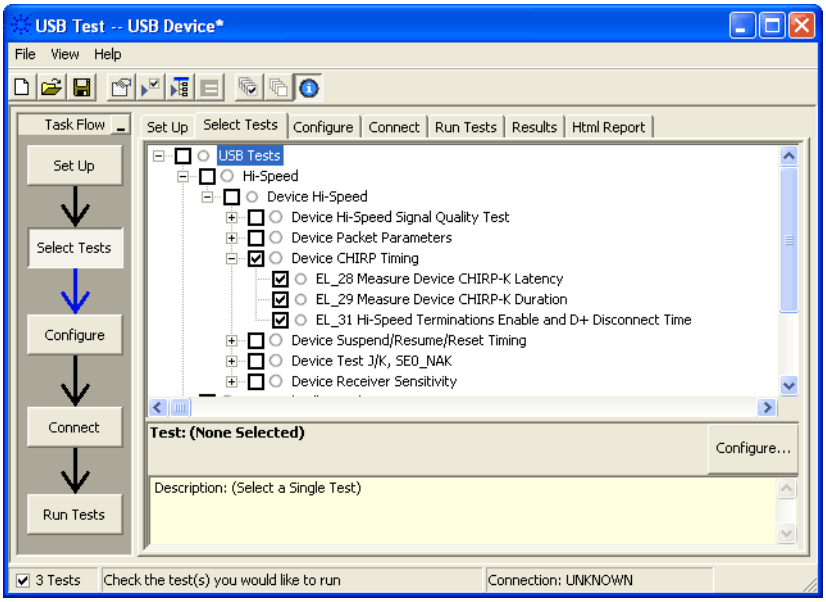

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture.

2 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2.

3 Connect both probe grounds to GND leads.

4 Connect the [INIT PORT] of the test fixture into the HS host controller port, using the 5-meter USB cable.

5 Connect the [TEST PORT] on the fixture to the upstream port of the device under test. Do not apply 5V to the test fixture.

6 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

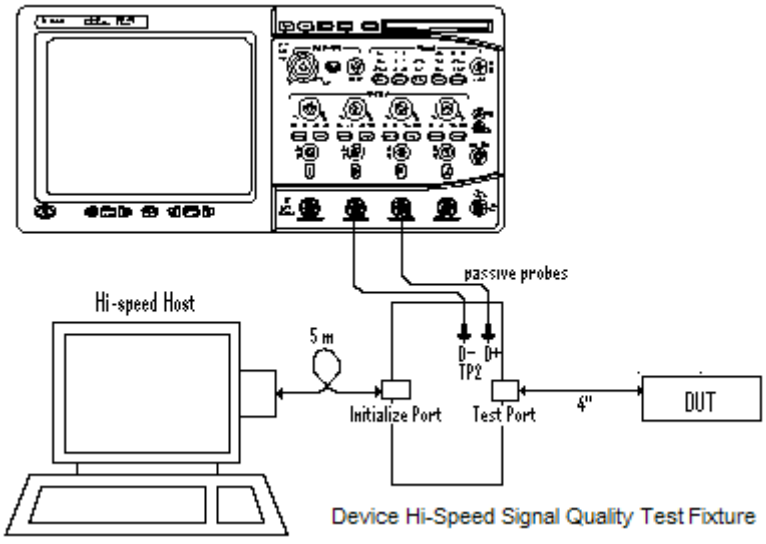

7 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 On the HS Electrical Test Tool software, click **[Enumerate Bus]** once. You should capture the CHIRP handshake as in the below figure.

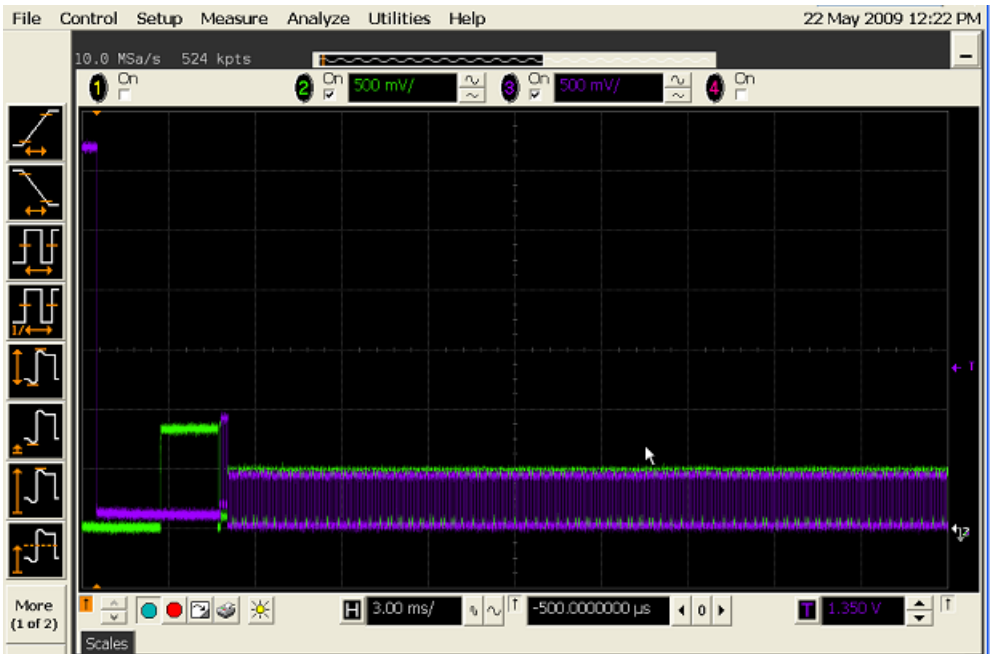

2 Click **OK** to close the Test Instructions dialog.

EL_28 Measure Device CHIRP-K Latency

EL_29 Measure Device CHIRP-K Duration

EL_31 Hi-Speed Terminations Enable and D+ Disconnect Time

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Device Suspend/Resume/Reset Timing

Equipment Used

Table 12 Equipment Used in Device Suspend/Resume/Reset Timing Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

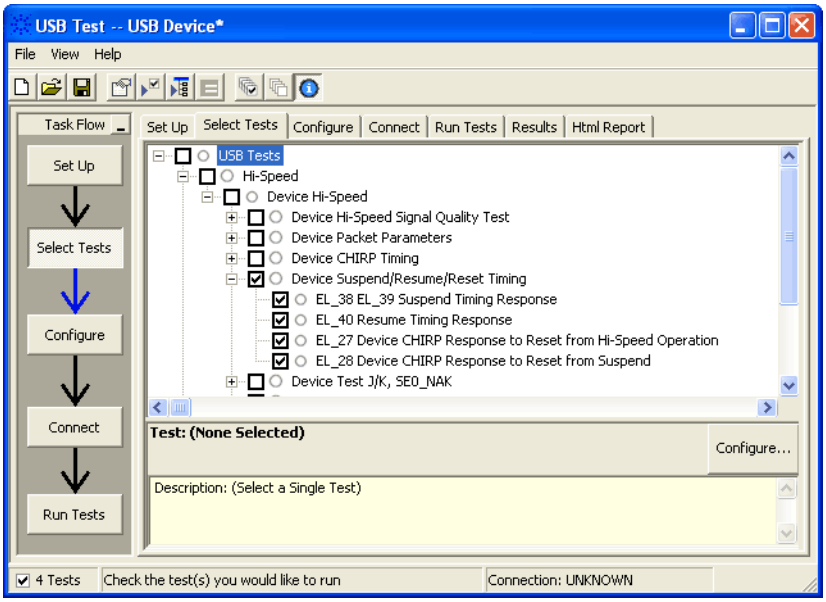

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture.
2. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2. D+ on TP2 is the pin closest to the USB connector.
3. Connect both probe grounds to leads COM (leads TP5 on the old fixture).
4. Connect the [INIT PORT] of the test fixture into the HS host controller port, using the 5-meter USB cable.
5. Connect the [TEST PORT] on the fixture to the upstream port of the device under test. Do not apply 5V to the test fixture.
6. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

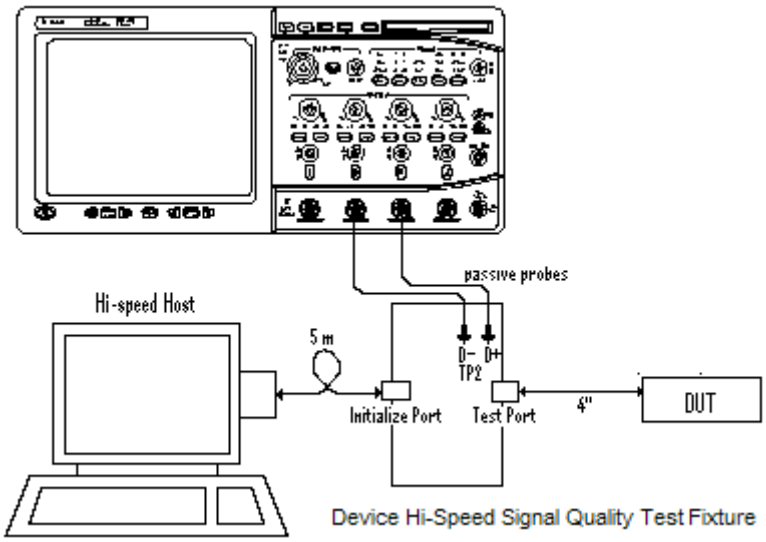

7. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_38 EL_39 Suspend Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once.

2 Select **SUSPEND** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into suspend. The captured transition should be as in the figure below.

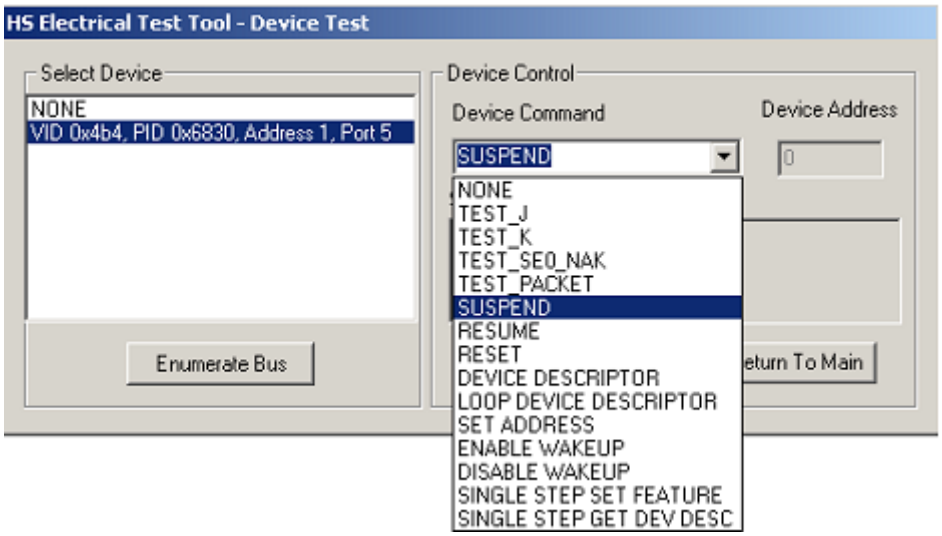

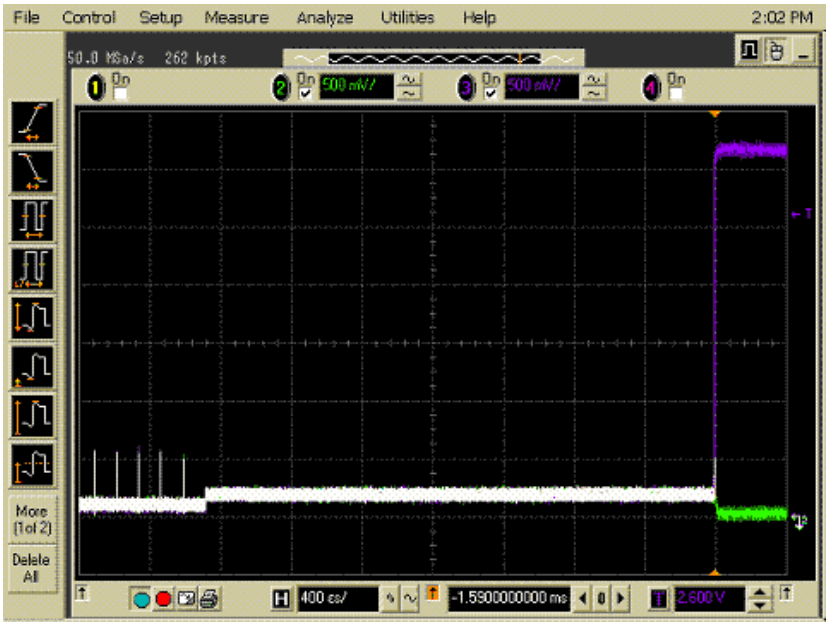

3 Click **OK** to close the Test Instructions dialog.

EL_40 Resume Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool, select **RESUME** from the Device Command drop down menu. Click **[EXECUTE]** once to resume the hub from suspend. The captured transition should be as in the figure below.

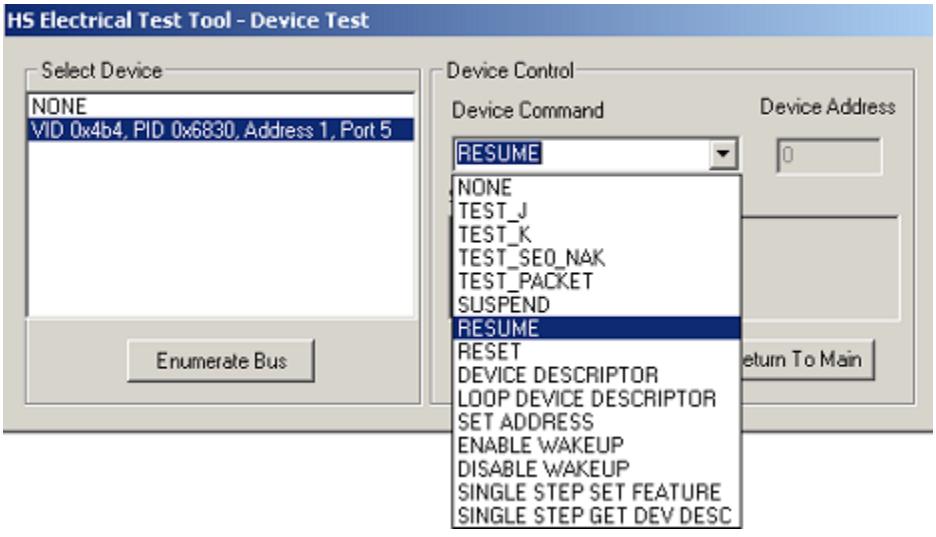

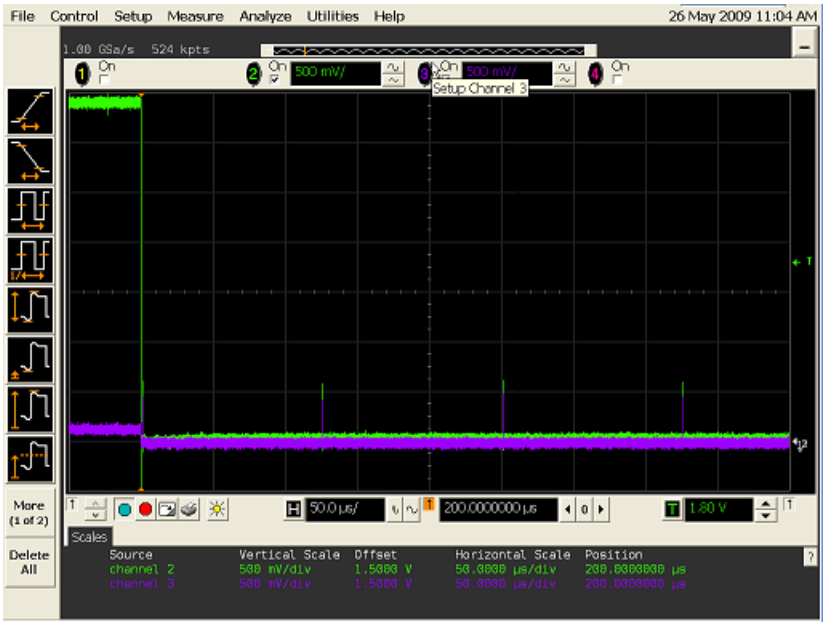
File Control Setup Measure Analyze Utilities Help
26 May 2009 11:04 AM
1.00 GSa/s 524 kpts
500 mV/
Setup Channel 3
More (1 of 2)
Delete All
Scales
Source Vertical Scale Offset Horizontal Scale Position
channel 2 500 mV/div 1.5000 V 50.0000 µs/div 200.0000000 µs
channel 3 500 mV/div 1.5000 V 50.0000 µs/div 200.0000000 µs

2 Click **OK** to close the Test Instructions dialog.

EL_27 Device CHIRP Response to Reset from Hi-Speed Operation

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool, select **RESET** from the Device Command drop down menu. Click **[EXECUTE]** once to reset the device operating in high speed. The captured transition should be as in the figure below.

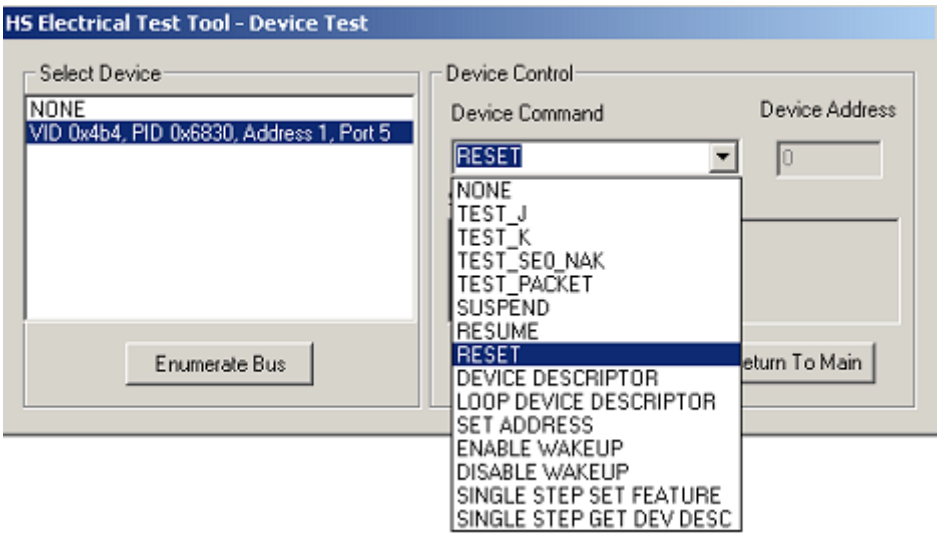

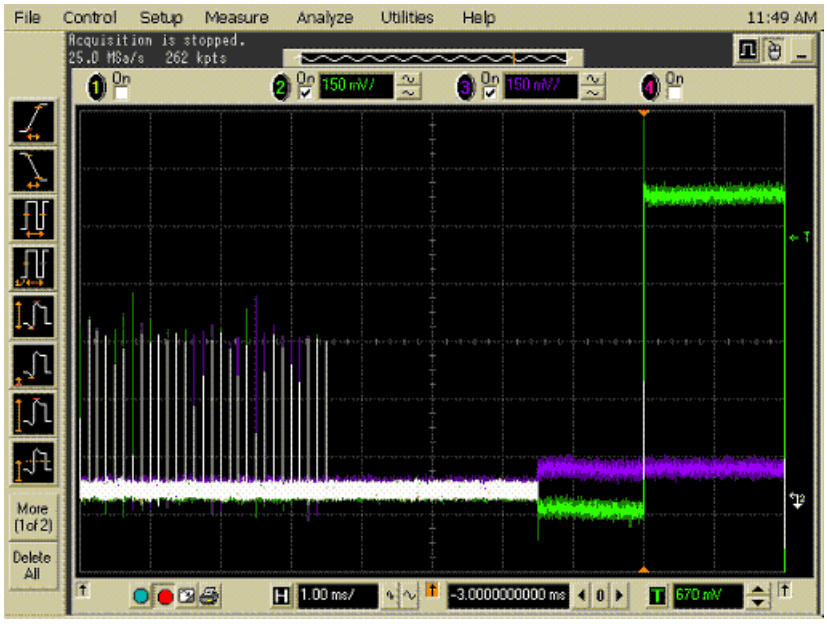

2 Click **OK** to close the Test Instructions dialog.

EL_28 Device CHIRP Response to Reset from Suspend

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool software, select **SUSPEND** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into suspend.

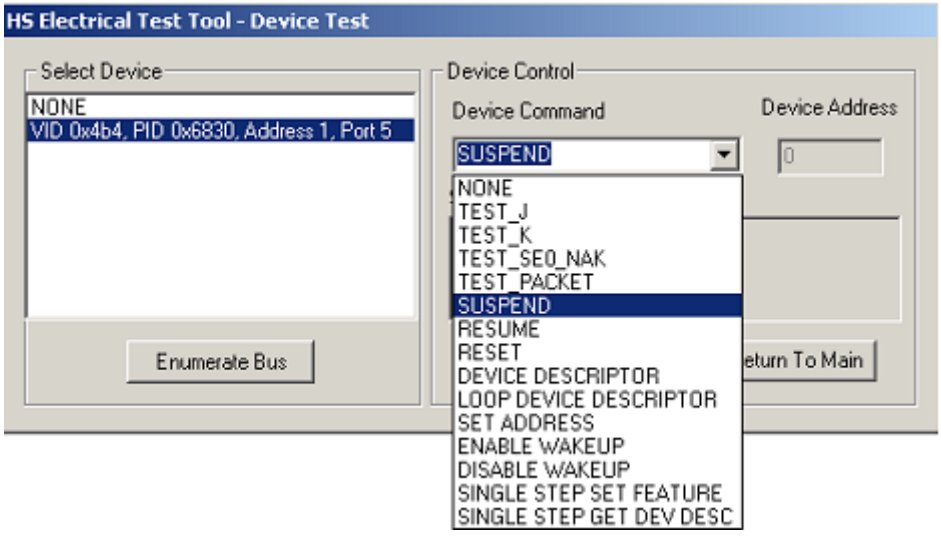

2 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool, select **RESET** from the Device Command drop down menu. Click **[EXECUTE]** once to reset the device operating in high speed. The captured transition should be as in the figure below.

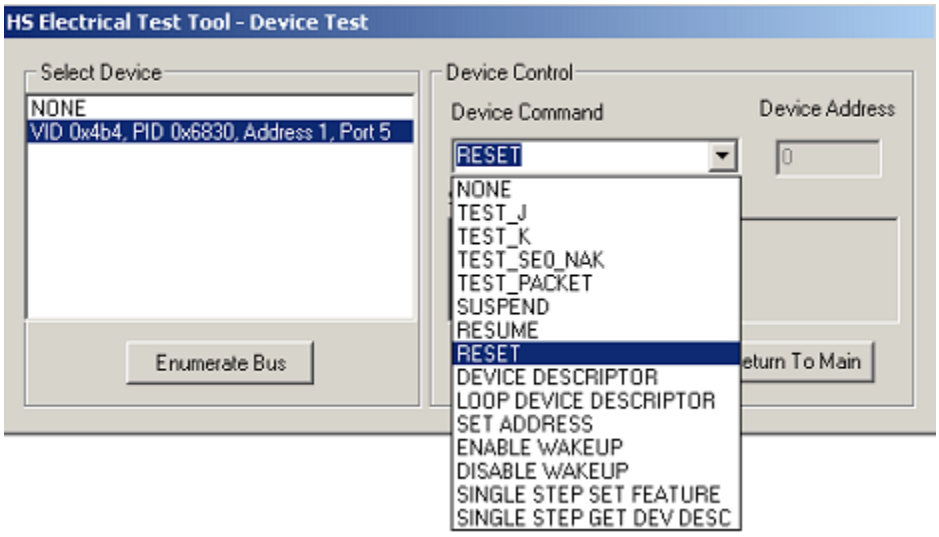

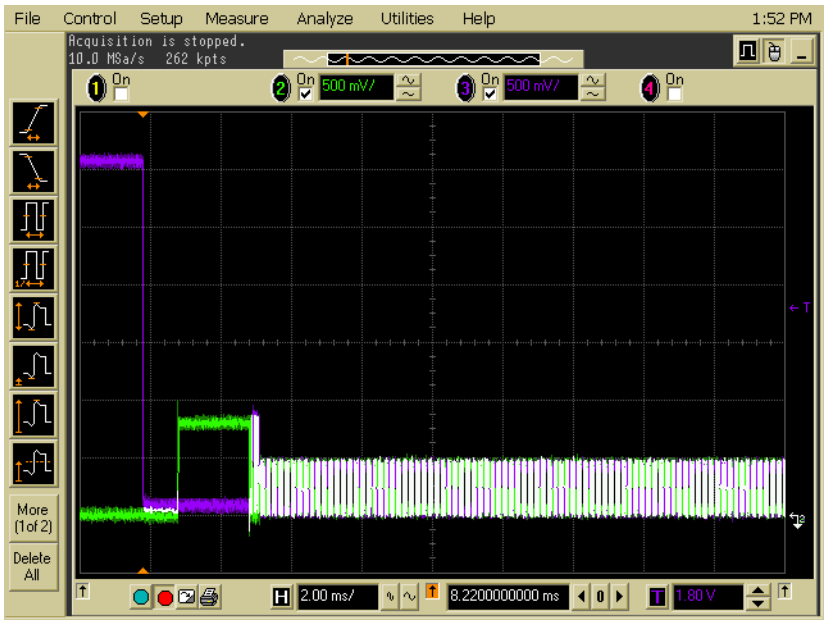

2 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Device Test J/K, SE0_NAK

Equipment Used

Table 13 Equipment Used in Device Test J/K, SE0_NAK Tests

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5V power supply	Agilent 0950-2546 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

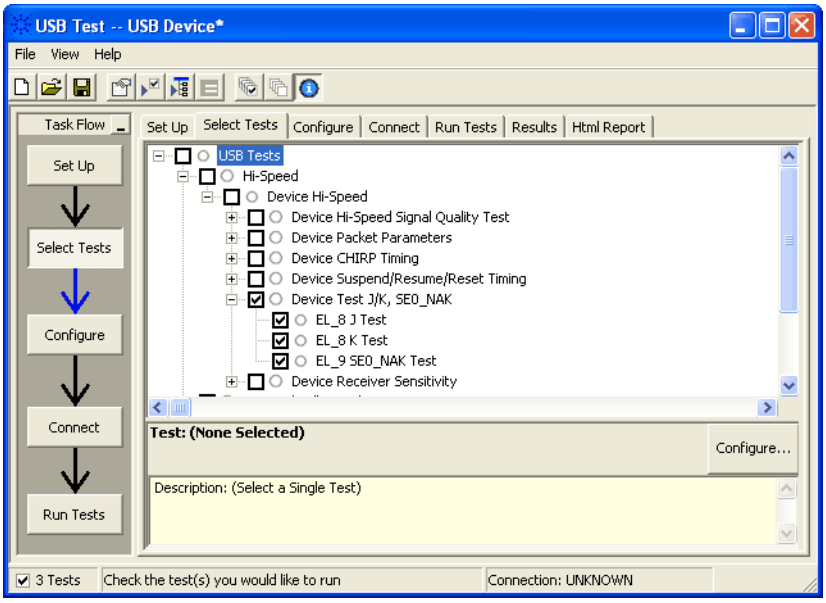

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device High-Speed Signal Quality test fixture.
2. Place the switch in the test switch to **OFF** position. Verify the green Power LED is lit, and the yellow Test LED is off.
3. Connect the [TEST PORT] of the test fixture into the upstream facing port of the device under test, using the 4" USB cable.
4. Connect the [INIT PORT] of the test fixture to a port of the Test Bed Computer, using the 5 meter cable.

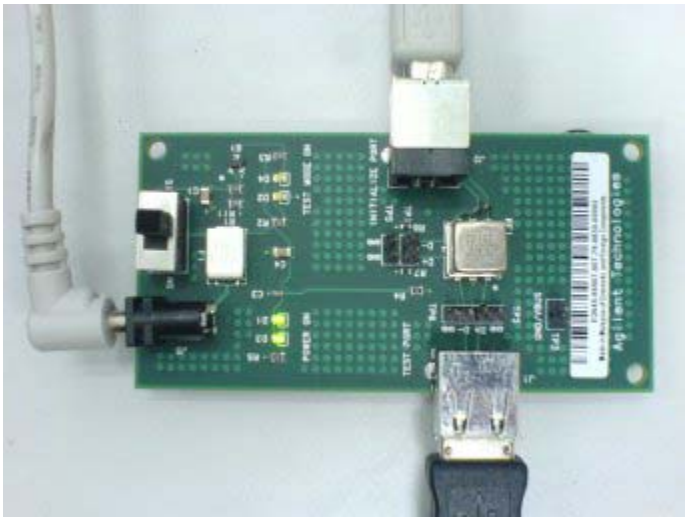

5. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_8 J Test

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_J** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into TEST_J test mode.

3 Switch the test fixture into the **TEST** position.

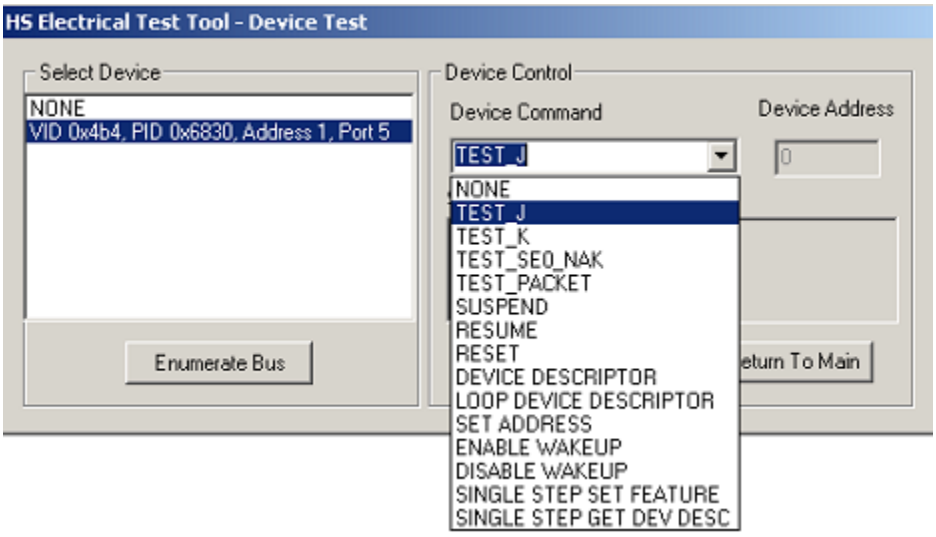

4 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

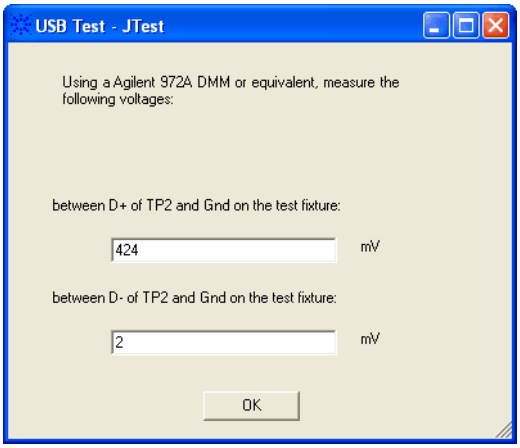
USB Test - JTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
424
mV
between D- of TP2 and Gnd on the test fixture:
2
mV
OK

EL_8 K Test

The USB automated test application will prompt you to perform these steps:

1 Return the Test switch of the test fixture to the **NORMAL** position.

2 Cycle the device power to restore the device to normal operation. On the Device Test Menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

3 Select **TEST_K** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into TEST_K test mode.

4 Switch the test fixture into the **TEST** position.

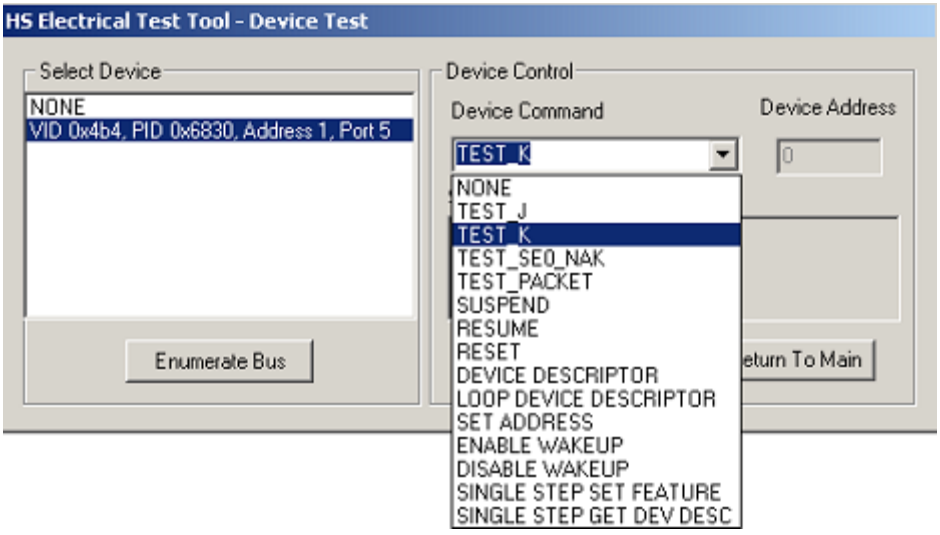

5 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

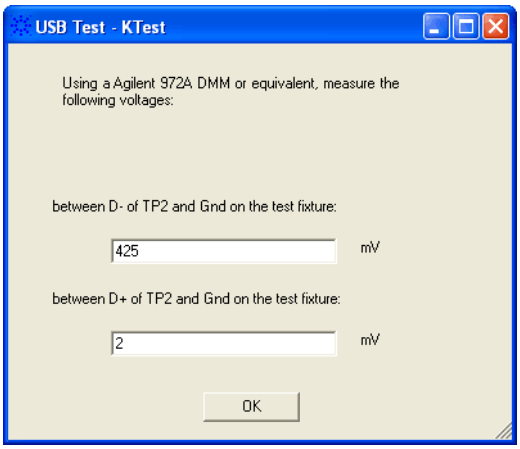
USB Test - KTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D- of TP2 and Gnd on the test fixture:
425
mV
between D+ of TP2 and Gnd on the test fixture:
2
mV
OK

EL_9 SE0_NAK Test

The USB automated test application will prompt you to perform these steps:

1. Return the Test switch of the test fixture to the **NORMAL** position.
2. Cycle the device power to restore the device to normal operation. On the Device Test Menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.
3. Select **TEST_SE0_NAK** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into TEST_SE0_NAK test mode.
4. Switch the test fixture into the **TEST** position.

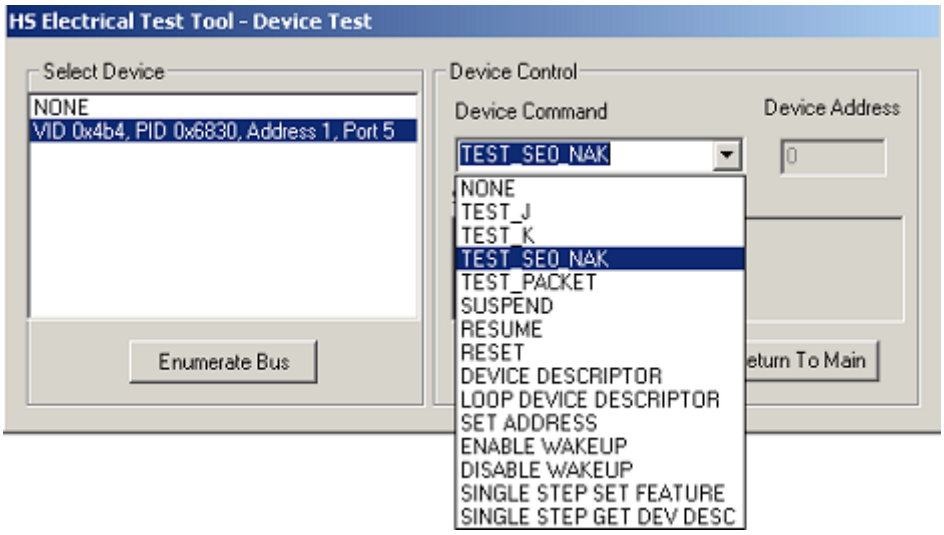

5 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

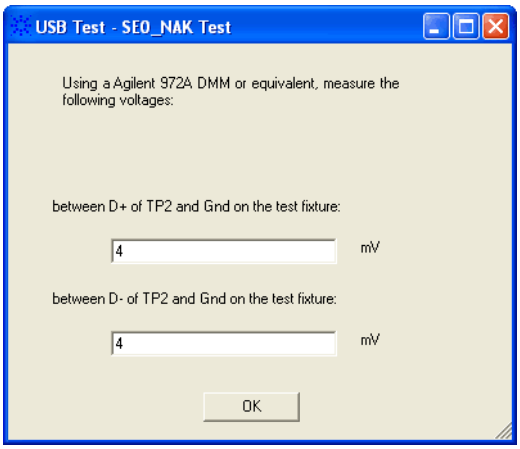
USB Test - SE0_NAK Test
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
4
mV
between D- of TP2 and Gnd on the test fixture:
4
mV
OK

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Device Receiver Sensitivity

Equipment Used

Table 14 Equipment Used in Device Receiver Sensitivity Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66503)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Receiver Sensitivity test fixture and 4" USB cable	Agilent E2649-66403 (old fixture P/N E2645-66503)
1	5V power supply	Agilent 0950-2546 or equivalent
1	Digital signal generator	Agilent 81130A (or 81134A with two 15433B transition time converters connected to the pulse generator outputs)
1	USB/GPIB interface	Agilent 82357A
2	6 dB attenuators	Agilent 8493C
2	50 ohm coaxial cable with male SMA connectors at both ends	Agilent 8120-4948 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

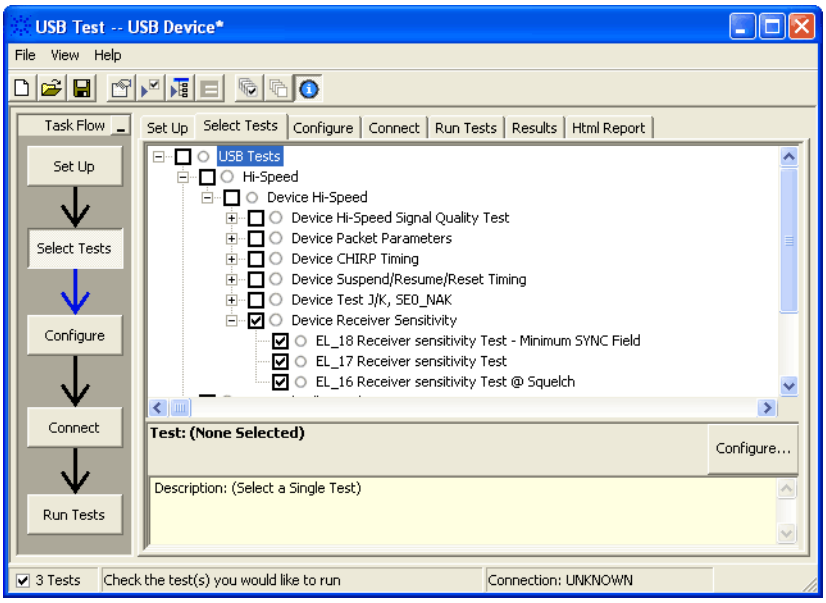

Configuring the Tests

If the pulse generator's SICL address is different from the default, make sure you set the 81134A/81130A Instrument Address configuration option to the pulse generator's SICL address.

See also "Configuring the 81134A pulse generator using the 82357A GPIB-USB converter" on page 98.

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

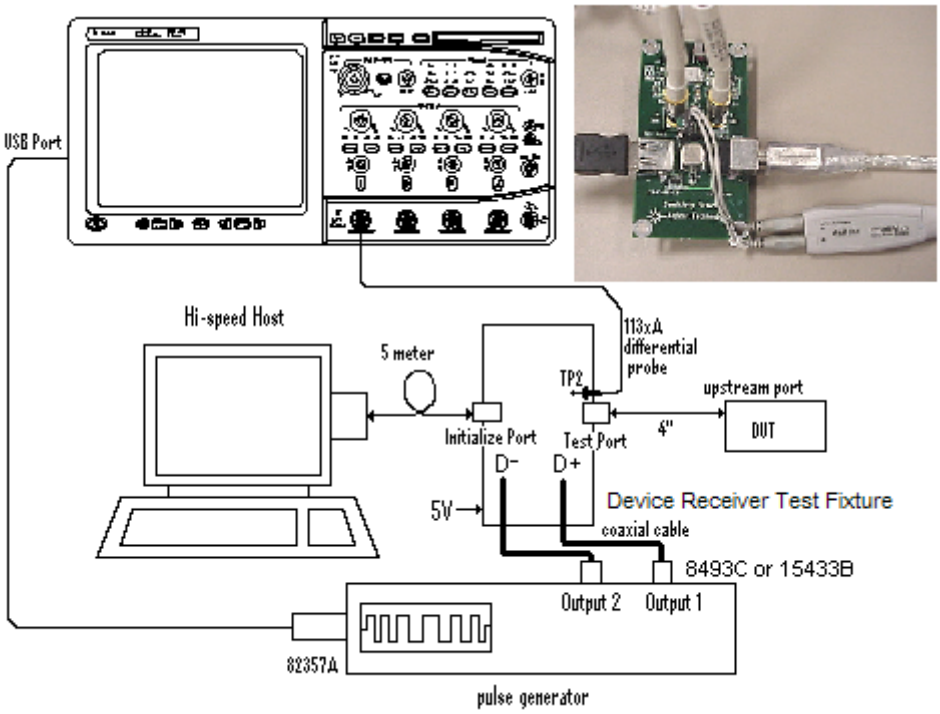

1 Attach the 5V power supply to the E2649-66403 (E2645-66503 if you are using the old fixture) Device Receiver test fixture (J5).

   a Verify the green Power LED is lit.

   b Leave the TEST switch at the OFF position (S1).

   c The yellow LED should be off.

2 Connect the [INIT PORT] of the fixture to a Hi-Speed port on the Test Bed Computer, using the 5 meter USB cable.

3 Connect the [TEST PORT] of the fixture to the device under test, using the 4" USB cable.

4 Connect the Agilent 113xA differential probe to the test fixture at TP2, using the 01131-68703 header adapter (the damped header adapter is only needed if you are using the old test fixture).

5 Connect the 81130A or 81134A pulse generator to the oscilloscope using the 82357A USB/GPIB Interface.

   a If you choose to use the Agilent 81130A Pulse/Pattern Generator, connect the 8493C 6dB attenuators to OUTPUT1 and OUTPUT2 of Agilent 81130A Pulse/Pattern Generator.

   b If you choose to use the Agilent 81134A Pulse/Pattern Generator, connect the 15433B Transition Time Converters to OUTPUT1 and OUTPUT2 of Agilent 81134A Pulse/Pattern Generator. Agilent 15433B Transition Time Converters are recommended, to reduce the output edge speed of the 81134A to speed close to what the 81130A provides.

6 Connect OUTPUT1 to SMA1 (D+) of the E2649-66403 Device Receiver Sensitivity test fixture using the 8120-4948 SMA cables.

7 Connect OUTPUT2 to SMA2 (D-) of the E2649-66403 Device Receiver Sensitivity test fixture using the 8120-4948 SMA cables.

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Cycle the device power to restore the device to normal operation. On the Device Test Menu of the HS Electrical Test Tool, click **[Enumerate Bus]** button once to force enumeration of the newly connected device.

2 Select **TEST_SE0_NAK** from the Device Command drop down menu. Click **[EXECUTE]** once to place the device into TEST_SE0_NAK test mode.

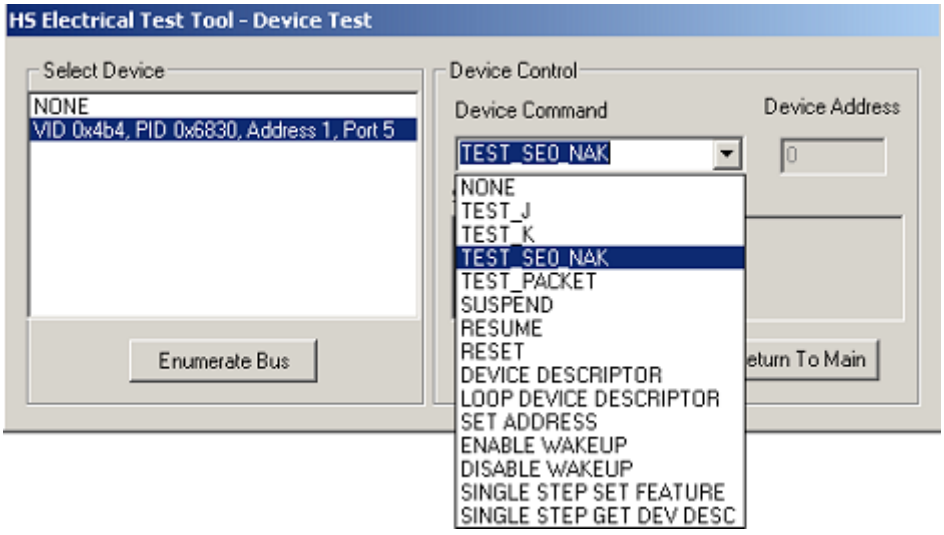

3 Place the test fixture Test Switch (S1) into the **TEST** position. This switches in the data generator in place of the host controller. The data generator emulates the "IN" packets from the host controller.

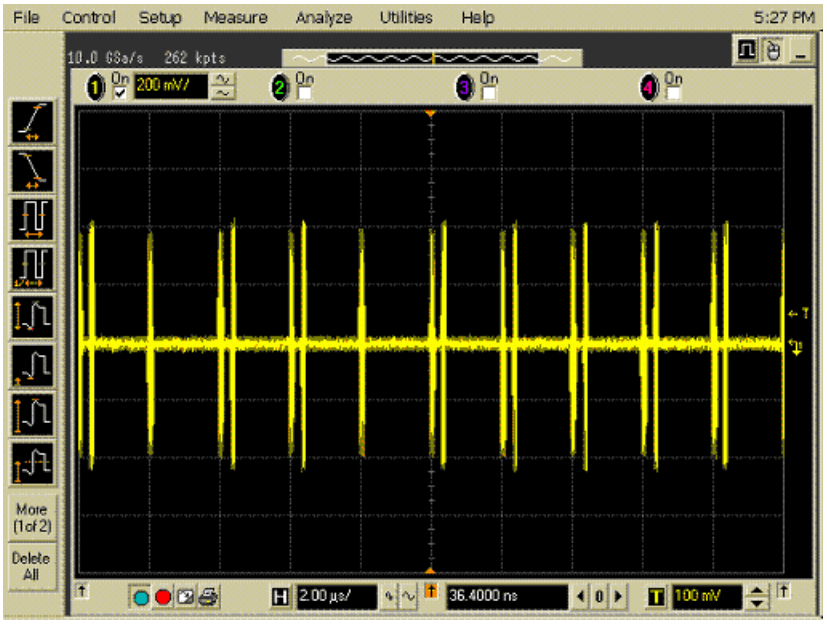

4 Click **OK** to close the Test Instructions dialog.

EL_18 Receiver sensitivity Test - Minimum SYNC Field

EL_17 Receiver sensitivity Test

EL_16 Receiver sensitivity Test @ Squelch

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

4 Hub Hi-Speed Tests

Hub Hi-Speed Signal Quality Test - Upstream Facing Ports 73
Hub Hi-Speed Signal Quality Test - Downstream Facing Ports 78
Hub Jitter Test - Downstream Facing Ports 82
Hub Disconnect Detect 86
Hub Packet Parameters - Upstream Facing Port 90
Hub Receiver Sensitivity - Upstream Facing Port 97
Hub Repeater Test - Downstream Facing Port 106
Hub Repeater Test - Upstream Facing Port 111
Hub CHIRP Timing - Upstream Facing Port 117
Hub Suspend/Resume/Reset Timing - Upstream Facing Port 120
Hub Test J/K, SE0_NAK - Upstream Facing Port 128
Hub Test J/K, SE0_NAK - Downstream Facing Port 134

NOTE

To give the automated test software more flexibility in making corner case measurements (and improve test performance), the oscilloscope's memory upgrade option is recommended (Option 001 when ordered with the oscilloscope, or after purchase: E2680A for the 5485xA Series oscilloscopes, or N5404A for the 80000 and 90000A Series oscilloscopes).

Also, to reduce the bandwidth of the oscilloscope to just what is required by the USB-IF (2 GHz for USB 2.0)—this can greatly reduce system measurement noise, allowing the maximum measurement margin—the enhanced bandwidth software option is recommended for the Agilent 54855A oscilloscope (Option 008), and the noise reduction software option is recommended for the 80000 and 90000A Series oscilloscopes (Option 005 when ordered with the oscilloscope or N5403A after purchase).

In addition to the high-speed electrical tests prescribed in this chapter, the hub under test must also pass the following legacy electrical compliance tests applicable to the high-speed hub:

- Full speed signal quality – Upstream and downstream facing ports.
- Low speed signal quality – Downstream facing ports only.
- Inrush current – Upstream facing port only.

- Drop/Droop – Downstream facing ports.
- Back-voltage.

Before Running These Tests

If you haven't already performed the initial equipment set up, see "Setting Up the Equipment" on page 25.

Selecting the Hub Test Environment Setup

1 In the USB automated test application, select the **Hub** test environment.

2 To do automatic testing, select **Matlab** as the **Test Method**. To do manual testing, select **Both** as the **Test Method**. See page 23 for more information.

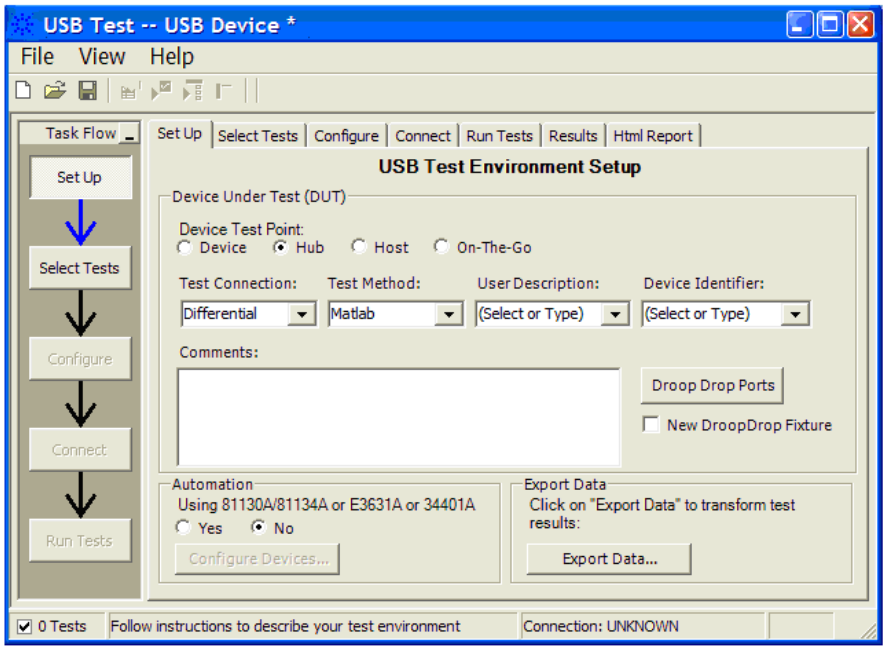

Hub Hi-Speed Signal Quality Test - Upstream Facing Ports

Equipment Used

Table 15 Equipment Used in Hub Hi-Speed Signal Quality Test - Upstream Facing Ports

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66507)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

Note: To do manual testing, choose **Both** for the **Test Method** option under the **Setup** tab. There will then be several manual tests to choose from under the **Select Test** tab.

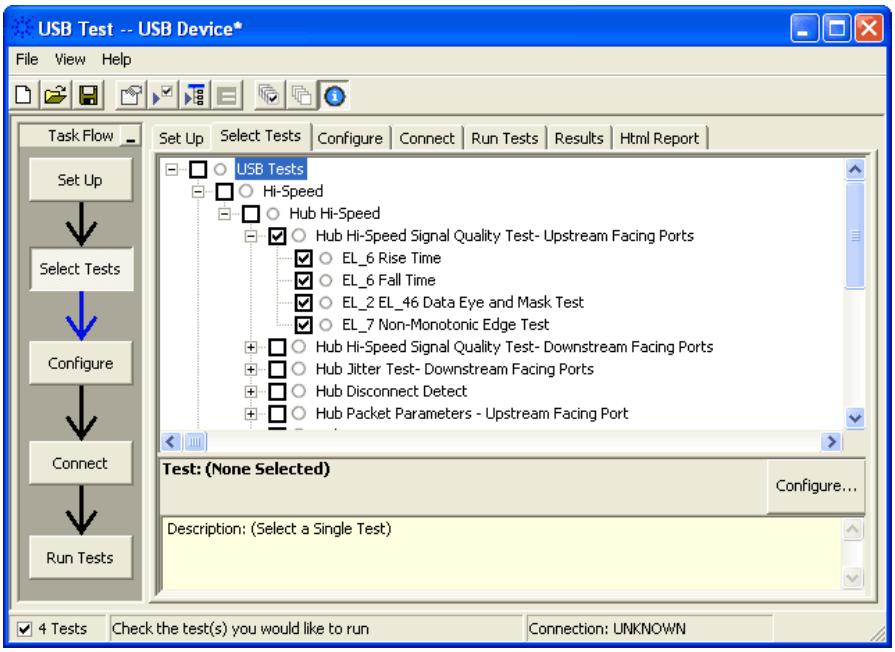

Configuring the Tests

Connecting the Equipment - Differential Connection

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture. Leave the TEST switch at the **OFF** position. Verify green Power LED is lit, and yellow test LED is off.
2. Connect the [TEST PORT] of the test fixture into the upstream facing port of the hub under test, using the 4" USB cable.
3. Connect the [INIT PORT] of the test fixture to a hi-speed port of the Test Bed Computer. Apply power to the hub.
4. Attach the Agilent 113xA differential probe to D+/D- of TP2 on the test fixture, using the header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+ on the fixture.
5. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

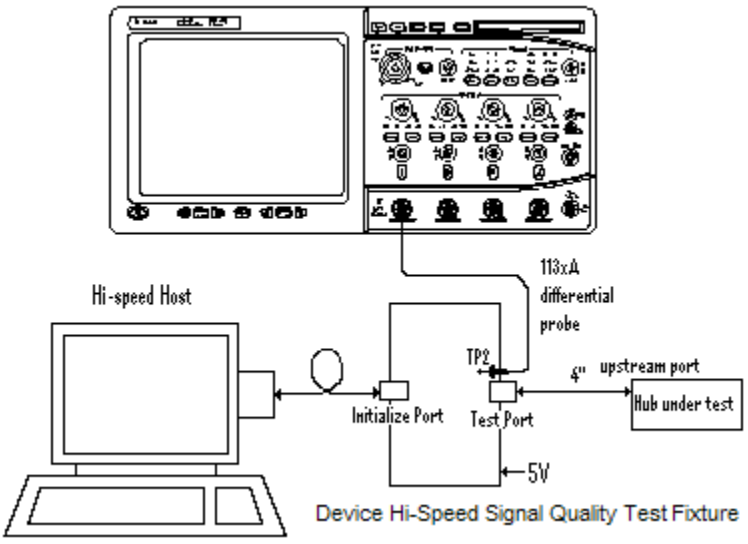

6. Check **I have completed these instructions**.

Connecting the Equipment - Single-Ended Connection.

1. Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed signal quality test

fixture. Leave the TEST switch at the OFF position. Verify the green Power LED is lit and the yellow Test LED is not lit.

2 Connect the [TEST PORT] of the Device Hi-speed Signal Quality test fixture into the upstream facing port of the device under test, using the 4" USB cable.

3 Connect the [INIT PORT] of the test fixture to a Hi-speed capable port of the Test Bed Computer, using the 5 meter USB cable.

4 Apply power to the device.

5 Attach the SMA cables to the SMA connectors D+ and D- of TP2 on the test fixture.

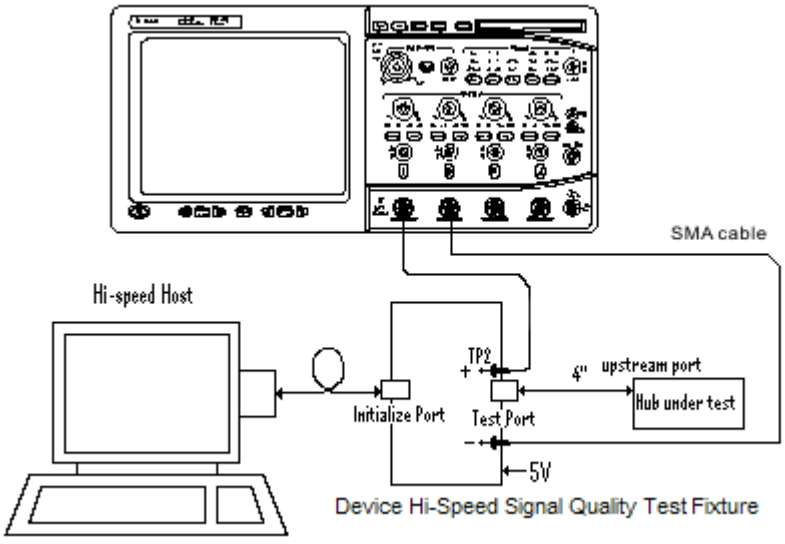

6 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer. Select **Hub** and click the **[TEST]** button to enter the Hub Test menu.

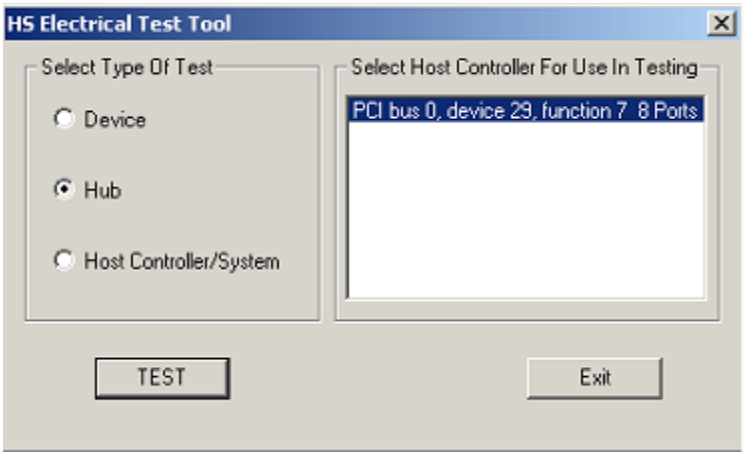

2 The hub under test should be enumerated with the hub's VID shown together with the USB address. Select **[TEST_PACKET]** from the Hub Command drop down menu and click **[EXECUTE]**.

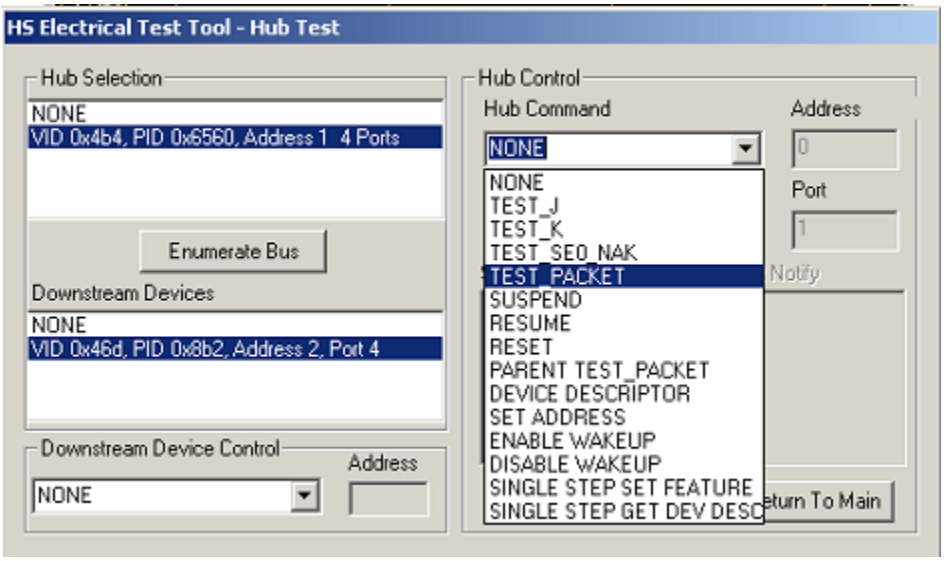

3 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 Place the Test Switch (S1) of the test fixture in the **TEST** position. Verify the yellow TEST LED is lit. You should see the transmitted test packet on the oscilloscope as below.

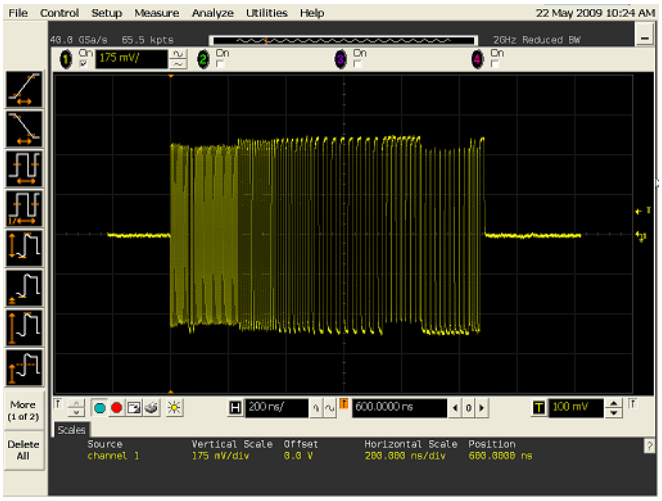

2 Click **OK** to close the Test Instructions dialog.

EL_6 Rise Time

EL_6 Fall Time

EL_2 EL_46 Data Eye and Mask Test

After viewing the test results, click **OK** to close the Test Instructions dialog.

EL_7 Non-Monotonic Edge Test

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Hi-Speed Signal Quality Test - Downstream Facing Ports

Equipment Used

Table 16 Equipment Used in Hub Hi-Speed Signal Quality Test - Downstream Facing Ports

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66508)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (olf fixture P/N E2645-66508)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

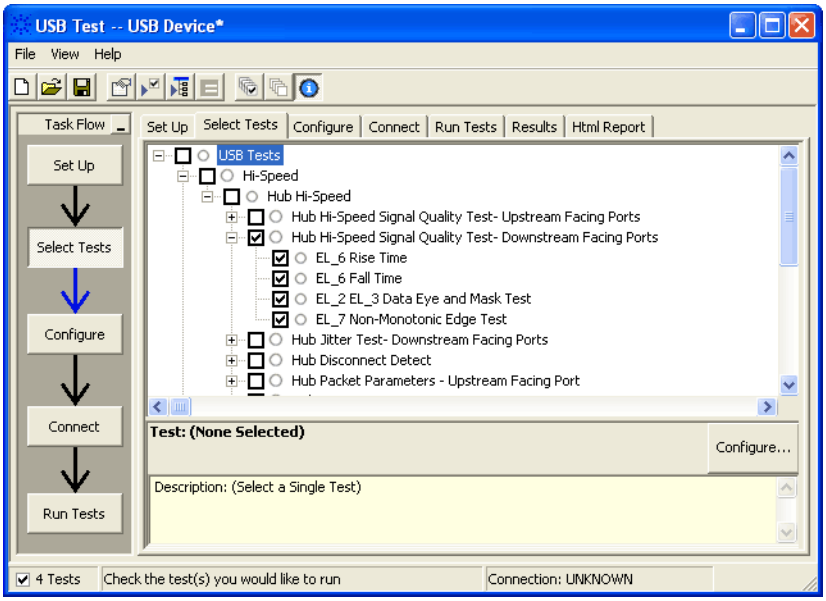

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Attach the 5V power supply to J5 of the E2649-66402 (E2545-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture. Set the Test switch to the TEST position. Verify green Power LED and yellow test LED are both lit.

2 Attach the Agilent 113xA differential probe to TP2 of the test fixture, using the header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+ on the fixture, located nearest to the USB connector.

3 Connect the upstream port of the hub to a high-speed root port of the test bed computer.

4 Connect the [TEST PORT] of the test fixture into the down stream facing port under the test of the hub. Apply power to the hub.

5 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

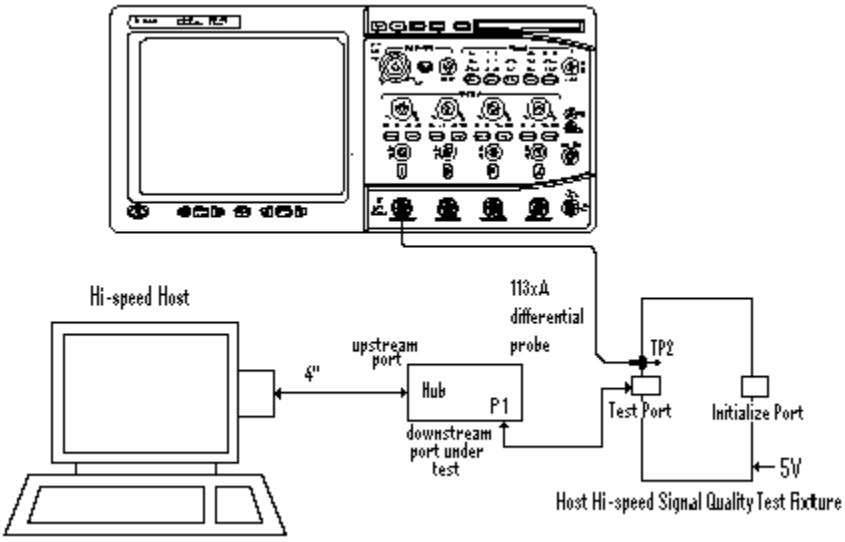

6 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click the **[Enumerate Bus]** button once. The hub under test should be enumerated with the hub's VID shown together with the USB address.

2 Select **TEST_PACKET** from the Port Control drop down menu.

3 Enter the port number of the hub port being tested and click **[EXECUTE]**.

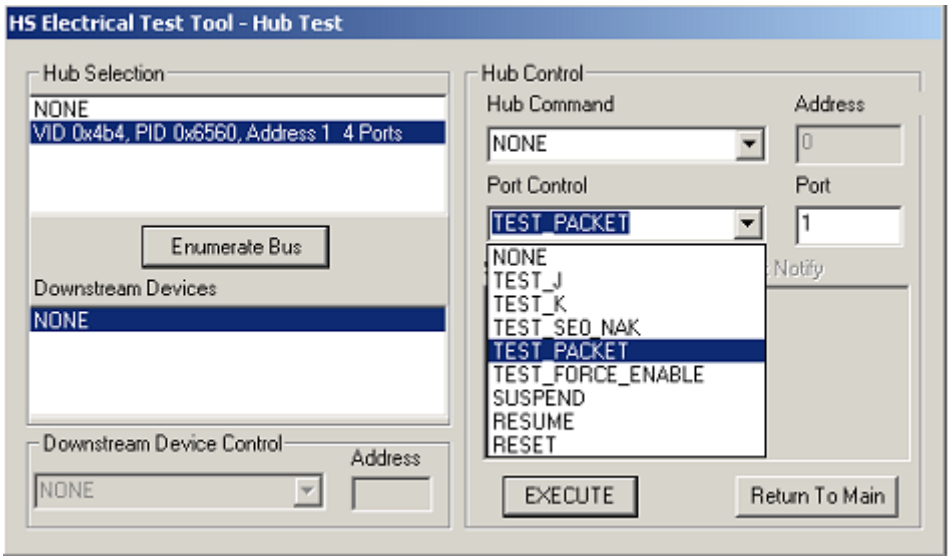

4 Click **OK** to close the Test Instructions dialog.

EL_6 Rise Time

EL_6 Fall Time

EL_2 EL_3 Data Eye and Mask Test

After viewing the test results, click **OK** to close the Test Instructions dialog.

EL_7 Non-Monotonic Edge Test

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Jitter Test - Downstream Facing Ports

Equipment Used

Table 17 Equipment Used in Hub Jitter Test - Downstream Facing Ports

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66508)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

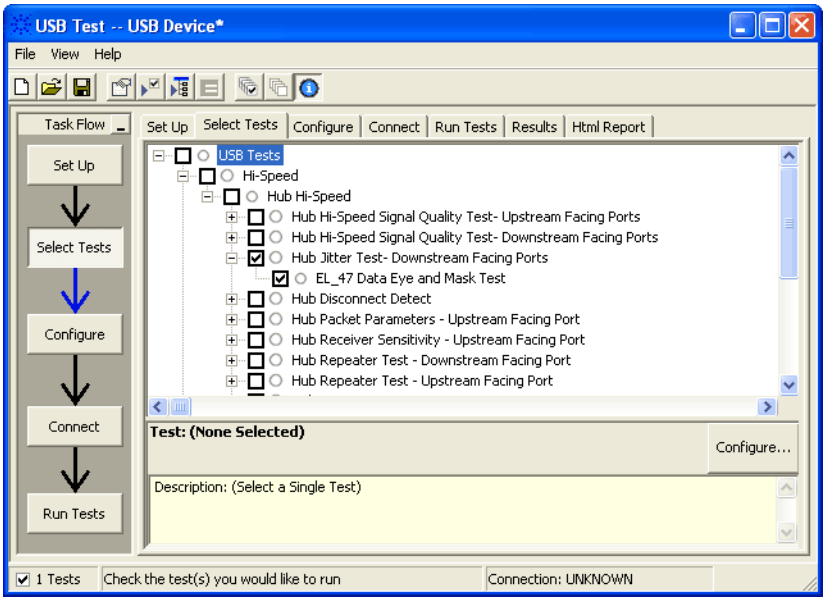

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture. Set the Test switch to the TEST position. Verify green Power LED and yellow test LED are both lit.
2. Attach the differential probe to TP2 of the test fixture, using the header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+ on the fixture, located nearest to the USB connector.
3. Connect the upstream port of the hub to a high-speed root port of the test bed computer.
4. Connect the [TEST PORT] of the test fixture into the down stream facing port under the test of the hub. Apply power to the hub.
5. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

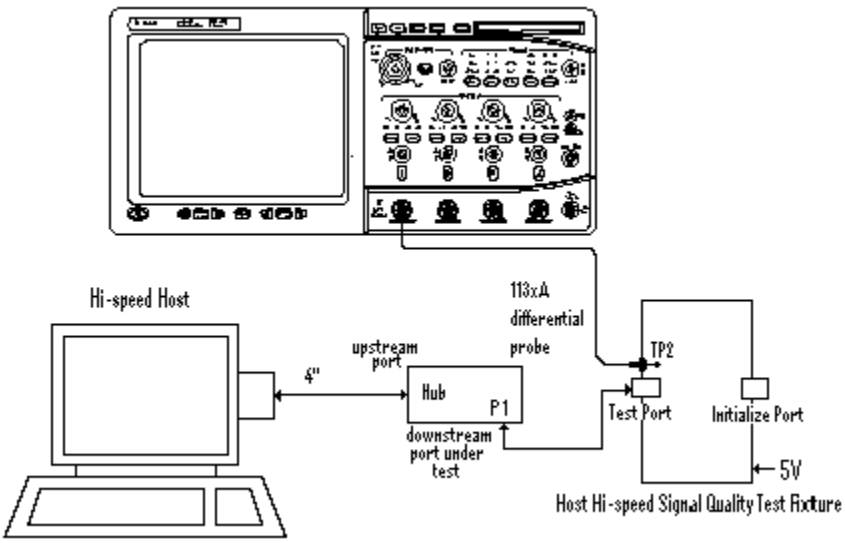

6. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_47 Data Eye and Mask Test

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_FORCE_ENABLE** from the Port Control drop down menu.

3 Enter the port number of the hub port being tested and click **[EXECUTE]** once to force-enable the hub port under test.

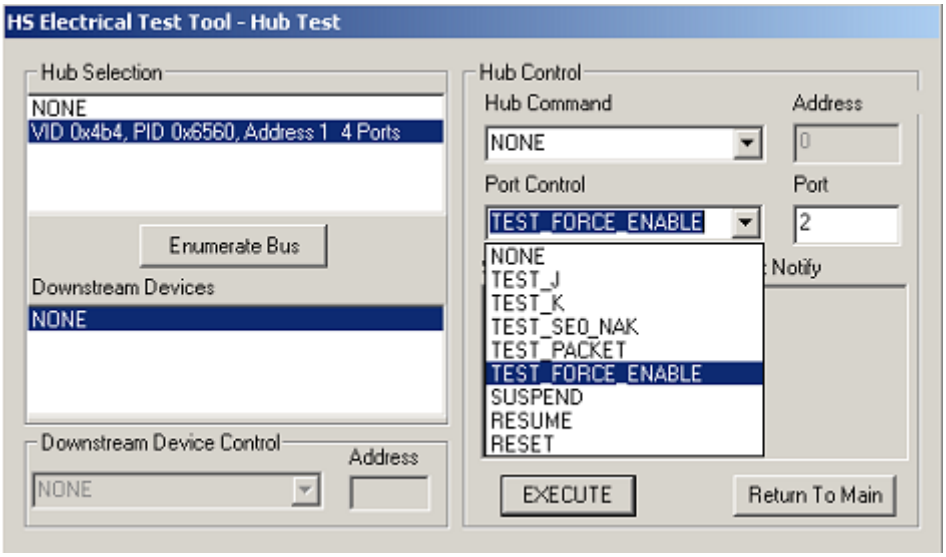

4 Select **PARENT TEST_PACKET** from the Hub Command drop down menu and click **[EXECUTE]**.

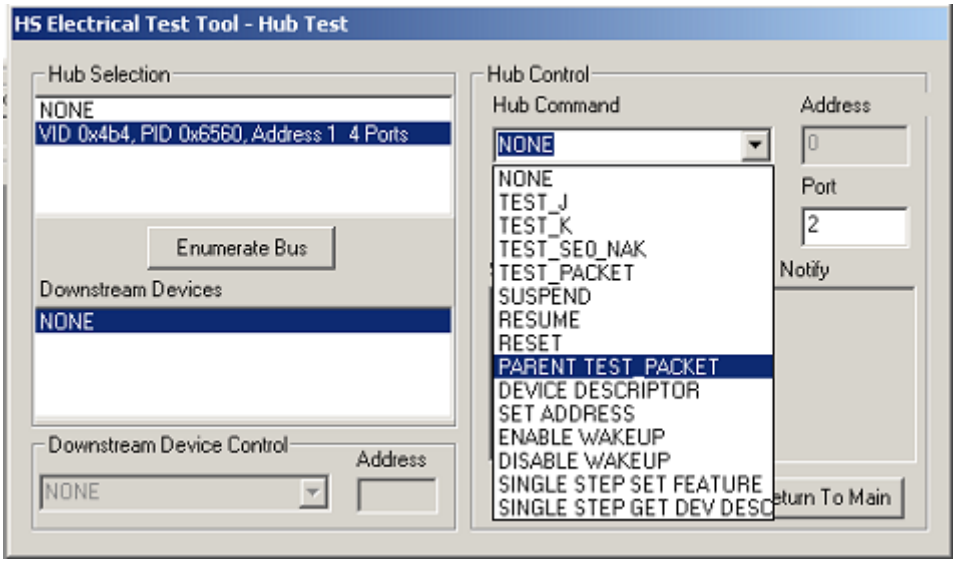

5 Click **OK** to close the Test Instructions dialog.

After viewing the test results, click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Disconnect Detect

Equipment Used

Table 18 Equipment Used in Hub Disconnect Detect

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66506)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Disconnect test fixture and 4" USB cable	Agilent E2649-66404 (old fixture P/N E2645-66506)
1	5V power supply	Agilent 0950-2546 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

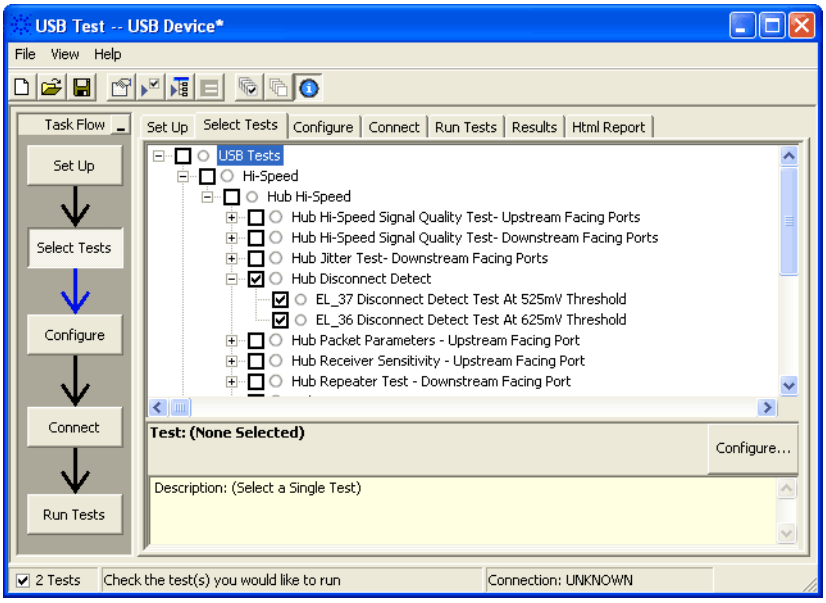

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Attach the 5V power supply to E2649-66404 (E2645-66506 if you are using the old fixture) Disconnect test fixture (J5).

2 Attach the Agilent 113xA differential probe to TP2 of the test fixture, using a damped header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+, which is the pin nearest the USB connector.

3 Set the Test switch to the TEST position. This sets the test fixture to emulate a must-not-disconnect threshold.

   a Verify both the green Power LED and yellow Test LED are lit

4 Cycle power on the hub under test. Connect the upstream port of the hub to the host computer, using the 5 meter USB cable.

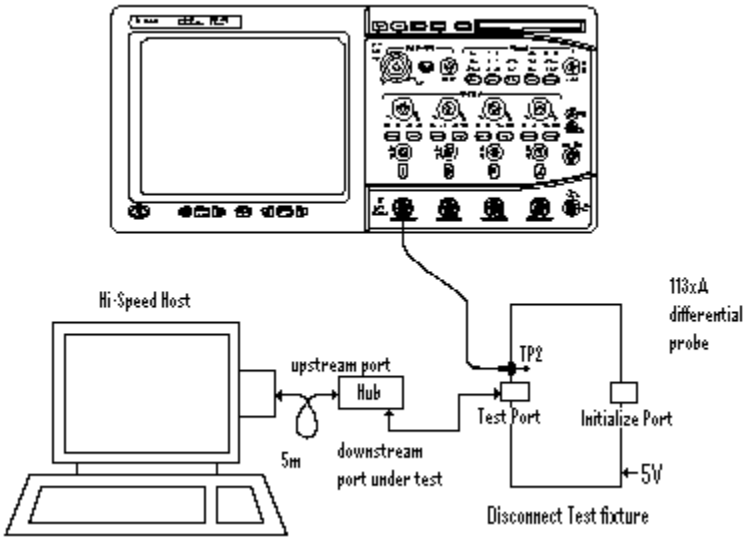

5 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

1 In the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once and verify the hub successfully enumerates.

2 Attach the [TEST PORT] of the test fixture to the port under test.

3 From the Port Control window of the Hub Test menu, select **TEST_FORCE_ENABLE**.

4 Enter the port number and click **[EXECUTE]** once and ensure operation is successful in the Status Window.

5 Click the **Disconnect Notify** check box to monitor the disconnect status in the Status Window.

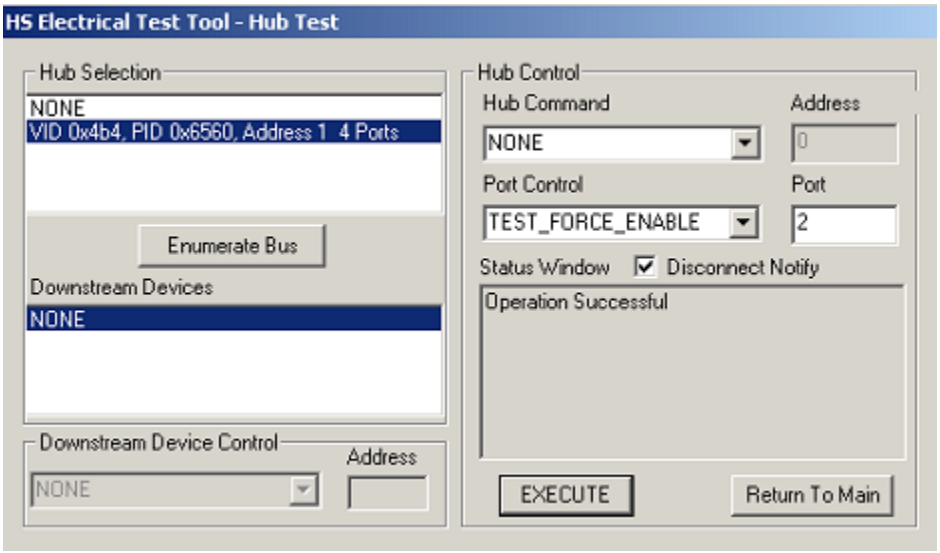

6 Click **OK** to close the Test Instructions dialog.

EL_37 Disconnect Detect Test At 525mV Threshold

The USB automated test application will prompt you to answer the question “Does the Status Window display Disconnect Event Detected?”

EL_36 Disconnect Detect Test At 625mV Threshold

The USB automated test application will prompt you to: Set the Test switch of the E2645-66506 Disconnect test fixture to the Normal position and verify the yellow TEST LED is not lit.

The USB automated test application will prompt you to answer the question “Does the Status Window now display Disconnect Event Detected?”

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Packet Parameters - Upstream Facing Port

Equipment Used

Table 19 Equipment Used in Hub Packet Parameters - Upstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66507)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

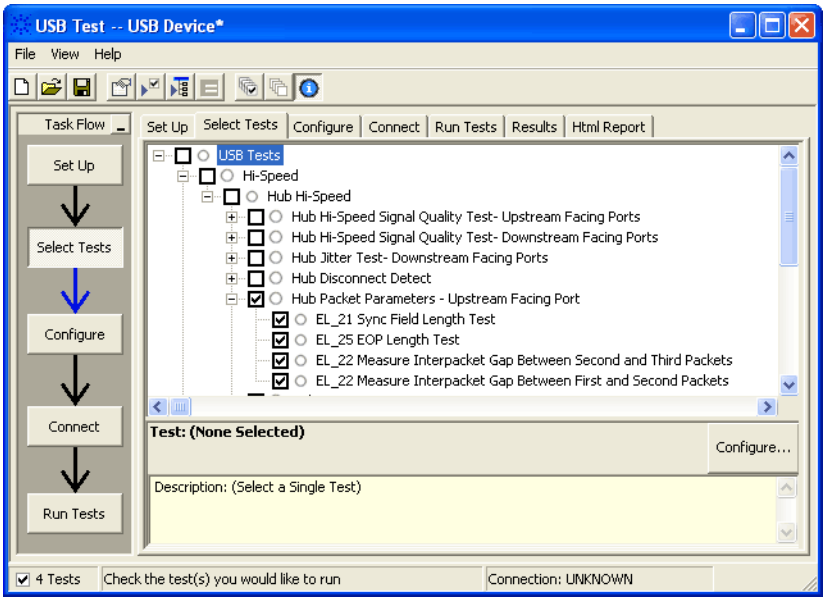

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture [INIT PORT] into a high-speed capable port of the test bed. Do not apply 5V to the test fixture.

2 Connect the test fixture [TEST PORT] into B receptacle of the upstream facing port under test of the hub, using the 4" USB cable. Apply power to the hub.

3 Attach the Agilent 113xA differential probe to D+/D- of TP2 on the test fixture, using a damped header adapter (the header adapter is only needed if you are using the old test fixture).

4 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

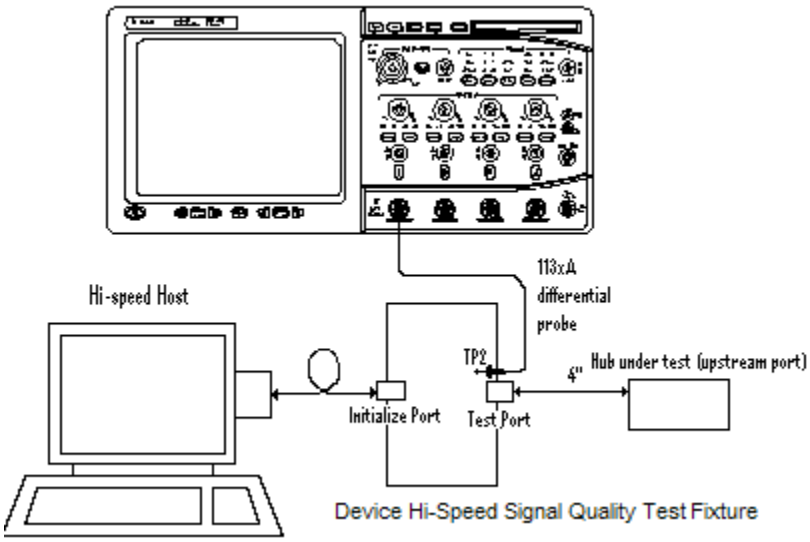

5 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Exit the Hub Test menu of the HS Electrical Test Tool by clicking the **[Return to Main button]**.

2 From the HS Electrical Test Tool main menu select **Device** and click **[TEST]** to enter the Device Test menu.

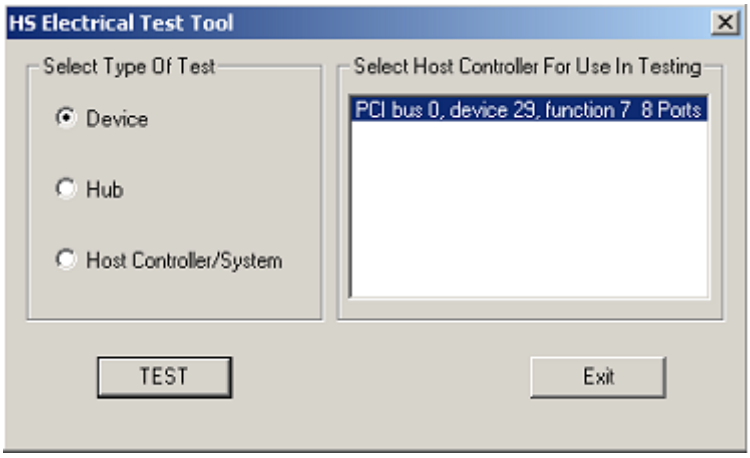

3 The Device Test menu of the HS Electrical Test Tool should appear as below.

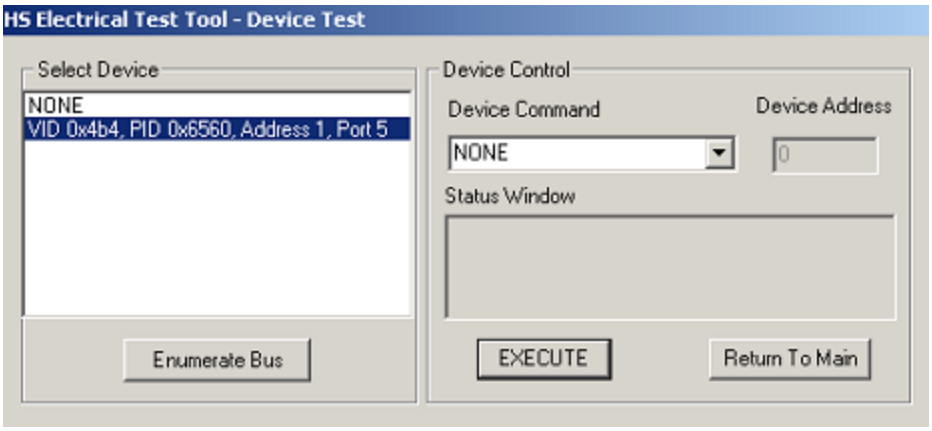

4 Using the oscilloscope, verify the SOFs (Start Of Frame) packets are being transmitted on the port under test. You may need to lower the trigger level to somewhat below 400 mV.

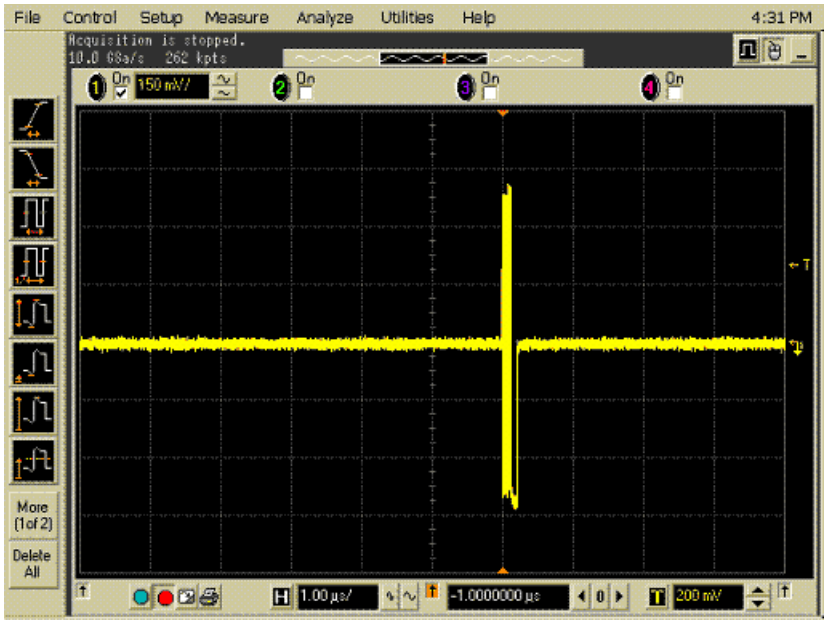

5 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 In the Device Test menu of the HS Electrical Test Tool, ensure that the hub under test is selected.

2 Select **SINGLE STEP SET FEATURE** from the Device Command window. Click **[EXECUTE]** once.

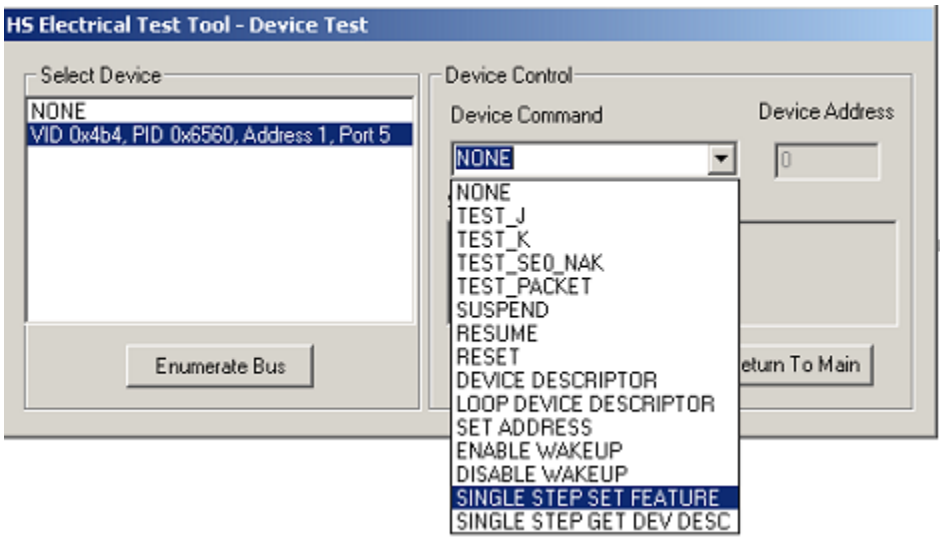

3 You should see the transmitted test packet on the oscilloscope as below.

4 Click **OK** to close the Test Instructions dialog.

EL_21 Sync Field Length Test

EL_25 EOP Length Test

EL_22 Measure Interpacket Gap Between Second and Third Packets

EL_22 Measure Interpacket Gap Between First and Second Packets

The USB automated test application will prompt you to perform these steps:

1 In the Device Test menu of the HS Electrical Test Tool, click **[STEP]** once again. This is the second step of the two-step Single Step Set Feature command.

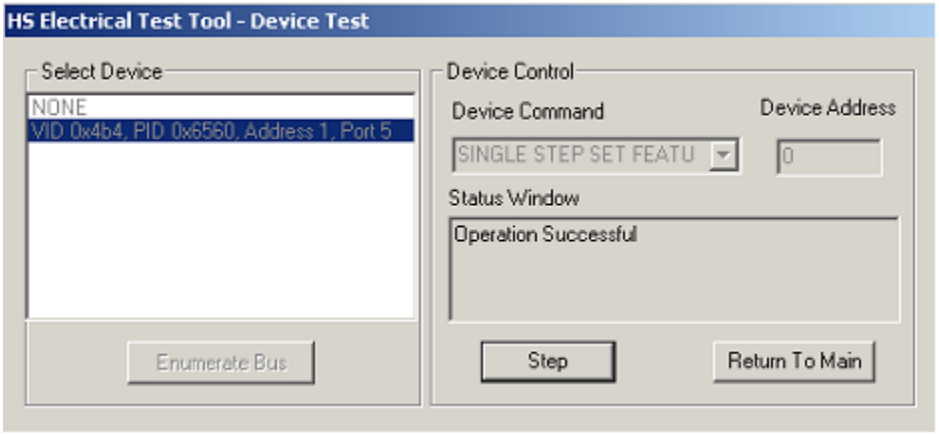

2 You should see the transmitted test packet on the oscilloscope as below.

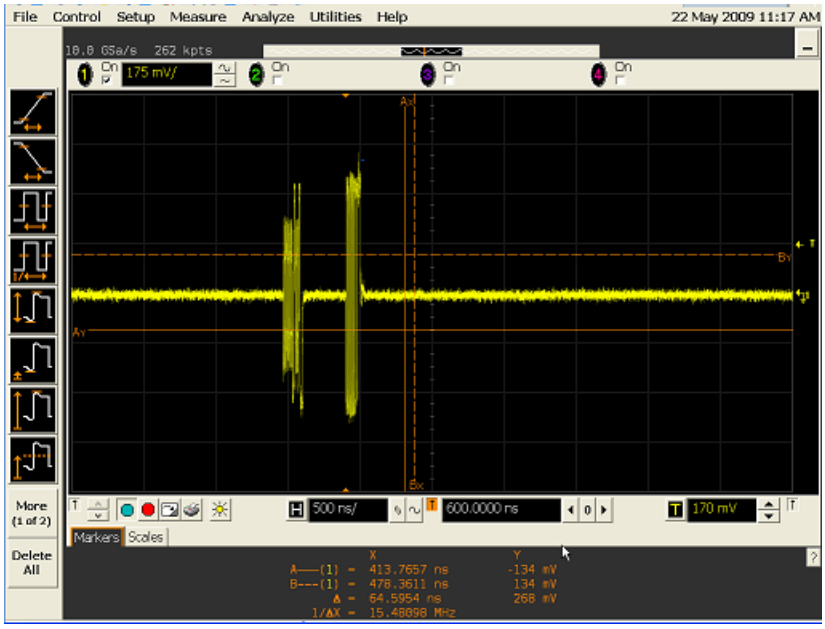

3 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Receiver Sensitivity - Upstream Facing Port

Equipment Used

Table 20 Equipment Used in Hub Receiver Sensitivity - Upstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66503)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Receiver Sensitivity test fixture and 4" USB cable	Agilent E2649-66403 (old fixture P/N E2645-66503)
1	5V power supply	Agilent 0950-2546 or equivalent
1	Digital signal generator	Agilent 81130A (or 81134A with two 15433B transition time converters connected to the pulse generator outputs)
1	USB/GPIB interface	Agilent 82357A
2	6 dB attenuators	Agilent 8493C
2	50 ohm coaxial cable with male SMA connectors at both ends	Agilent 8120-4948 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

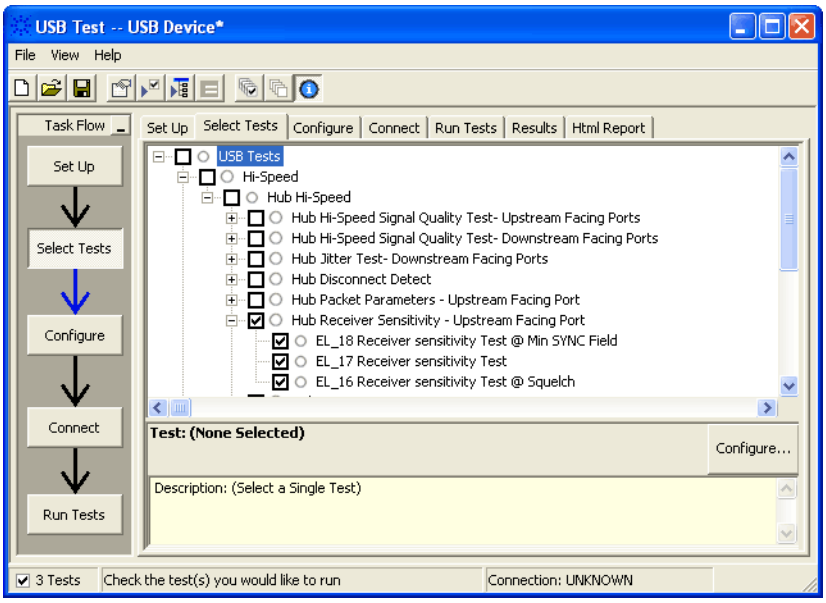

Configuring the Tests

If the pulse generator's SICL address is different from the default, make sure you set the 81134A/81130A Instrument Address configuration option to the pulse generator's SICL address.

Configuring the 81134A pulse generator using the 82357A GPIB-USB converter

1 Ensure that IO Controls is already running by checking the task bar at the bottom right of the screen.

2 If the IO Control has not been launched, go to **Start>Programs>Agilent IO Libraries>IO Control**.

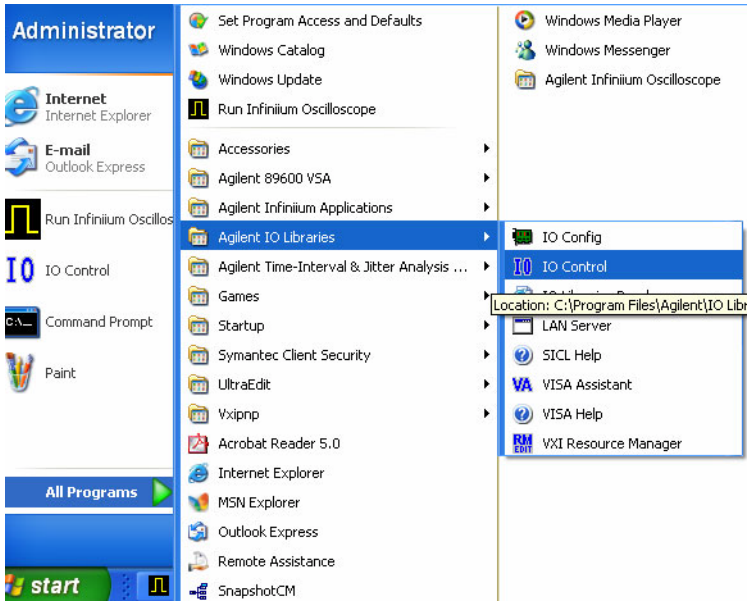

3 Run **IO Config>Auto Config**. This should automatically detect the 82357 device.

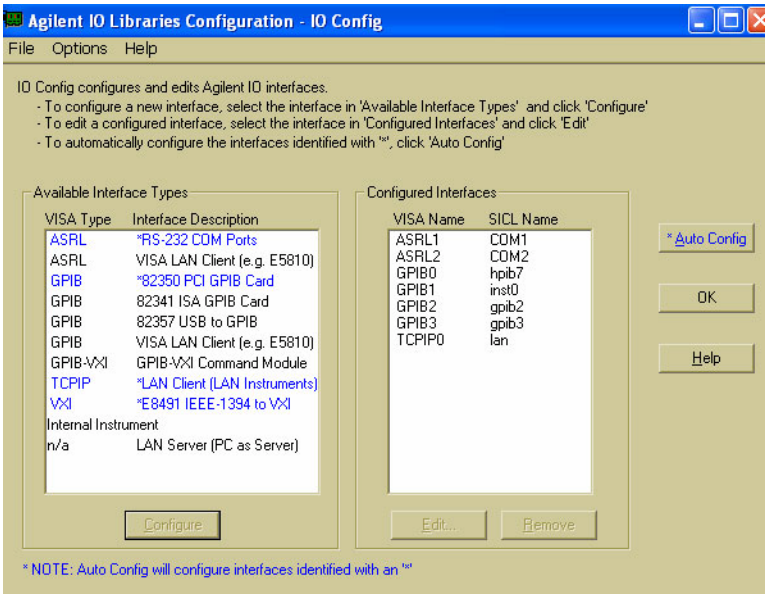
Agilent IO Libraries Configuration - IO Config
File Options Help
IO Config configures and edits Agilent IO interfaces.
- To configure a new interface, select the interface in 'Available Interface Types' and click 'Configure'
- To edit a configured interface, select the interface in 'Configured Interfaces' and click 'Edit'
- To automatically configure the interfaces identified with '*', click 'Auto Config'
Available Interface Types
VISA Type Interface Description
ASRL *RS-232 COM Ports
ASRL VISA LAN Client (e.g. E5810)
GPIB *82350 PCI GPIB Card
GPIB 82341 ISA GPIB Card
GPIB 82357 USB to GPIB
GPIB VISA LAN Client (e.g. E5810)
GPIB-VXI GPIB-VXI Command Module
TCPIP *LAN Client (LAN Instruments)
VXI *E8491 IEEE-1394 to VXI
Internal Instrument
n/a LAN Server (PC as Server)
Configure...
Configured Interfaces
VISA Name SICL Name
ASRL1 COM1
ASRL2 COM2
GPIB0 hpib7
GPIB1 inst0
GPIB2 gpib2
GPIB3 gpib3
TCPIP0 lan
Edit...
Remove
* Auto Config
OK
Help
* NOTE: Auto Config will configure interfaces identified with an '*'

4 Select **GPIB# (last digit is the USB device)>Edit VISA Config...>Auto Add devices**.

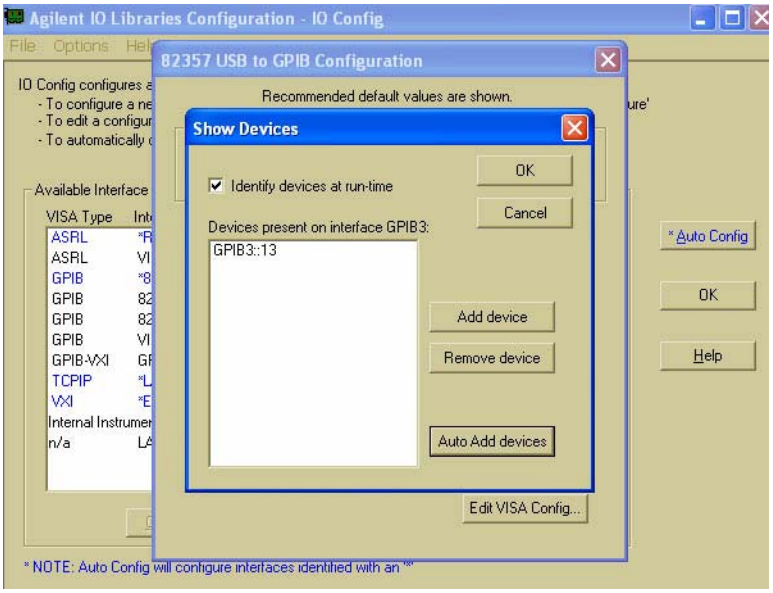

5 Click **OK**, and close the IO Config window.

6 Launch VISA Assistant.

7 You can now verify the device connection.

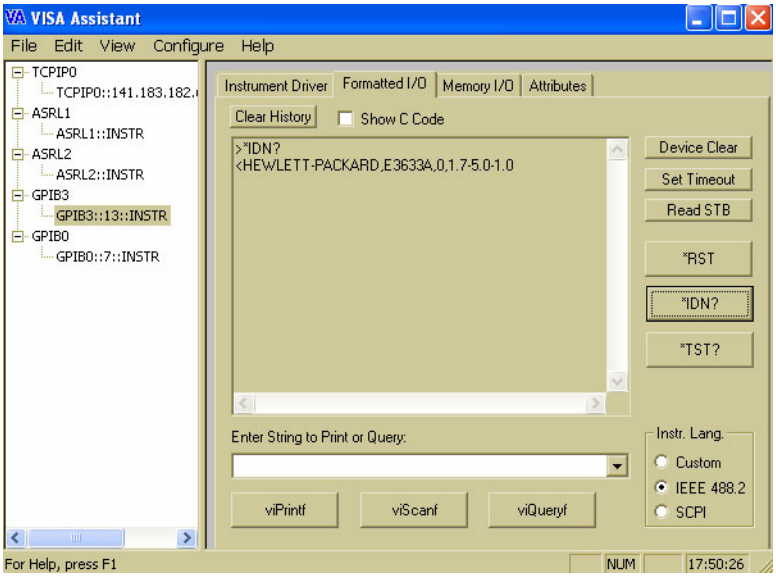
VISA Assistant
File Edit View Configure Help
TCPIP0
TCPIP0::141.183.182.
ASRL1
ASRL1::INSTR
ASRL2
ASRL2::INSTR
GPIB3
GPIB3::13::INSTR
GPIB0
GPIB0::7::INSTR
Instrument Driver
Formatted I/O
Memory I/O
Attributes
Clear History
Show C Code
>*IDN?
<HEWLETT-PACKARD,E3633A,0,1.7-5.0-1.0
Device Clear
Set Timeout
Read STB
*RST
*IDN?
*TST?
Enter String to Print or Query:
Instr. Lang.
Custom
IEEE 488.2
SCPI
viPrintf
viScanf
viQueryf
For Help, press F1
NUM
17:50:26

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

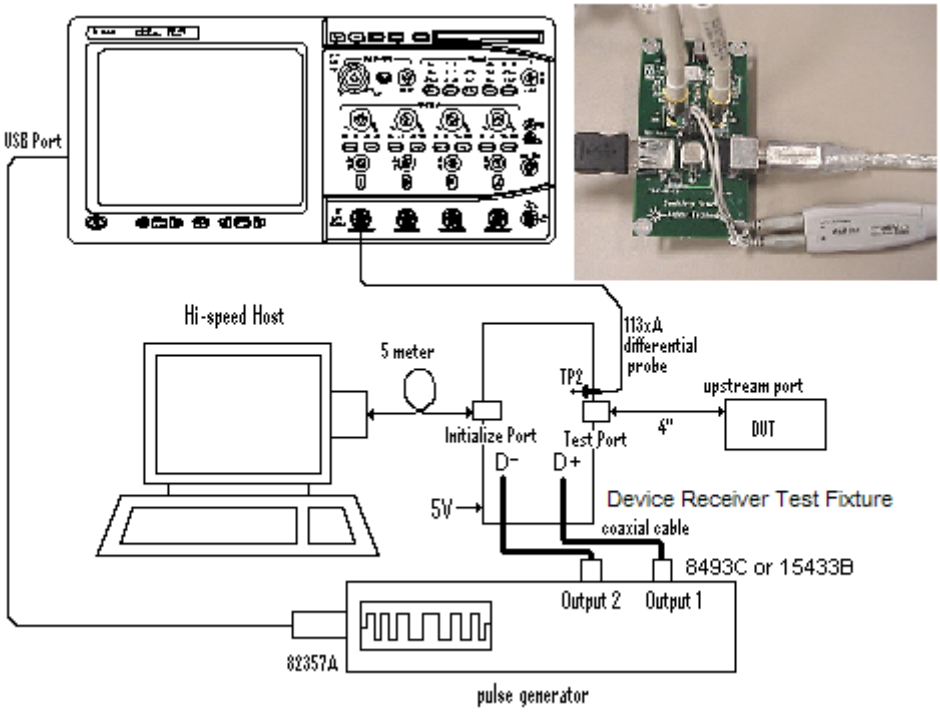

1 Attach the 5V power supply to the E2649-66403 (E2645-66503 if you are using the old fixture) Device Receiver test fixture (J5).

   a Verify the green Power LED is lit.

   b Leave the TEST switch at the OFF position (S1).

   c The yellow LED should be off.

2 Connect the [INIT PORT] of the fixture to a Hi-Speed port on the Test Bed Computer, using the 5 meter USB cable.

3 Connect the [TEST PORT] of the fixture to the device under test, using the 4" USB cable.

4 Connect the Agilent 113xA differential probe to the test fixture at TP2, using the 01131-68703 header adapter (the header adapter is only needed if you are using the old test fixture).

5 Connect the 81130A or 81134A pulse generator to the oscilloscope using the 82357A USB/GPIB Interface.

   a If you choose to use the Agilent 81130A Pulse/Pattern Generator, connect the 8493C 6dB attenuators to OUTPUT1 and OUTPUT2 of Agilent 81130A Pulse/Pattern Generator.

   b If you choose to use the Agilent 81134A Pulse/Pattern Generator, connect the 15433B Transition Time Converters to OUTPUT1 and OUTPUT2 of Agilent 81134A Pulse/Pattern Generator. Agilent 15433B Transition Time Converters are recommended, to reduce the output edge speed of the 81134A to speed close to what the 81130A provides.

6 Connect OUTPUT1 to SMA1 (D+) of the E2649-66403 Device Receiver Sensitivity test fixture using the 8120-4948 SMA cables.

7 Connect OUTPUT2 to SMA2 (D-) of the E2649-66403 Device Receiver Sensitivity test fixture using the 8120-4948 SMA cables.

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Exit the HS Electrical Test Tool - Device Test menu by clicking the **[Return to Main]** button. From the HS Electrical Test Tool main menu select **Hub** and click **[TEST]** to enter the Hub Test menu.

2 On the Hub Test Menu, click **[Enumerate Bus]** button once and verify that the hub enumerates properly.

3 Select **TEST_SE0_NAK** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the hub into TEST_SE0_NAK test mode.

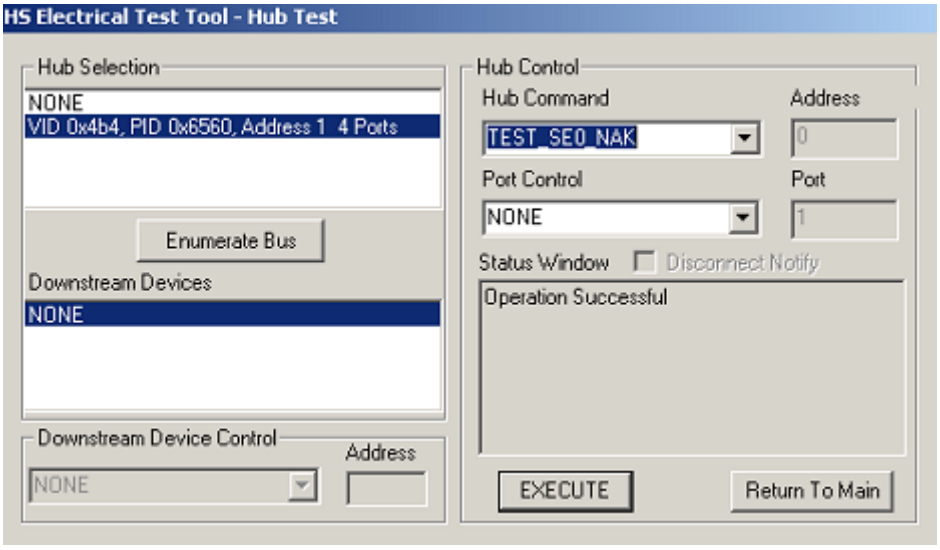

4 Place the test fixture Test Switch (S1) into the **TEST** position. This switches in the data generator in place of the host controller. The data generator emulates the "IN" packets from the host controller.

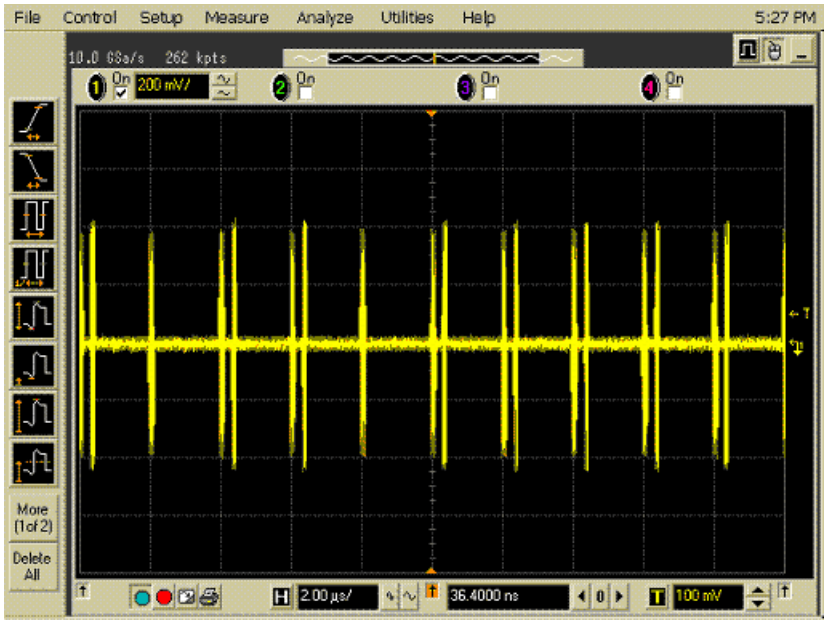

5 Click **OK** to close the Test Instructions dialog.

EL_18 Receiver sensitivity Test @ Min SYNC Field

EL_17 Receiver sensitivity Test

EL_16 Receiver sensitivity Test @ Squelch

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Repeater Test - Downstream Facing Port

Equipment Used

Table 21 Equipment Used in Hub Repeater Test - Downstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Differential probe	Agilent 113xA with E2699A or E2678A
2	Header adapter (only needed if you are using the old test fixtures - E2645-66507 or E2645-66508)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
2	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site
2	1 meter USB cable	Any listed on USB-IF web site

Selecting the Tests

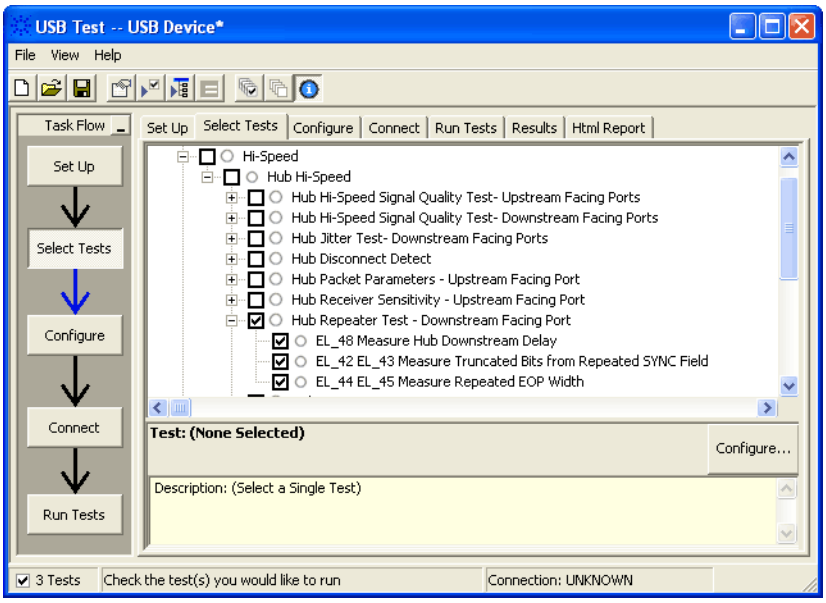

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture between the upstream facing port of the hub and the host controller port.

   a Attach the differential probe to TP2 of the fixture. Ensure the + polarity on the probe lines up with D+ on the fixture.

   b Connect the fixture's [TEST PORT] to the hub's upstream port with the 4" USB cable.

   c Connect the fixture's [INIT PORT] to the controller port with the 5 meter USB cable.

2 Connect the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture between the downstream port under test of the hub and a known-good hi-speed device.

   a Attach the differential probe to D+/D- of TP2 on the fixture. Ensure the + polarity on the probe lines up with the D+ on the fixture.

   b Connect the test fixture's [TEST PORT] to the hub downstream port under test, using the 4" USB cable.

   c Connect the test fixture's [INIT PORT] to the known good device using the 1 meter USB cable.

   d Apply power to the hub and the known good device.

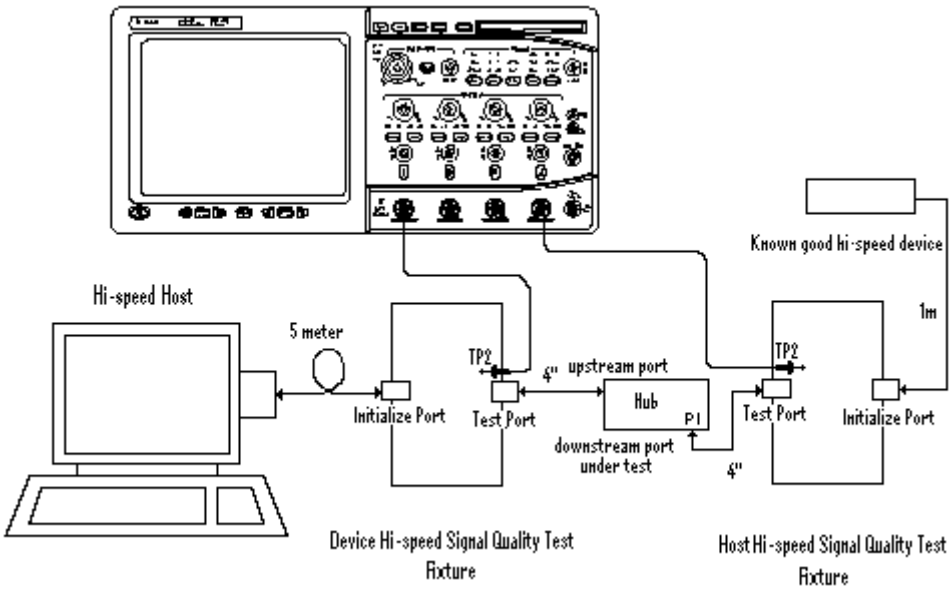

3 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

a The hub under test should be enumerated with the hub's VID shown together with the USB address.

b Likewise the known good device should be enumerated with its VID shown together with the hub port in which it is connected.

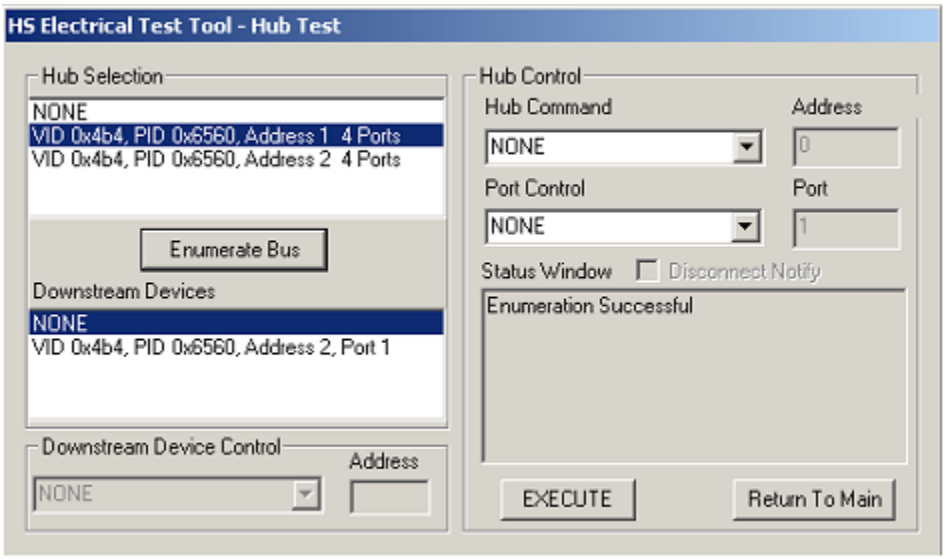

2 The captured transition should be as in the figure below.

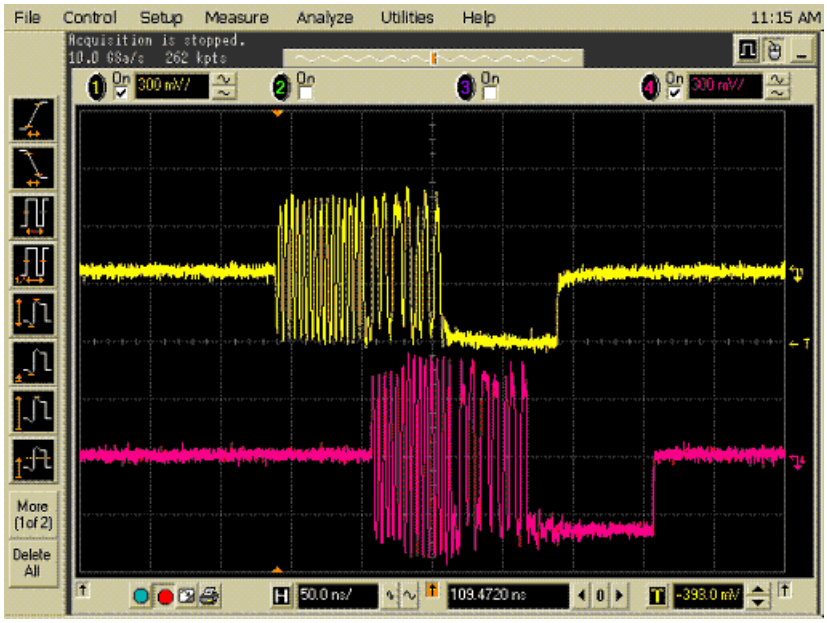

3 Check **I have completed these instructions**.

EL_48 Measure Hub Downstream Delay

EL_42 EL_43 Measure Truncated Bits from Repeated SYNC Field

EL_44 EL_45 Measure Repeated EOP Width

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Repeater Test - Upstream Facing Port

Equipment Used

Table 22 Equipment Used in Hub Repeater Test - Upstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Differential probe	Agilent 113xA with E2699A or E2678A
2	Header adapter (only needed if you are using the old test fixtures - E2645-66507 or E2645-66508)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
2	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site
2	1 meter USB cable	Any listed on USB-IF web site

Selecting the Tests

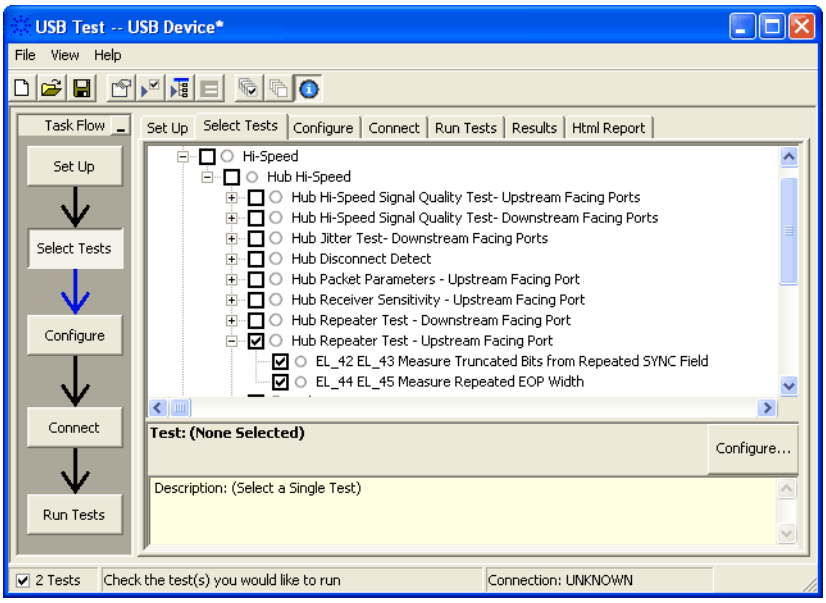

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture between the upstream facing port of the hub and the host controller port.

   a Attach the differential probe to TP2 of the fixture. Ensure the + polarity on the probe lines up with D+ on the fixture.

   b Connect the fixture's [INIT PORT] to the hub's upstream port, with the 5 meter USB cable.

   c Connect the fixture's [TEST PORT] to the host controller port, using the 4" USB cable.

2 Connect the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture between the downstream

port under test of the hub and a known good hi-speed device, nearest to the device.

a Attach the differential probe to D+/D- of TP2 on the fixture. Ensure the + polarity on the probe lines up with the D+ on the fixture.

b Connect the test fixture's [TEST PORT] to a known good device using the 4" USB cable.

c Connect the test fixture's [INIT PORT] to the hub's downstream port under test using the 1 meter USB cable.

d Apply power to the hub and the known good device.

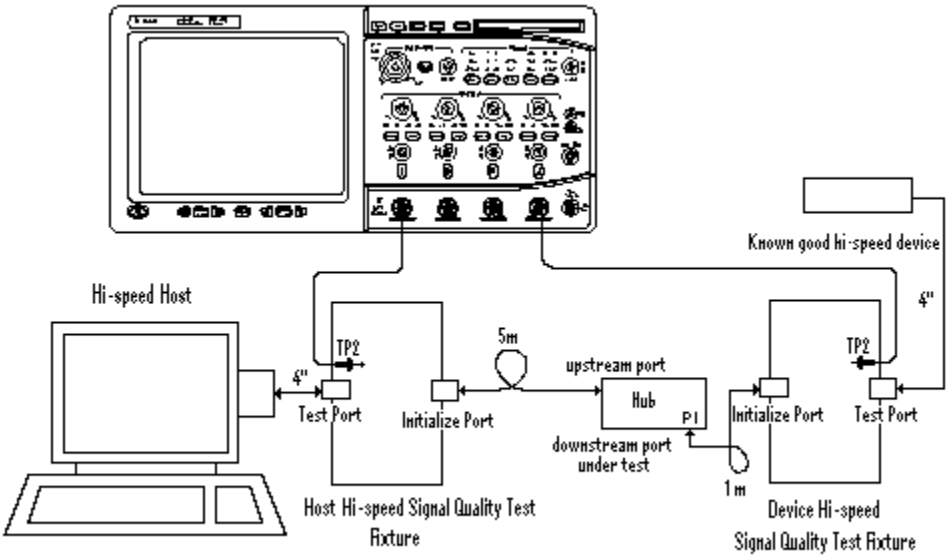

3 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

a The hub under test should be enumerated with the hub's VID shown together with the USB address.

b Likewise the known good device should be enumerated with its VID shown together with the hub port in which it is connected.

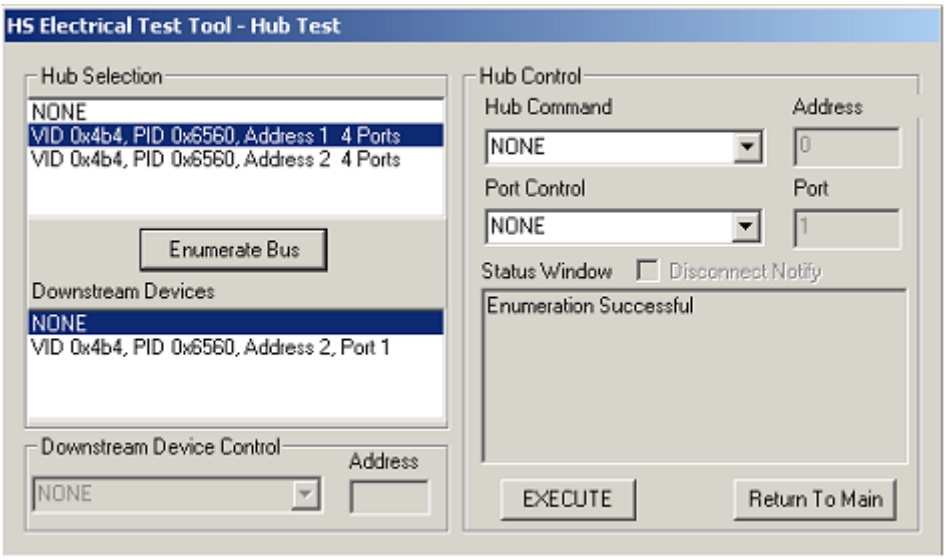

2 Check **I have completed these instructions**.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, select **SINGLE STEP SET FEATURE** from the Downstream Device Control drop down menu and click **[EXECUTE]** once.

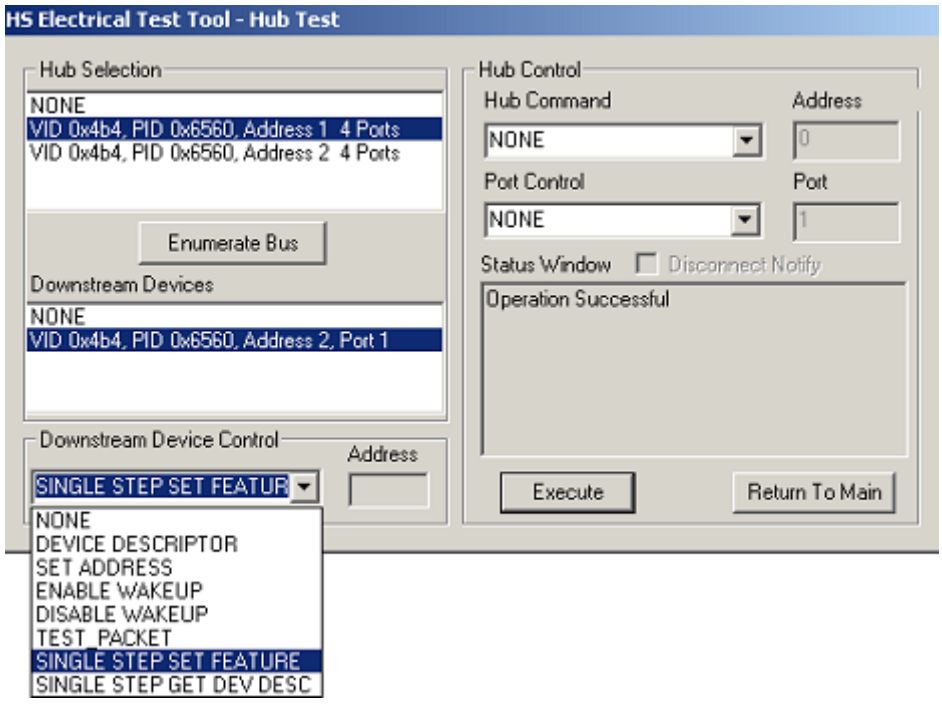

2 The captured transition should be as in the figure below.

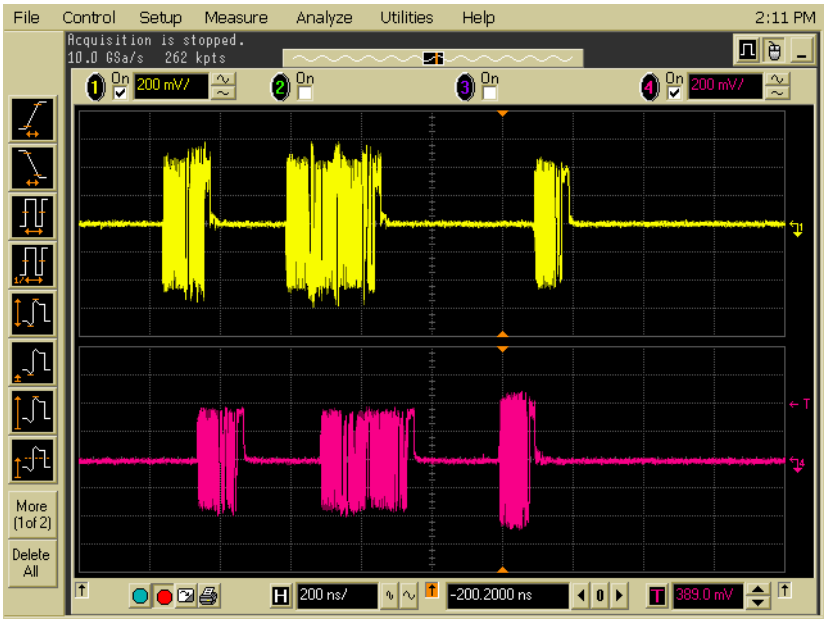

3 Check **I have completed these instructions**.

EL_42 EL_43 Measure Truncated Bits from Repeated SYNC Field

EL_44 EL_45 Measure Repeated EOP Width

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub CHIRP Timing - Upstream Facing Port

Equipment Used

Table 23 Equipment Used in Hub CHIRP Timing - Upstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

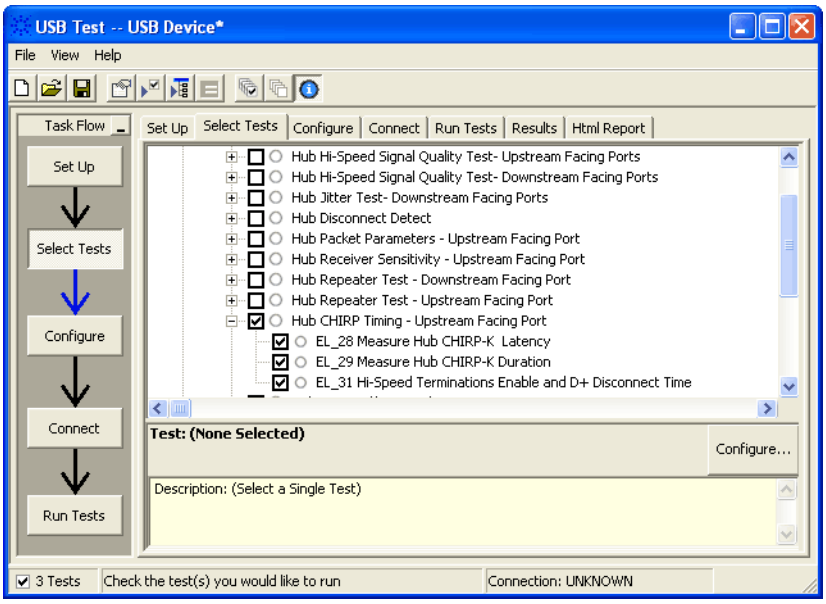
USB Test -- USB Device*
File View Help
Task Flow
Set Up
Select Tests
Configure
Connect
Run Tests
Set Up
Select Tests
Configure
Connect
Run Tests
Html Report
Hub Hi-Speed Signal Quality Test- Upstream Facing Ports
Hub Hi-Speed Signal Quality Test- Downstream Facing Ports
Hub Jitter Test- Downstream Facing Ports
Hub Disconnect Detect
Hub Packet Parameters - Upstream Facing Port
Hub Receiver Sensitivity - Upstream Facing Port
Hub Repeater Test - Downstream Facing Port
Hub Repeater Test - Upstream Facing Port
Hub CHIRP Timing - Upstream Facing Port
EL_28 Measure Hub CHIRP-K Latency
EL_29 Measure Hub CHIRP-K Duration
EL_31 Hi-Speed Terminations Enable and D+ Disconnect Time
Test: (None Selected)
Configure...
Description: (Select a Single Test)
3 Tests
Check the test(s) you would like to run
Connection: UNKNOWN

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture.

2 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2.

3 Connect both probe grounds to GND leads.

4 Connect the [INIT PORT] of the test fixture into the host controller port, using the 5-meter USB cable.

5 Connect the [TEST PORT] on the fixture to the upstream port of the hub.

6 Apply power to the hub. Do not apply 5V to the test fixture.

7 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

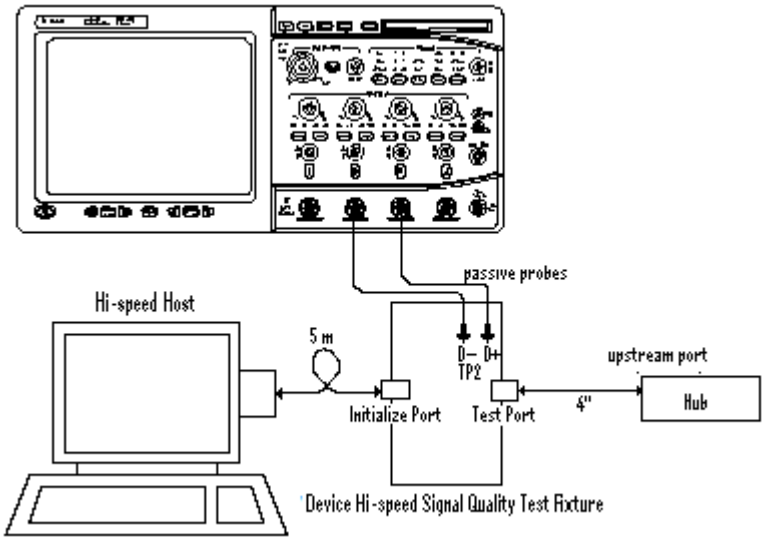

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 On the HS Electrical Test Tool software, click **[Enumerate Bus]** once. You should capture the CHIRP handshake as in the below figure.

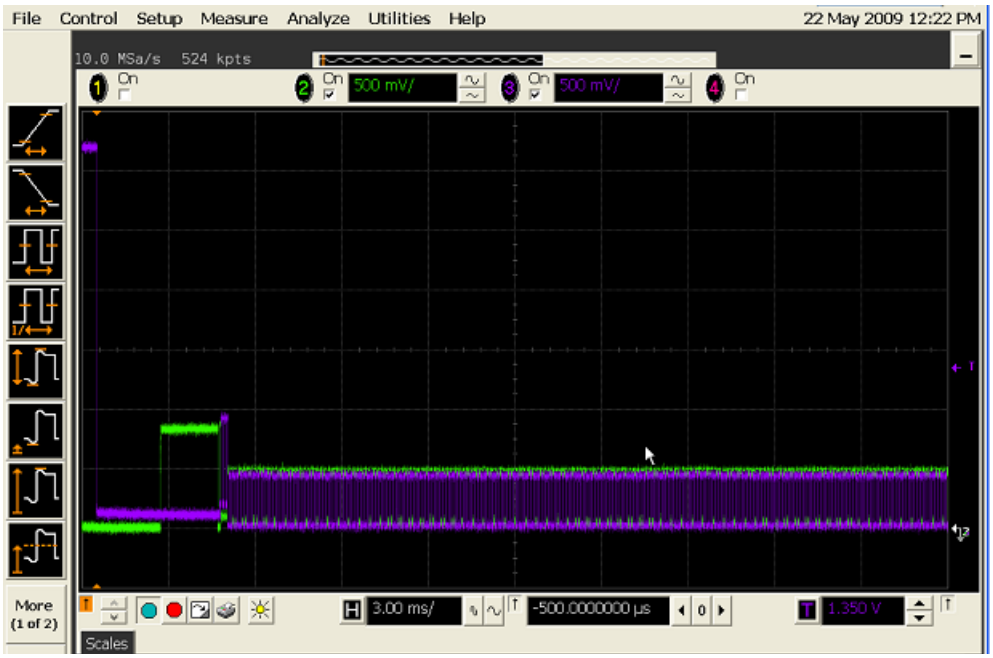

2 Click **OK** to close the Test Instructions dialog.

EL_28 Measure Hub CHIRP-K Latency

EL_29 Measure Hub CHIRP-K Duration

EL_31 Hi-Speed Terminations Enable and D+ Disconnect Time

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Suspend/Resume/Reset Timing - Upstream Facing Port

Equipment Used

Table 24 Equipment Used in Hub Suspend/Resume/Reset - Upstream Facing Port

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

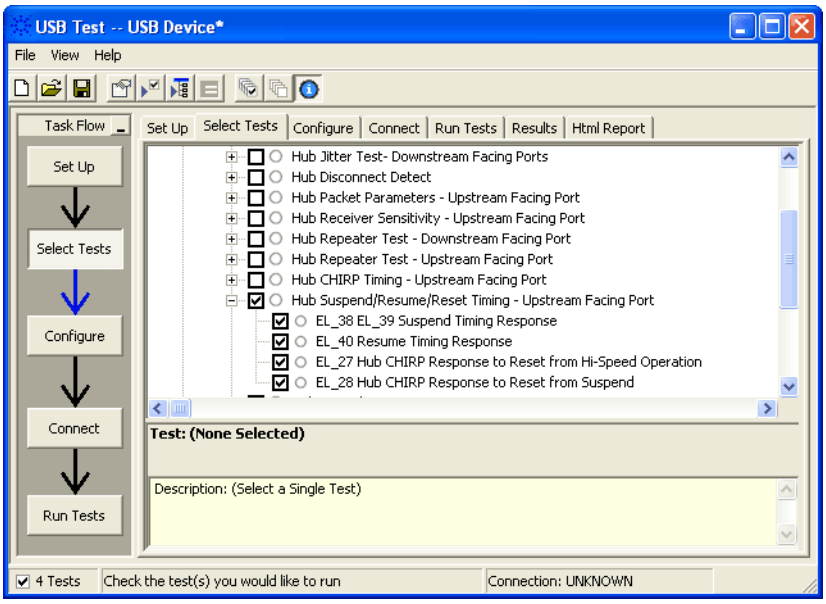

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture.

2 Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2. D+ on TP2 is the pin closest to the USB connector.

3 Connect both probe grounds to leads COM (leads TP5 on the old fixture).

4 Connect the [INIT PORT] of the test fixture into the host controller port, using the 5-meter USB cable.

5 Connect the [TEST PORT] on the fixture to the upstream port of the hub.

6 Apply power to the hub. Do not apply 5V to the test fixture.

7 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

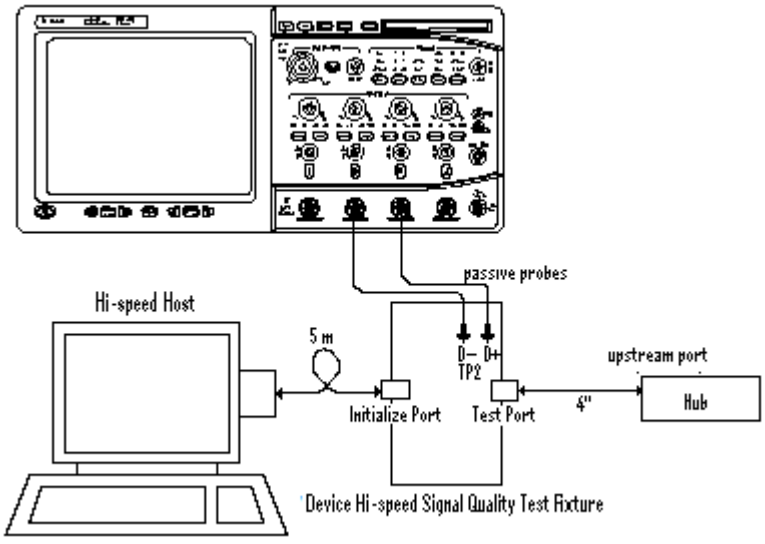

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_38 EL_39 Suspend Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once.

2 Select **SUSPEND** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the device into suspend. The captured transition should be as in the figure below.

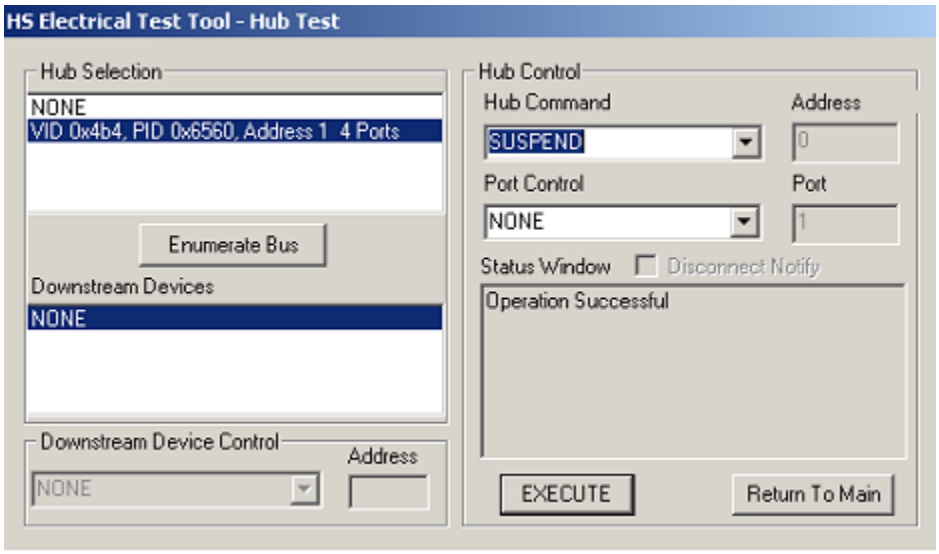

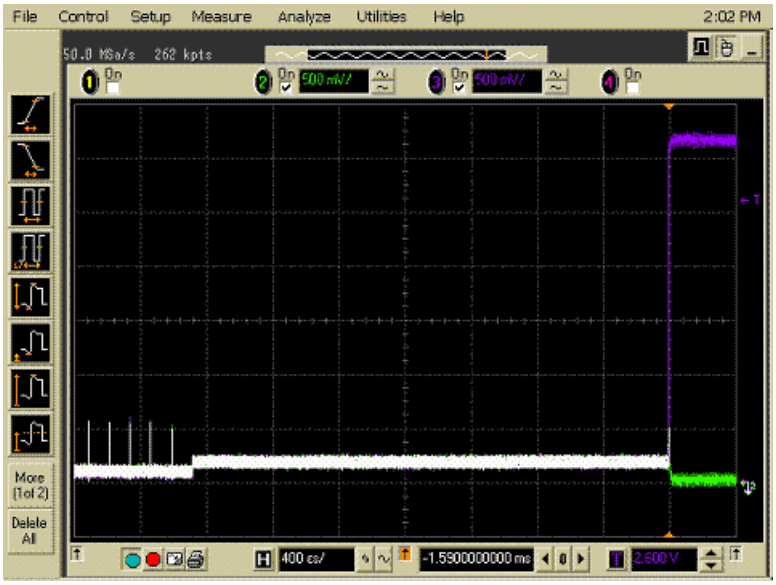

3 Click **OK** to close the Test Instructions dialog.

EL_40 Resume Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, select **RESUME** from the Hub Command drop down menu. Click **[EXECUTE]** once to resume the hub from suspend. The captured transition should be as in the figure below.

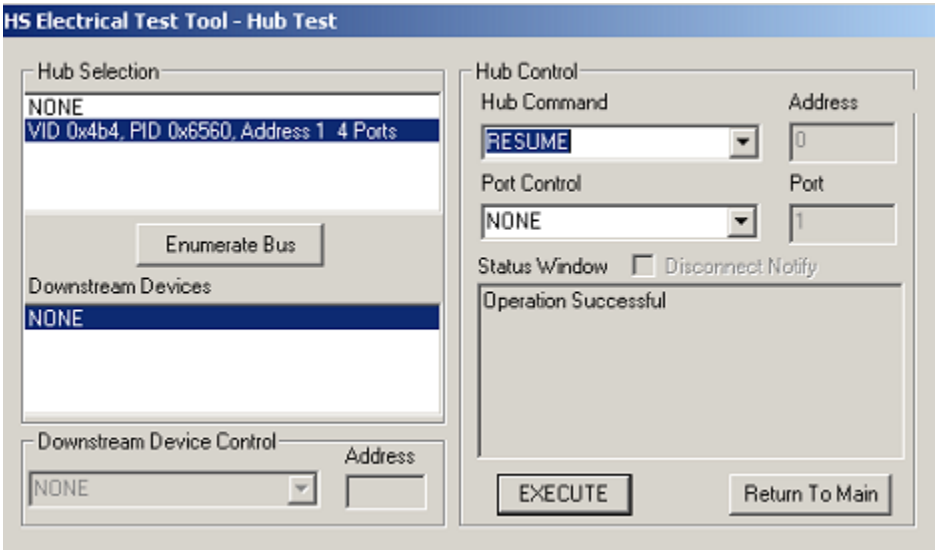

File Control Setup Measure Analyze Utilities Help
26 May 2009 11:04 AM
1.00 GSa/s 524 kpts
500 mV/
Setup Channel 3
More (1 of 2)
Delete All
Scales
Source Vertical Scale Offset Horizontal Scale Position
channel 2 500 mV/div 1.5300 V 50.0000 µs/div 200.0000000 µs
channel 3 500 mV/div 1.5300 V 50.0000 µs/div 200.0000000 µs

2 Click **OK** to close the Test Instructions dialog.

EL_27 Hub CHIRP Response to Reset from Hi-Speed Operation

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, select **RESET** from the Hub Command drop down menu. Click **[EXECUTE]** once to reset the hub operating in high speed. The captured transition should be as in the figure below.

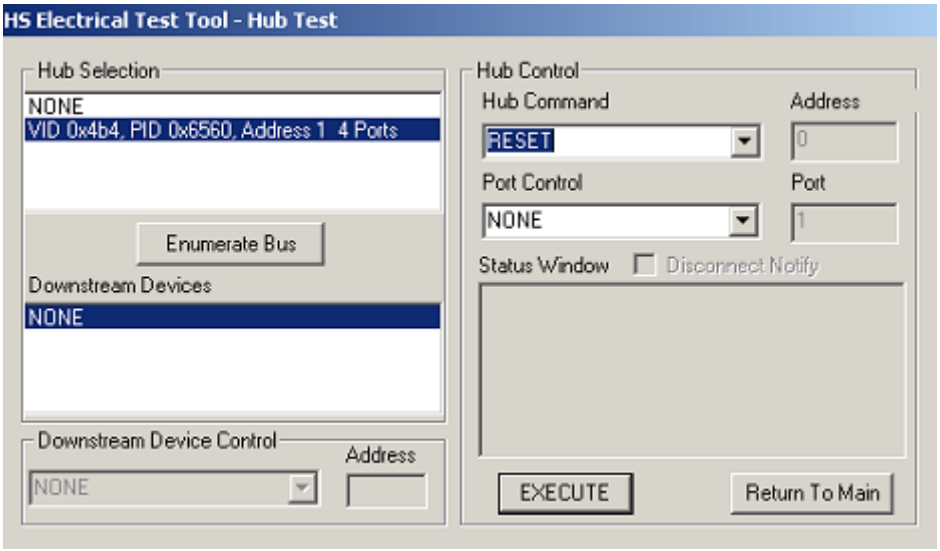

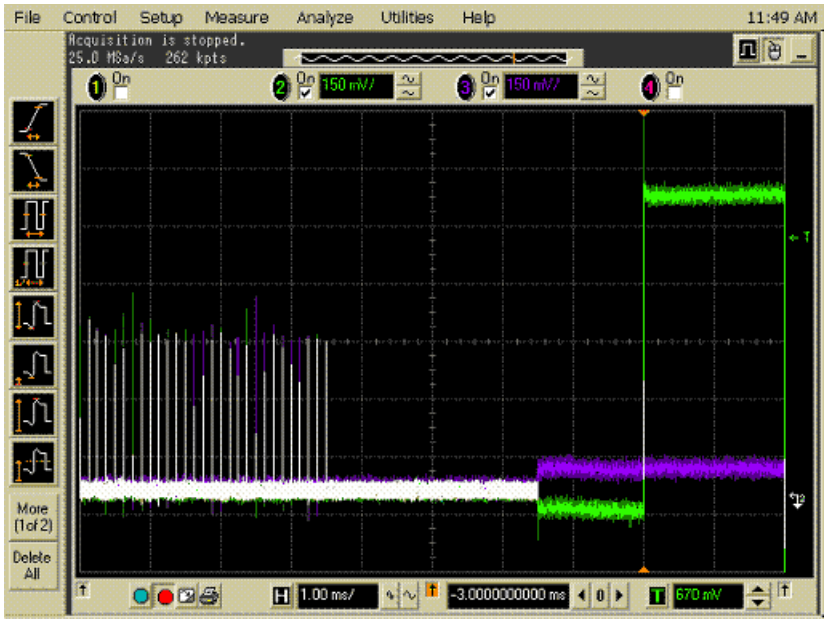

2 Click **OK** to close the Test Instructions dialog.

EL_28 Hub CHIRP Response to Reset from Suspend

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool software, select **SUSPEND** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the device into suspend.

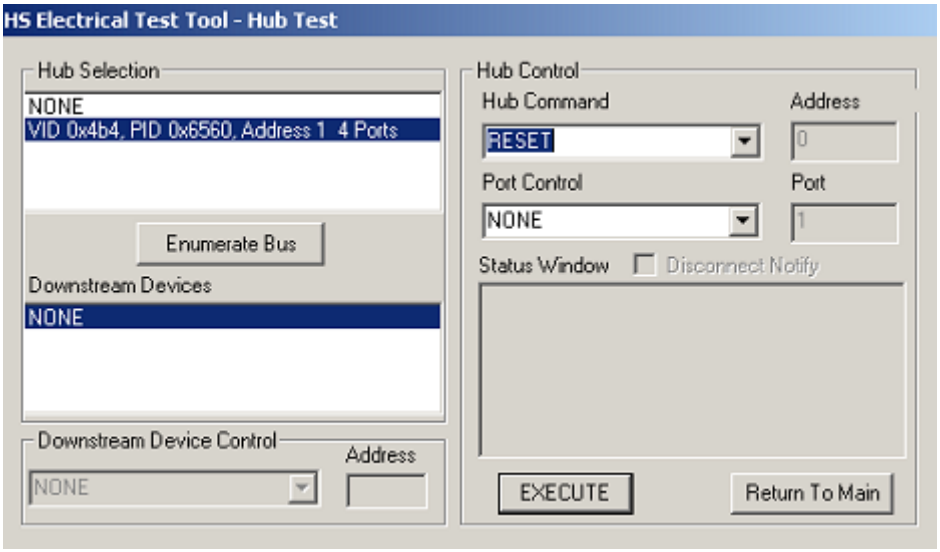

2 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you to perform these steps:

1 On the Device Test Menu of the HS Electrical Test Tool, select **RESET** from the Device Command drop down menu. Click **[EXECUTE]** once to reset the device operating in high speed. The captured transition should be as in the figure below.

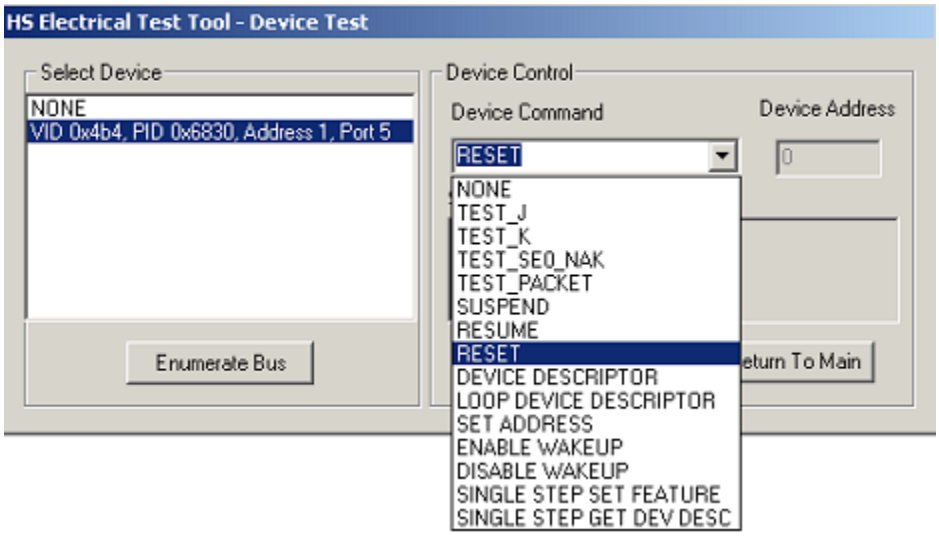

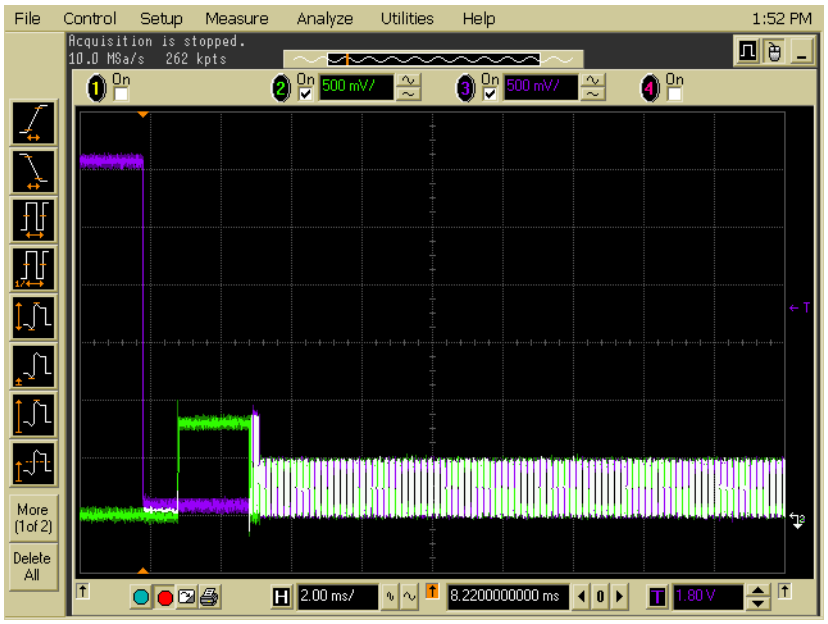

2 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Test J/K, SE0_NAK - Upstream Facing Port

Equipment Used

Table 25 Equipment Used in Hub Test J/K, SE0_NAK - Upstream Facing Port

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	5V power supply	Agilent 0950-2546 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

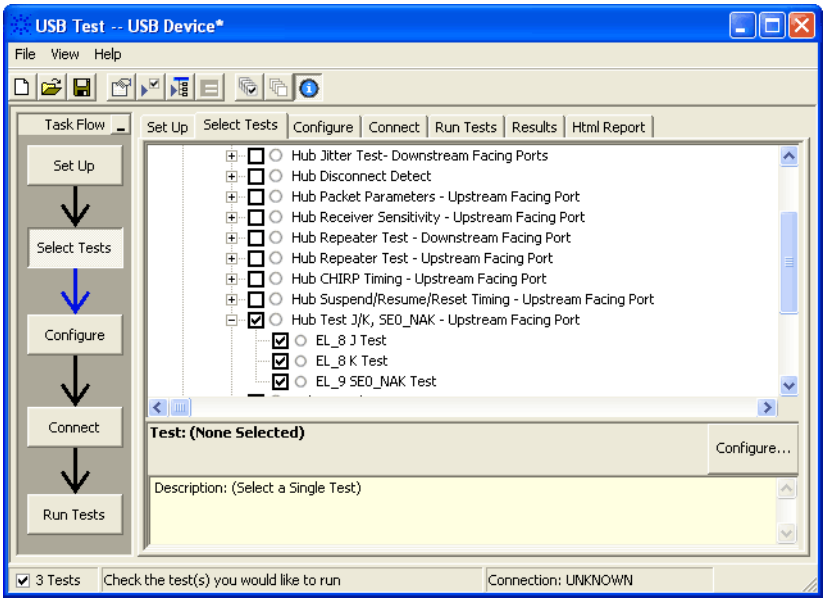

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66401 (E2645-66507 if you are using the old fixture) Device High-Speed Signal Quality test fixture. Leave the TEST switch at the **OFF** position. Verify the green Power LED is lit, and the yellow Test LED is off.
2. Connect the [TEST PORT] of the test fixture into the upstream facing port of the hub under test, using the 4" USB cable.
3. Connect the [INIT PORT] of the test fixture to a port of the Test Bed Computer, using the 5 meter cable.
4. Apply power to the hub.

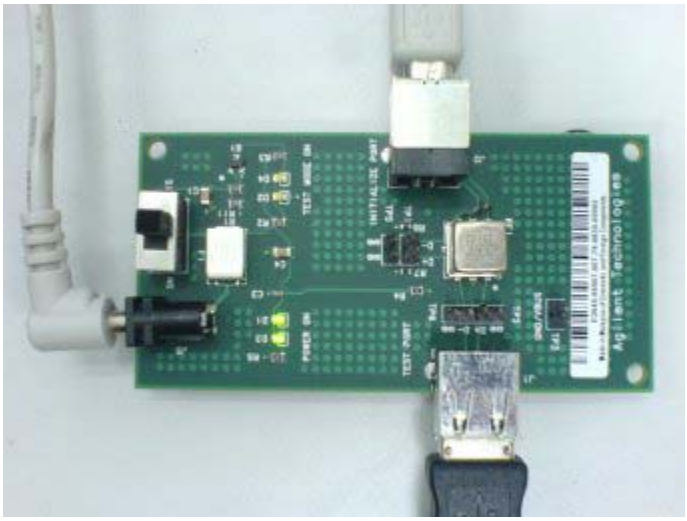

5. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_8 J Test

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_J** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the hub into TEST_J test mode.

3 Switch the test fixture into the **TEST** position.

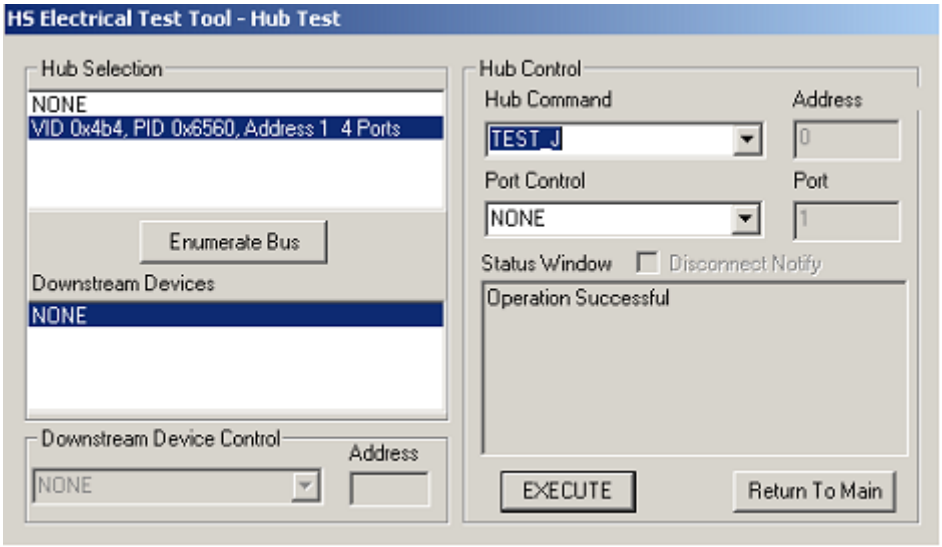

4 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

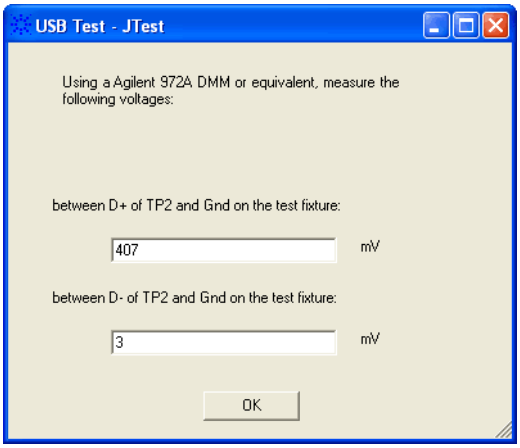
USB Test - JTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
407
mV
between D- of TP2 and Gnd on the test fixture:
3
mV
OK

EL_8 K Test

The USB automated test application will prompt you to perform these steps:

1 Return the Test switch of the test fixture to the **NORMAL** position.

2 Cycle the hub power to restore the hub to normal operation. On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

3 Select **TEST_K** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the hub into TEST_K test mode.

4 Switch the test fixture into the **TEST** position.

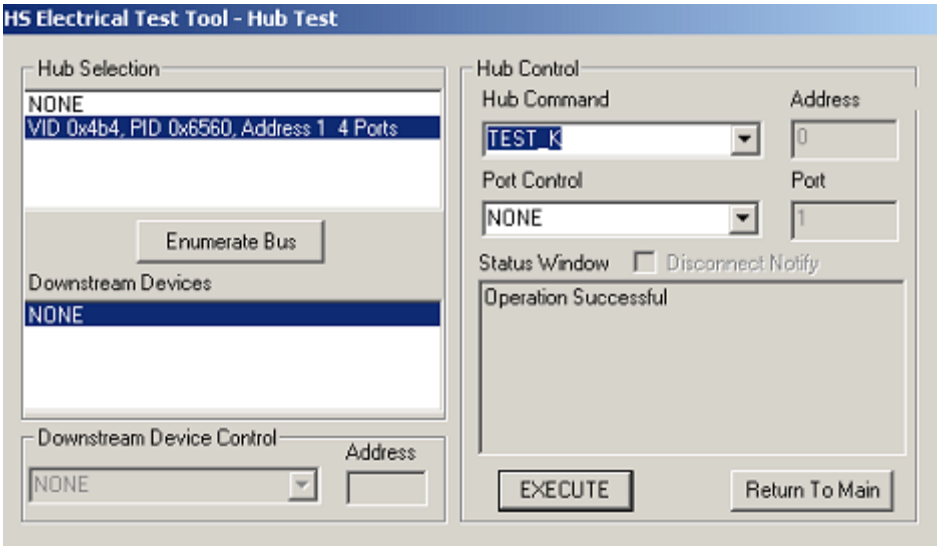

5 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

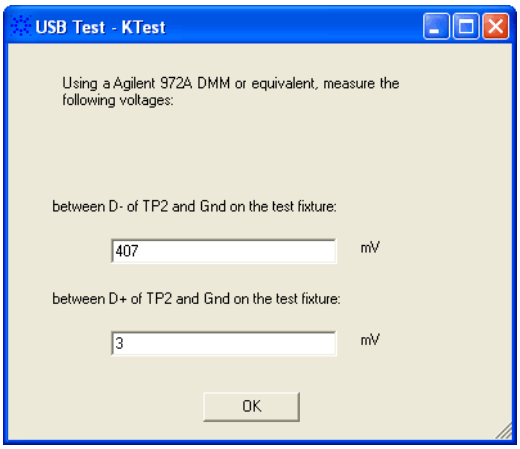
USB Test - KTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D- of TP2 and Gnd on the test fixture:
407
mV
between D+ of TP2 and Gnd on the test fixture:
3
mV
OK

EL_9 SE0_NAK Test

The USB automated test application will prompt you to perform these steps:

1. Return the Test switch of the test fixture to the **NORMAL** position.
2. Cycle the hub power to restore the hub to normal operation. On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.
3. Select **TEST_SE0_NAK** from the Hub Command drop down menu. Click **[EXECUTE]** once to place the hub into TEST_SE0_NAK test mode.
4. Switch the test fixture into the **TEST** position.

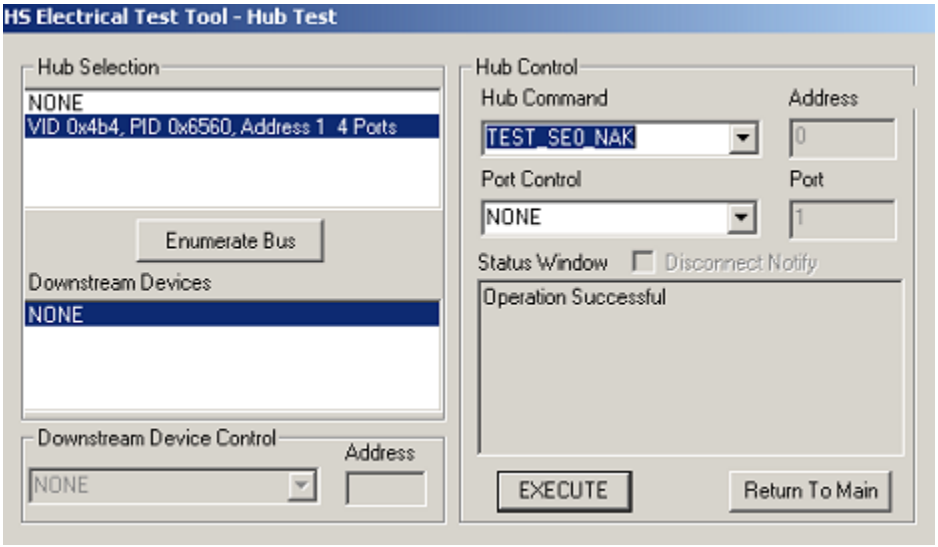

5 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

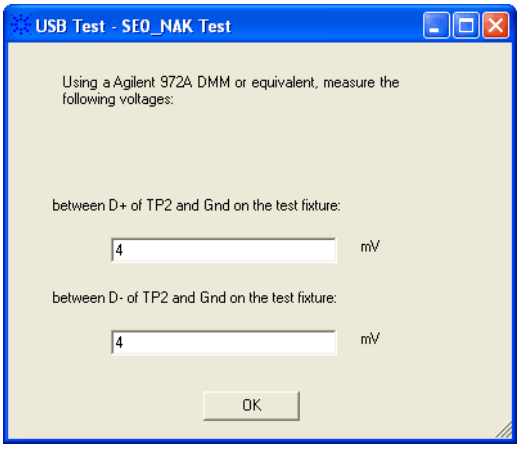
USB Test - SEO_NAK Test
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
4
mV
between D- of TP2 and Gnd on the test fixture:
4
mV
OK

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Test J/K, SE0_NAK - Downstream Facing Port

Equipment Used

Table 26 Equipment Used in Hub Test J/K, SE0_NAK - Downstream Facing Port

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	5V power supply	Agilent 0950-2546 or equivalent
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

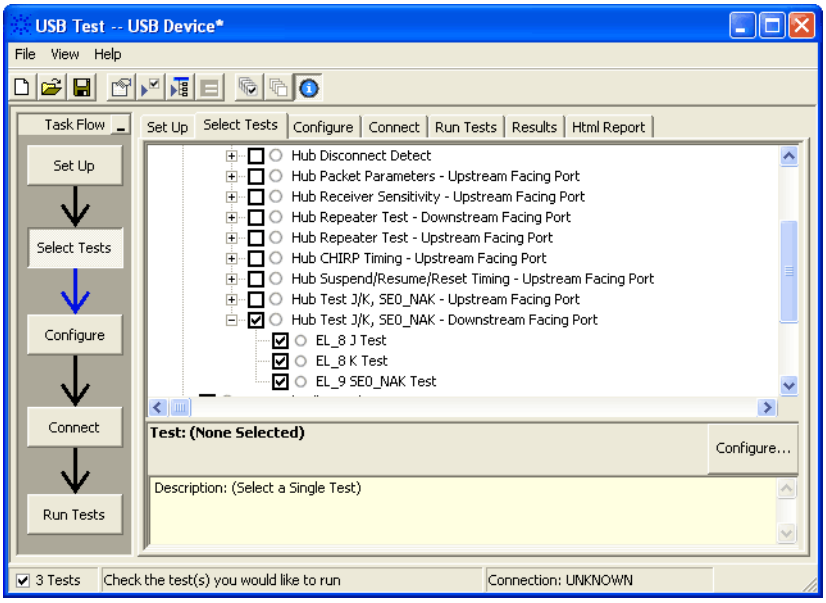

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host High-Speed Signal Quality test fixture. Verify the green Power LED is lit. Place the TEST switch (S1) in the Test position and the yellow Test LED is lit.
2. Connect the [TEST PORT] of the test fixture into the downstream facing port of the hub under test, using the 4" USB cable.
3. Attach the hub upstream port to the host controller port, using the 5 meter cable.
4. Apply power to the hub.

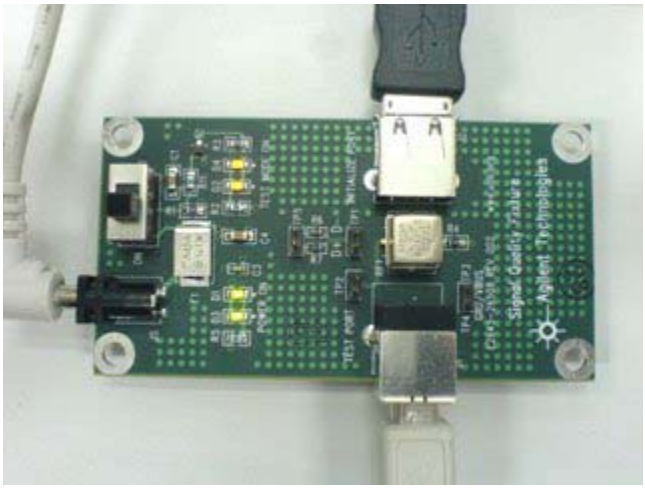

5. Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_8 J Test

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_J** from the Port Control drop down menu. Enter port number and click **[EXECUTE]** once to place the port under test into TEST_J test mode.

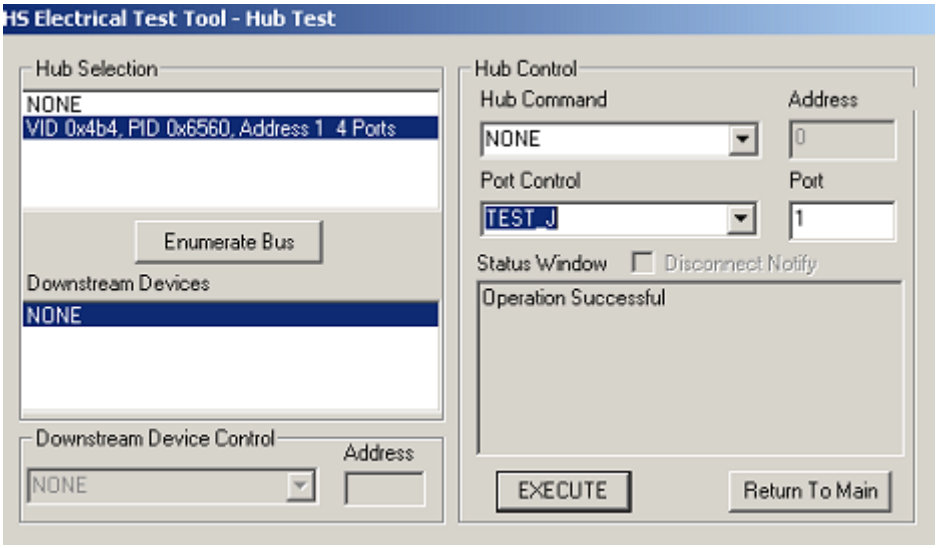

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

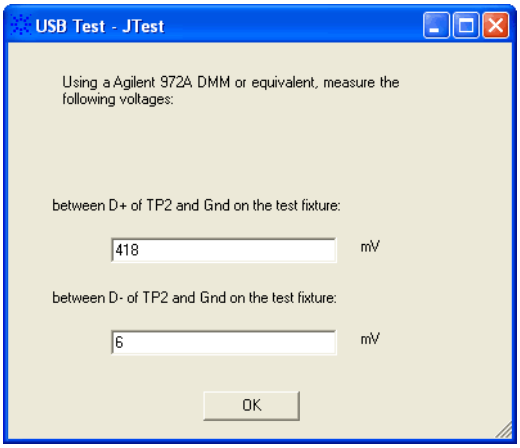
USB Test - JTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
418
mV
between D- of TP2 and Gnd on the test fixture:
6
mV
OK

EL_8 K Test

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_K** from the Port Control drop down menu. Enter port number and click **[EXECUTE]** once to place the port under test into TEST_K test mode.

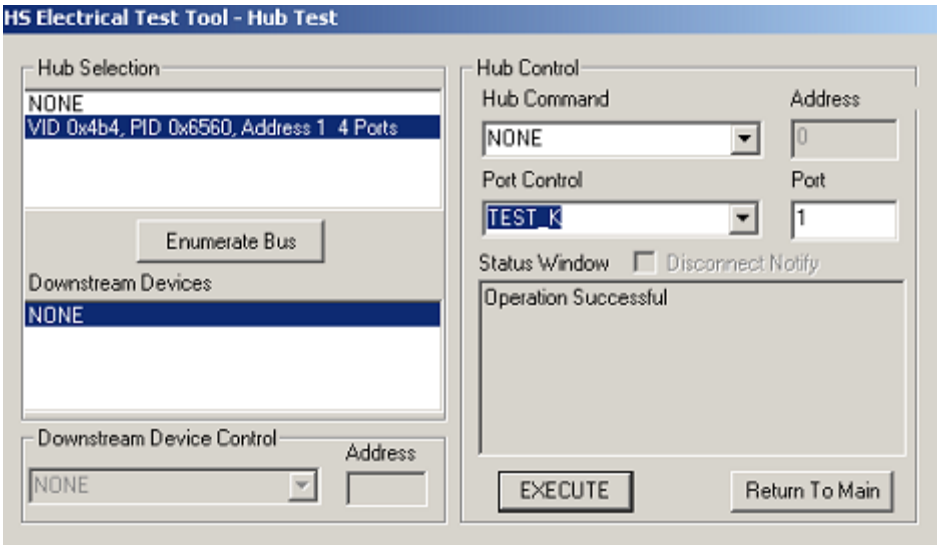

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

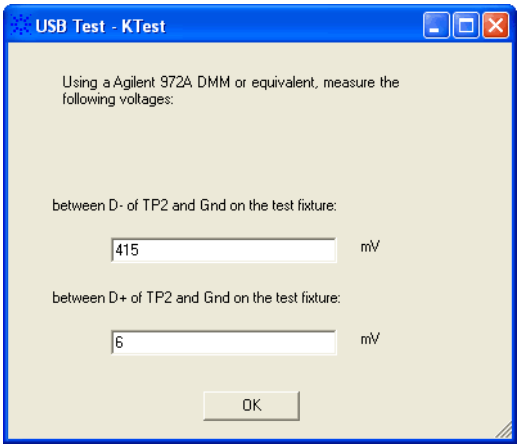
USB Test - KTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D- of TP2 and Gnd on the test fixture:
415
mV
between D+ of TP2 and Gnd on the test fixture:
6
mV
OK

EL_9 SE0_NAK Test

The USB automated test application will prompt you to perform these steps:

1 On the Hub Test menu of the HS Electrical Test Tool, click **[Enumerate Bus]** once.

2 Select **TEST_SE0_NAK** from the Port Control drop down menu. Enter port number and click **[EXECUTE]** once to place the port under test into TEST_SE0_NAK test mode.

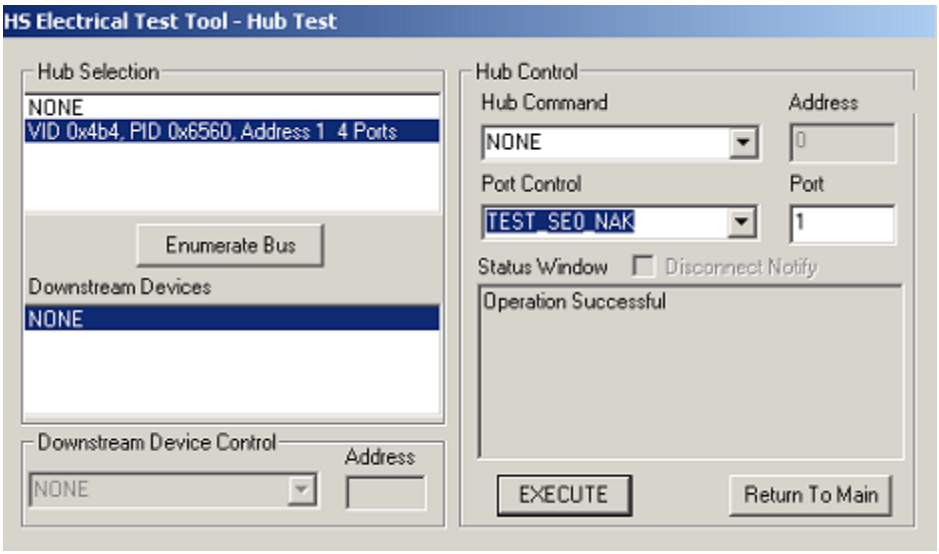

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

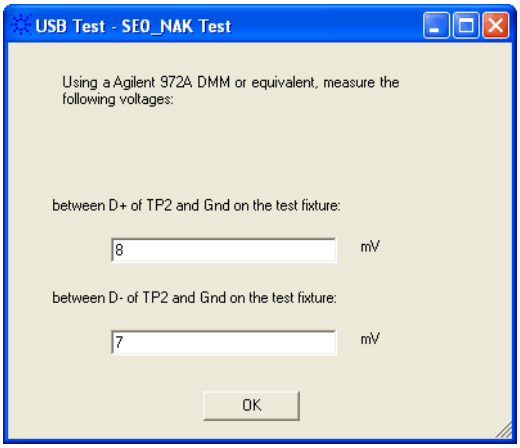
USB Test - SEQ_NAK Test
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
8
mV
between D- of TP2 and Gnd on the test fixture:
7
mV
OK

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

5 Host Hi-Speed Electrical Tests

Host Hi-Speed Signal Quality 143
Host Controller Packet Parameters 148
Host Disconnect Detect 155
Host CHIRP Timing 159
Host Suspend/Resume Timing 164
Host Test J/K, SE0_NAK 169

NOTE

To give the automated test software more flexibility in making corner case measurements (and improve test performance), the oscilloscope's memory upgrade option is recommended (Option 001 when ordered with the oscilloscope, or after purchase: E2680A for the 5485xA Series oscilloscopes, or N5404A for the 80000 and 90000A Series oscilloscopes).

Also, to reduce the bandwidth of the oscilloscope to just what is required by the USB-IF (2 GHz for USB 2.0)—this can greatly reduce system measurement noise, allowing the maximum measurement margin—the enhanced bandwidth software option is recommended for the Agilent 54855A oscilloscope (Option 008), and the noise reduction software option is recommended for the 80000 and 90000A Series oscilloscopes (Option 005 when ordered with the oscilloscope or N5403A after purchase).

In addition to the hi-speed electrical tests prescribed in this chapter, the host controller under test must also pass the following electrical compliance tests applicable to the EHCI Host Controller:

- Full speed signal quality.
- Low speed signal quality.
- Drop/Droop.

Before Running These Tests

If you haven't already performed the initial equipment set up, see "Setting Up the Equipment" on page 25.

Selecting the Host Test Environment Setup

1 In the USB automated test application, select the **Host** test environment.

2 To do automatic testing, select **Matlab** as the **Test Method**. To do manual testing, select **Both** as the **Test Method**. See page 23 for more information.

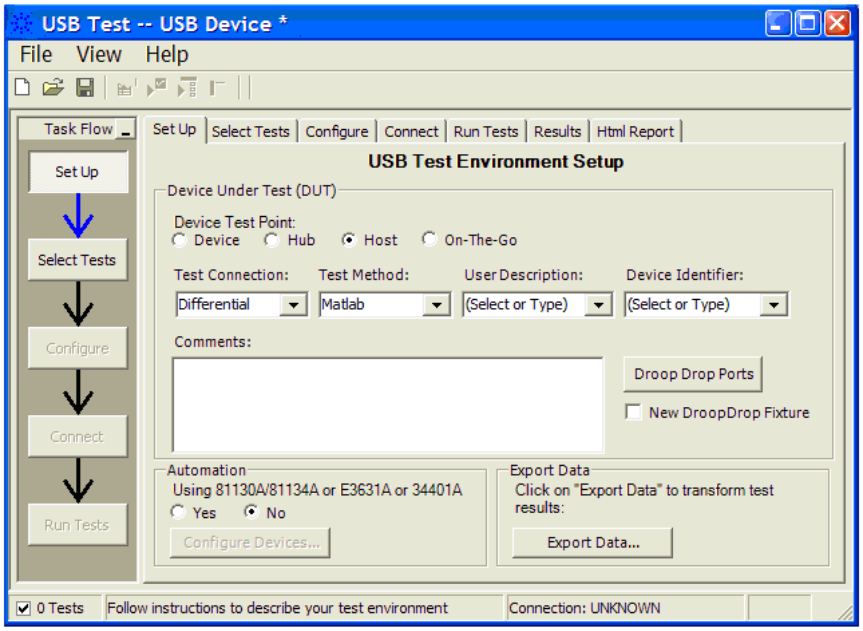

Host Hi-Speed Signal Quality

Equipment Used

Table 27 Equipment Used in Host Hi-Speed Signal Quality Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66508)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

Note: To do manual testing, choose **Both** for the **Test Method** option under the **Setup** tab. There will then be several manual tests to choose from under the **Select Test** tab.

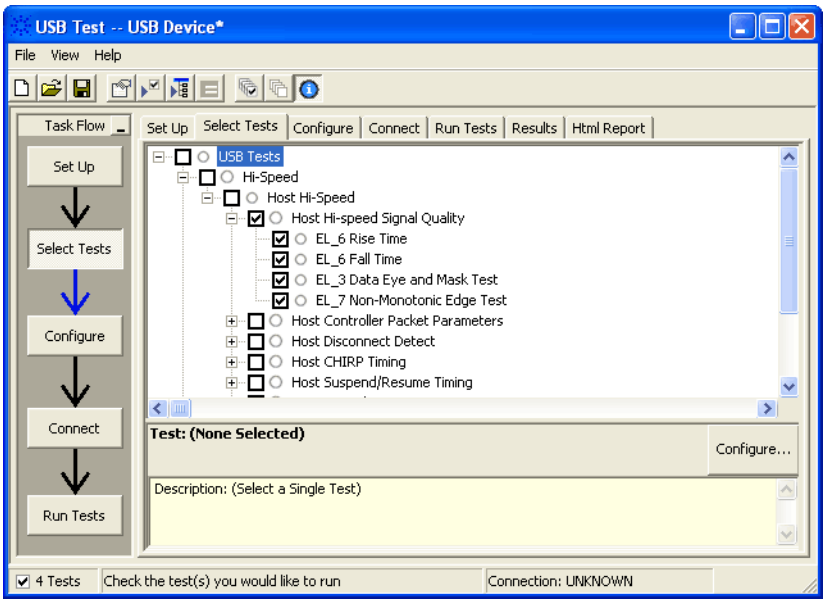

Configuring the Tests

Connecting the Equipment - Differential Connection

The USB automated test application will prompt you to perform these connection steps:

1. Attach the 5V power supply to J5 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture and verify the green Power LED is lit.
   a. Set the Test switch (S1) of the test fixture to **TEST** and verify the yellow TEST LED is lit.
2. Attach the Agilent 113xA differential probe to TP2 of the test fixture, using the damped header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+, which is the pin nearest the USB connector.
3. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

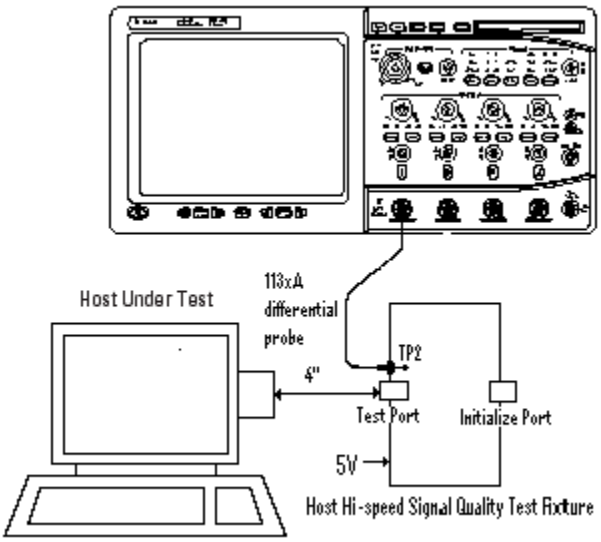

4. Check **I have completed these instructions**.

Connecting the Equipment - Single-Ended Connection

1. Attach the 5V power supply to J5 of the E2649-66402 (E2645-66508 if you are using the old fixture) Hi-Speed signal quality test fixture. Verify the green Power LED is lit.
2. Set the Test switch (S1) of the test fixture to TEST and verify that the yellow TEST LED is lit.

3 Attach the SMA cables to SMA connectors D+ and D- on the test fixture.

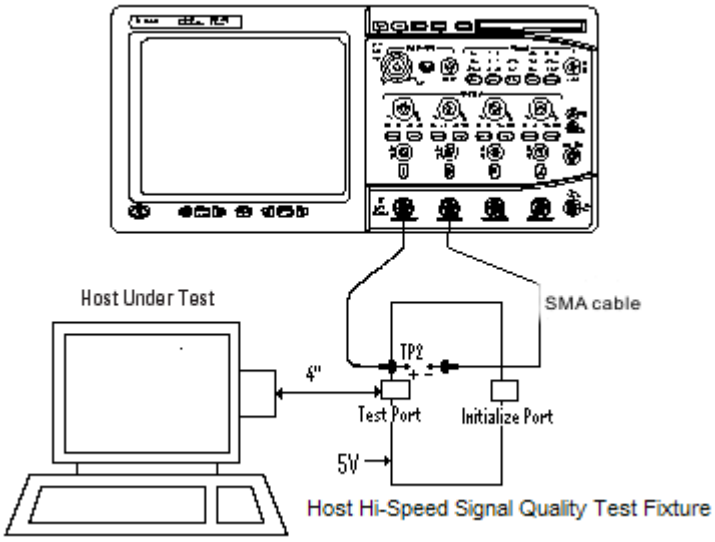

4 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer.

2 Select **Host Controller/System** and click the **[TEST]** button to enter the Host Test menu.

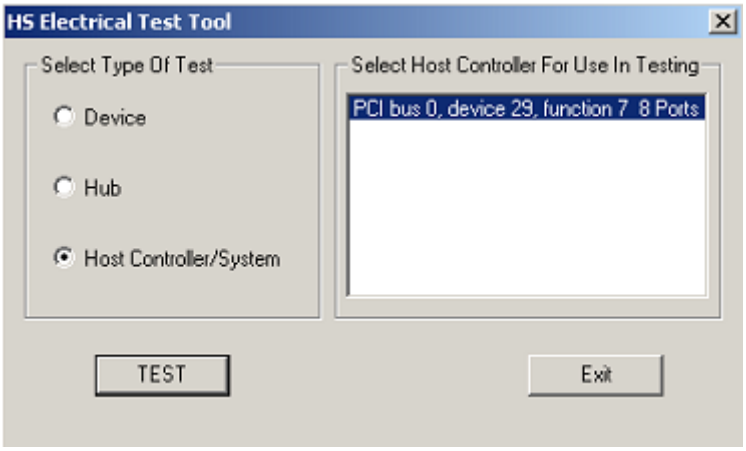

3 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 Connect the [TEST PORT] of the E2649-66402 Host Hi-Speed Signal Quality test fixture (E2645-66508 if you are using the old fixture) into the port under test of the host controller, using the 4" USB cable. The host controller here refers to the Hi-speed Electrical Test Bed Computer that has the HS Electrical Test Tool on it.

2 Select **TEST_PACKET** from the Port Control drop down menu.

3 Enter the port number of the port under test and click **[EXECUTE]**. This forces the port under test to continuously transmit test packets.

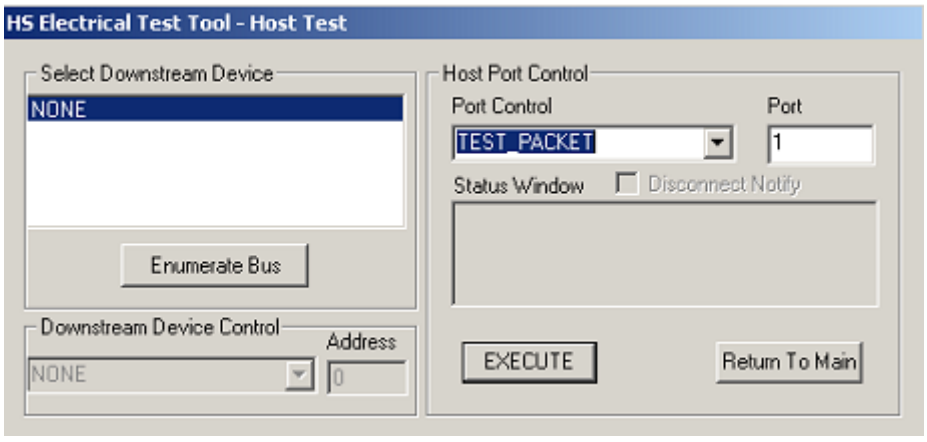

You should see the transmitted test packet on the oscilloscope as below.

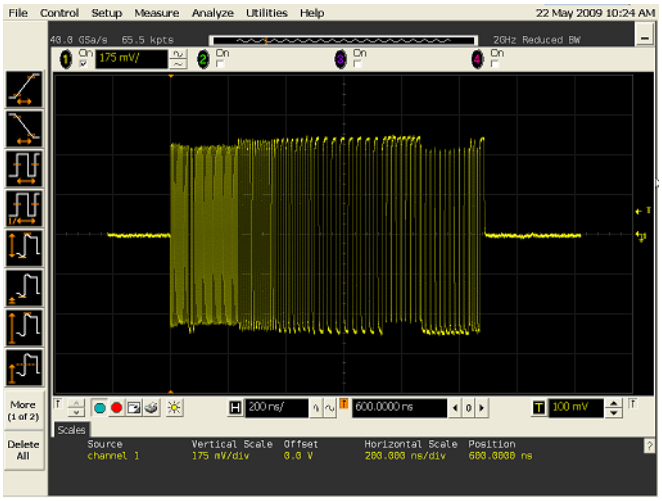

4 Click **OK** to close the Test Instructions dialog.

EL_6 Rise Time

EL_6 Fall Time

EL_3 Data Eye and Mask Test

After viewing the test results, click **OK** to close the Test Instructions dialog.

EL_7 Non-Monotonic Edge Test

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host Controller Packet Parameters

Equipment Used

Table 28 Equipment Used in Host Controller Packet Parameters Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66507)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Device Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66401 (old fixture P/N E2645-66507)
1	Hi-Speed USB hub	Any listed on USB-IF web site

Selecting the Tests

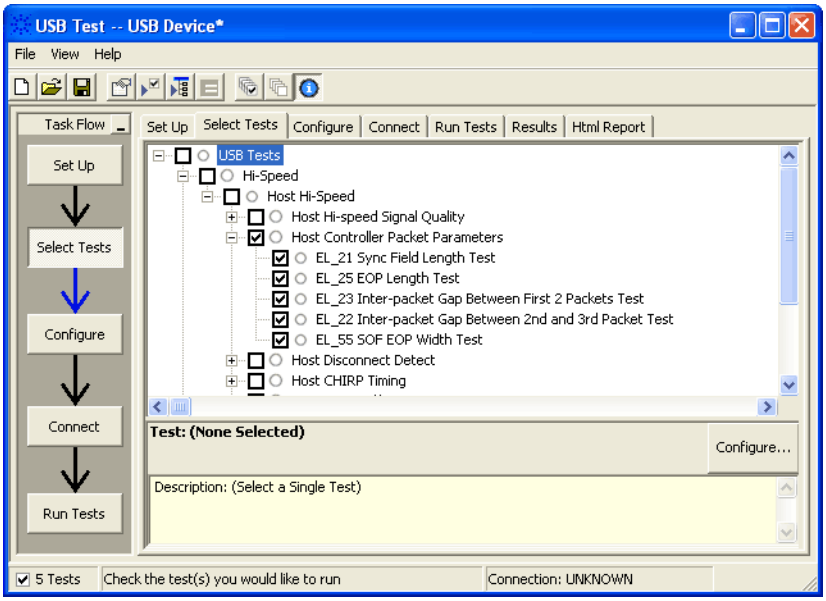

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect the E2649-66401 (E2645-66507 if you are using the old fixture) Device Hi-Speed Signal Quality test fixture ([TEST PORT]) into B receptable of a known good hi-speed hub, using the 4" USB cable.

   a Apply power to the known good hub. Do not apply 5V to the test fixture.

2 Attach the Agilent 113xA differential probe to D+/D- of TP2 on the test fixture, using a damped header adapter (the header adapter is only needed if you are using the old test fixture).

3 Connect the test fixture ([INIT PORT]) into the host controller under test, using USB cable.

4 If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

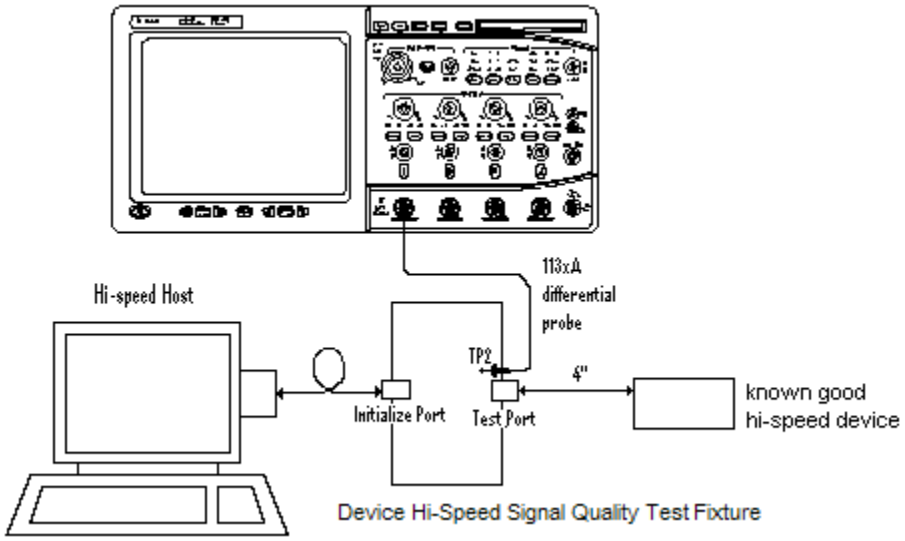

5 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Click **[Enumerate Bus]** and verify that the device enumerates properly.

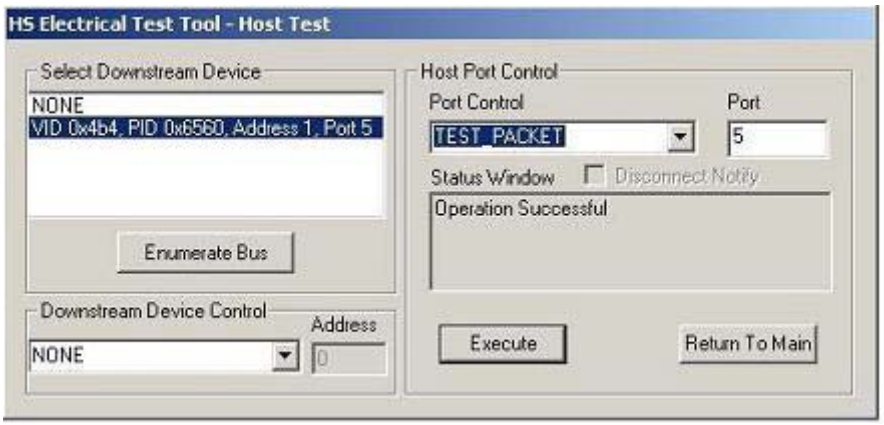

2 Using the oscillopscope, verify SOFs (Start of Frame packets) are being transmitted by the port under test. You may need to lower the trigger level to somewhat below 400 mV to obtain a trigger.

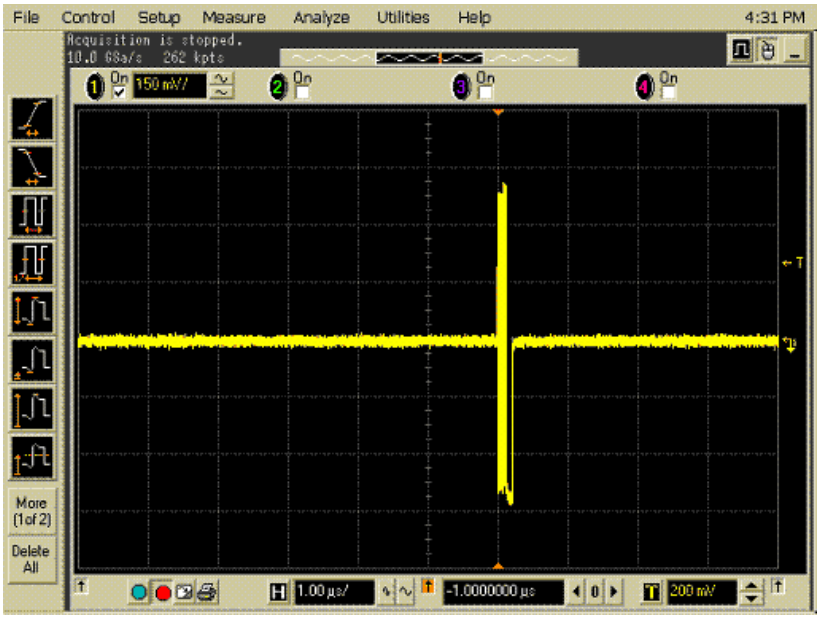

3 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 In the Host Test menu of the HS Electrical Test Tool software, ensure that the device is selected.

2 Select **SINGLE STEP GET DEV DESC** from the Downstream Device Control menu and click **[EXECUTE]**.

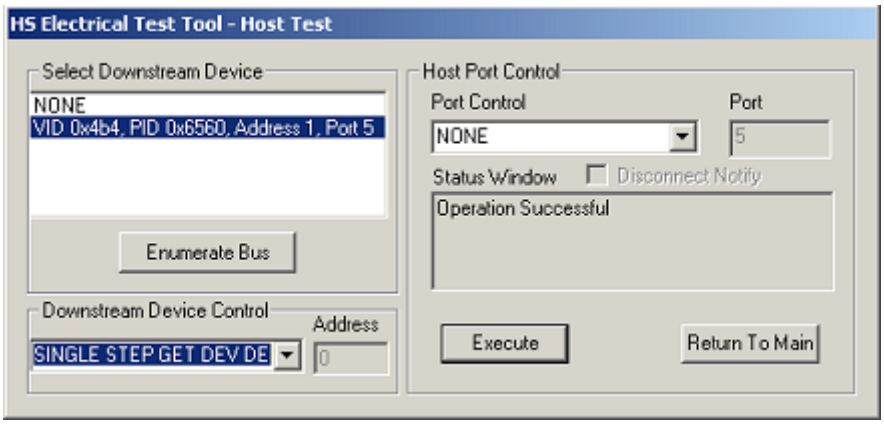

You should see the transmitted test packet on the oscilloscope as below.

File Control Setup Measure Analyze Utilities Help
22 May 2009 11:10 AM
10.0 GSa/s 262 kpts
134 mV/
500 ns/
600.0000 ns
170 mV
More (1 of 2)
Delete All
Scales
Source Vertical Scale Offset Horizontal Scale Position
channel 1 134 mV/div 0.0 V 500.000 ns/div 600.0000 ns

3 Click **OK** to close the Test Instructions dialog.

EL_21 Sync Field Length Test

EL_25 EOP Length Test

EL_23 Inter-packet Gap Between First 2 Packets Test

EL_22 Inter-packet Gap Between 2nd and 3rd Packet Test

Test Instructions, Part 3

The USB automated test application will prompt you to perform these steps:

1 In the Host Test menu of the HS Electrical Test Tool software, click **[STEP]** once again.

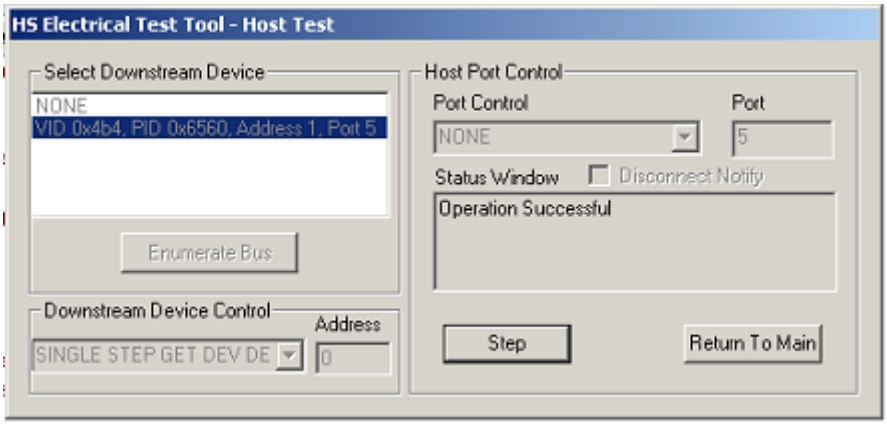

You should see the transmitted test packet on the oscilloscope as below.

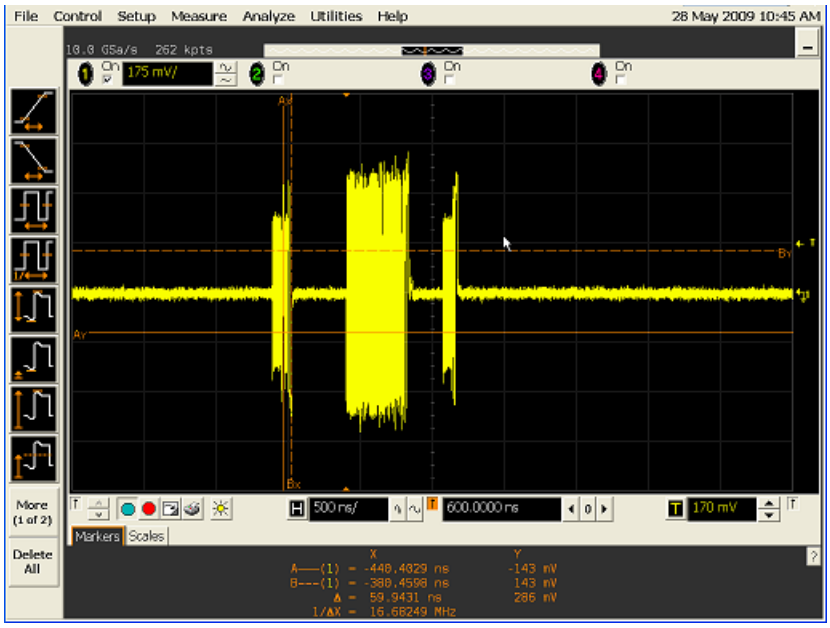

2 Click **OK** to close the Test Instructions dialog.

EL_55 SOF EOP Width Test

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Using the oscillopscope, verify SOFs(Start of Frame packets) are being transmitted by the port under test. You may need to lower the trigger level to somewhat below 400mV to obtain a trigger.

2 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host Disconnect Detect

Equipment Used

Table 29 Equipment Used in Host Disconnect Detect Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
1	Differential probe	Agilent 113xA with E2699A or E2678A
1	Header adapter (only needed if you are using the old test fixture - E2645-66506)	Agilent 01131-68703
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Disconnect test fixture and 4" USB cable	Agilent E2649-66404 (old fixture P/N E2645-66506)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

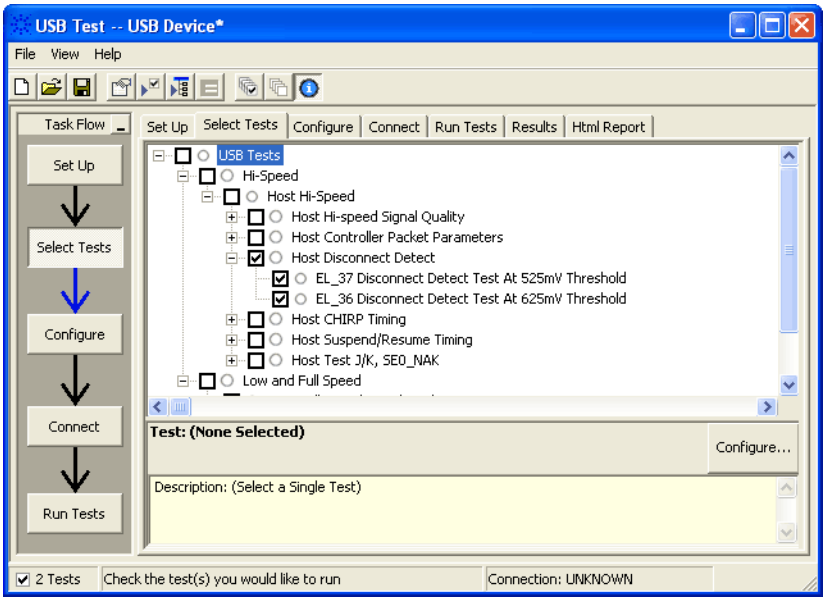

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Attach the 5V power supply to E2649-66404 (E2645-66506 if you are using the old fixture) Disconnect test fixture (J5).

2 Attach the Agilent 113xA differential probe to TP2 of the test fixture, using a damped header adapter (the header adapter is only needed if you are using the old test fixture). Ensure the + polarity on the probe lines up with D+, which is the pin nearest the USB connector.

3 Set the TEST switch to the Test position. This sets the test fixture to emulate a must-not-disconnect threshold.

   a Verify both the green Power LED and yellow Test LED are lit.

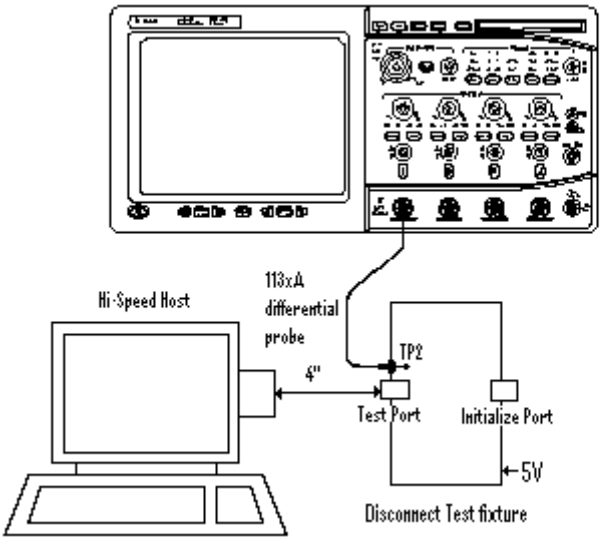

4 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Attach the [TEST PORT] of the test fixture to the port under test, using the 4" USB cable.

2 In the Host Test Menu of the HS Electrical Test Tool, select **TEST_FORCE_ENABLE** from the Port Control drop down menu.

3 Enter the port number and click **[EXECUTE]** once and ensure operation is successful in the Status Window.

4 Click the **Disconnect Notify** check box to monitor the disconnect status in the Status Window.

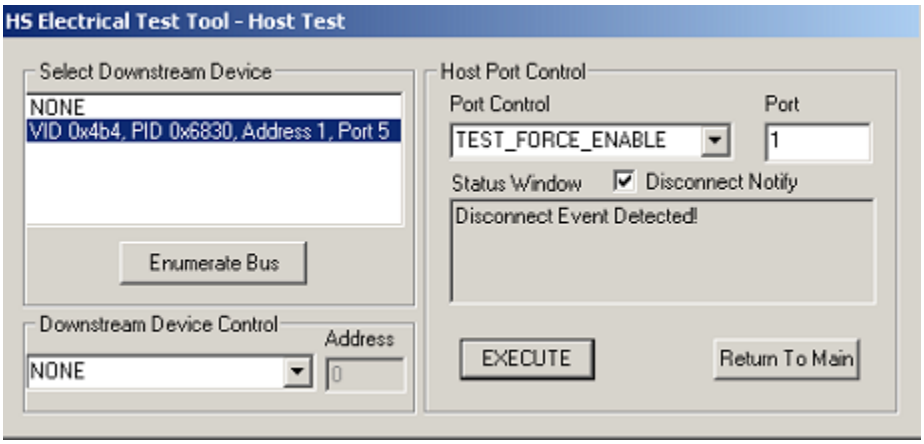

5 Click **OK** to close the Test Instructions dialog.

EL_37 Disconnect Detect Test At 525mV Threshold

The USB automated test application will prompt you to answer the question “Does the Status Window display Disconnect Event Detected?”

EL_36 Disconnect Detect Test At 625mV Threshold

The USB automated test application will prompt you to: Set the Test switch of the E2649-66404 Disconnect test fixture (E2645-66506 if you are using the old fixture) to the Normal position and verify the yellow TEST LED (D2) is not lit.

The USB automated test application will prompt you to answer the question “Does the Status Window now display Disconnect Event Detected?”

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host CHIRP Timing

Equipment Used

Table 30 Equipment Used in Host CHIRP Timing Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	Hi-Speed USB device	Any listed on USB-IF web site
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

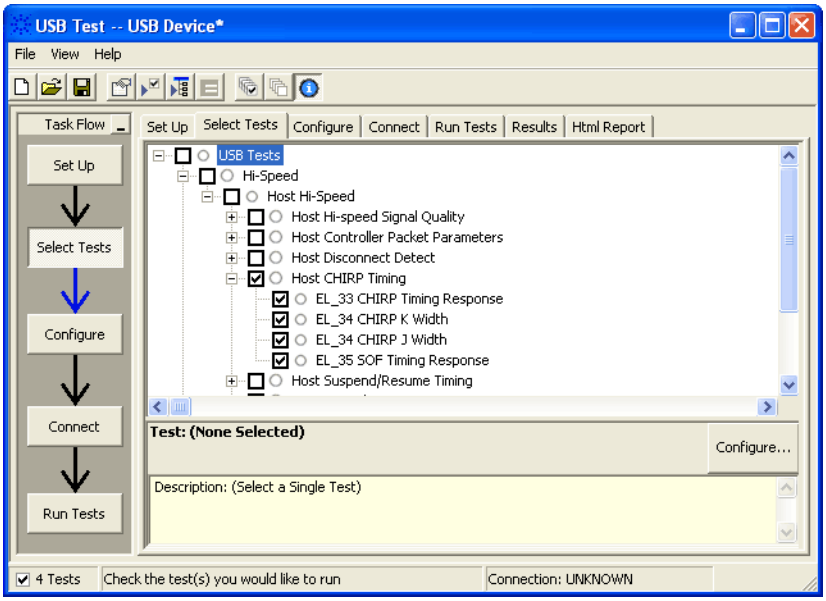

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Replace the E2649-66404 (E2645-66506 if you are using the old fixture) Disconnect test fixture with the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture. Do not apply 5V to the test fixture.
2. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture.
3. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2. D+ on TP2 is the pin closest to the USB connector.
4. Connect both probe grounds to leads COM (leads TP5 on the old fixture).
5. Connect a known good Hi-Speed device into the [INIT PORT] of the test fixture, using the 5-meter USB cable.
6. Connect the [TEST PORT] on the fixture to the port under test, using the 4" USB cable.
7. Apply power to the known good Hi-Speed device.
8. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

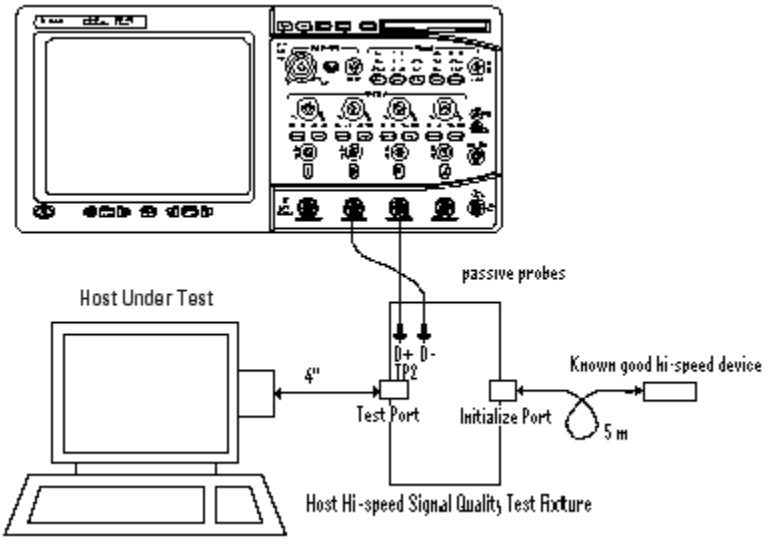

9 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 On the HS Electrical Test Tool software, click **[Enumerate Bus]** once. You should capture the CHIRP handshake as in the below figure.

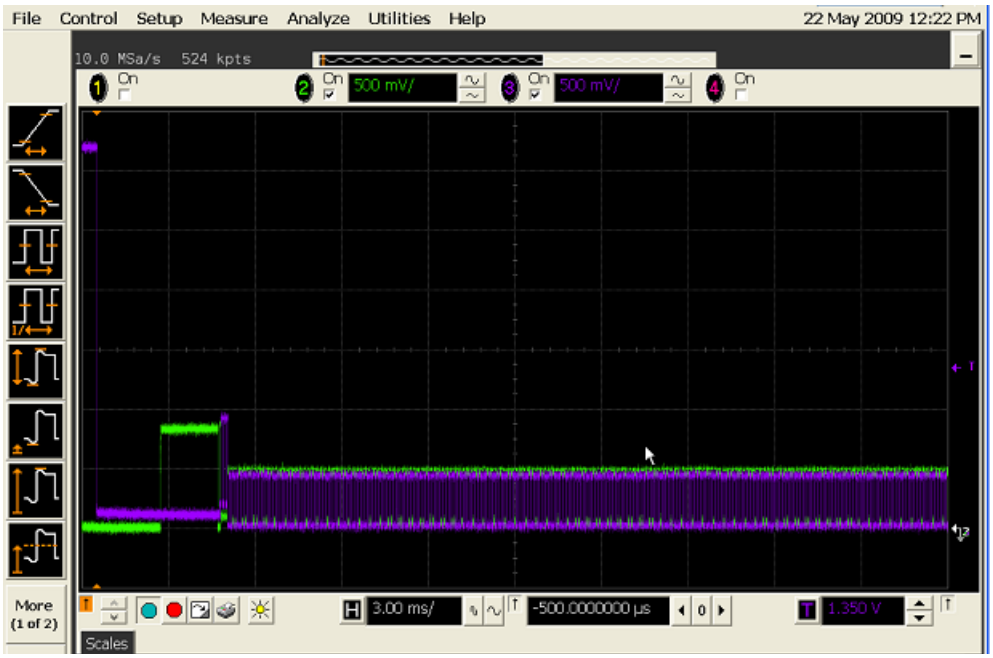

2 Click **OK** to close the Test Instructions dialog.

EL_33 CHIRP Timing Response

EL_34 CHIRP K Width

EL_34 CHIRP J Width

EL_35 SOF Timing Response

The USB automated test application will prompt you to: Unplug the known good device and reattach it.

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once. The oscilloscope should capture as in the below figure.

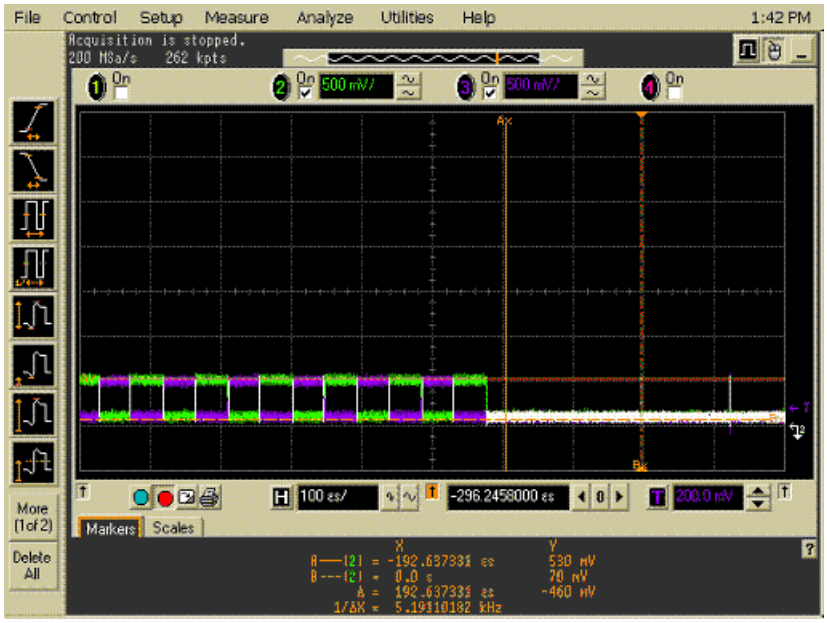

2 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host Suspend/Resume Timing

Equipment Used

Table 31 Equipment Used in Host Suspend/Resume Timing Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series
2	Passive or active probes	Agilent E2697A with 10073C, or 1156A
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	Hi-Speed USB device	Any listed on USB-IF web site
1	5 meter USB 2.0 hi-speed cable	Any listed on USB-IF web site

Selecting the Tests

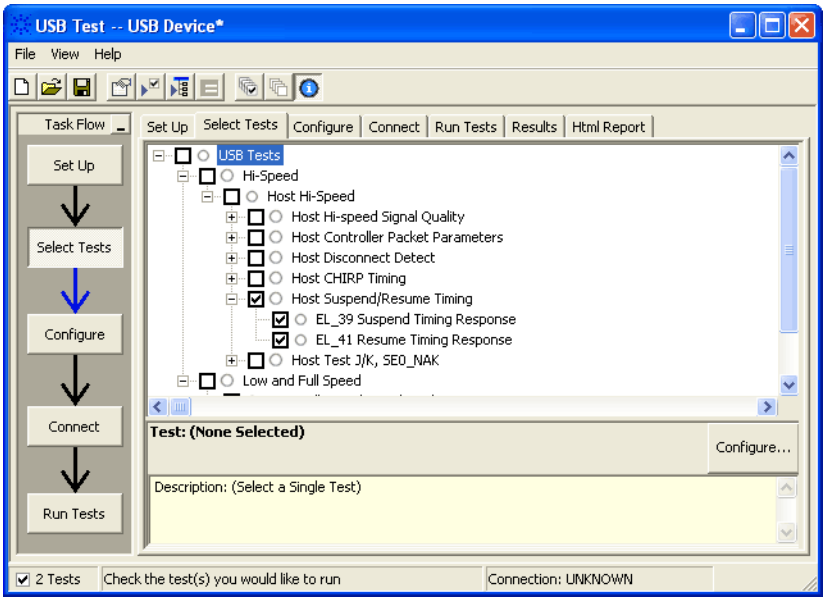

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1. Replace the E2649-66404 (E2645-66506 if you are using the old fixture) Disconnect test fixture with the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture. Do not apply 5V to the test fixture.
2. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 2 to the D- pin at TP2 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host Hi-Speed Signal Quality test fixture.
3. Connect the E2697A with 10073C passive probe or the 1156A active probe on Channel 3 to the D+ pin at TP2. D+ on TP2 is the pin closest to the USB connector.
4. Connect both probe grounds to leads COM (leads TP5 on the old fixture).
5. Connect a known good Hi-Speed device into the [INIT PORT] of the test fixture, using the 5-meter USB cable.
6. Connect the [TEST PORT] on the fixture to the port under test, using the 4" USB cable.
7. Apply power to the known good Hi-Speed device.
8. If you are using the new fixture, please terminate the SMA connectors with 50 Ohm terminators.

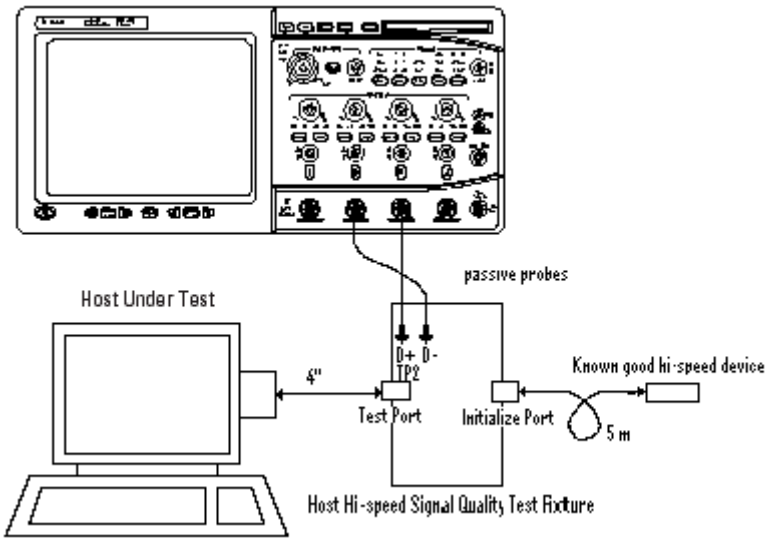

9 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_39 Suspend Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once.

2 Select **SUSPEND** from the Port Control drop down menu.

3 Enter the port number. Click **[EXECUTE]** once to place the port into suspend. The captured transition should be as in the figure below.

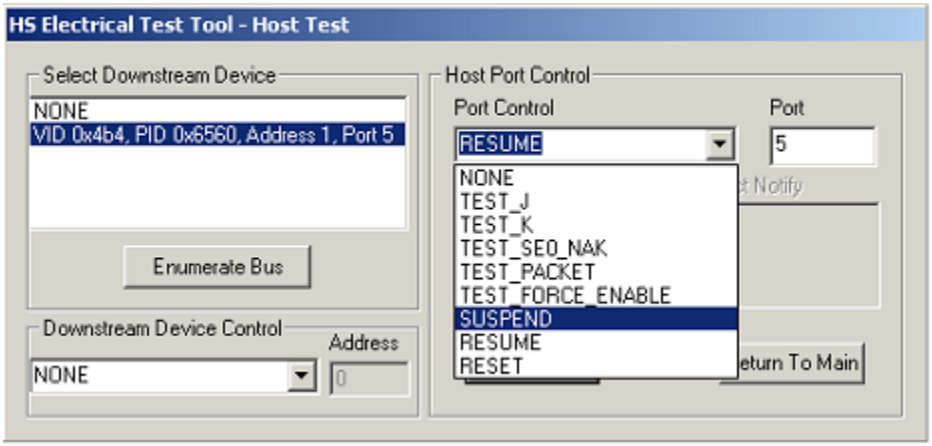

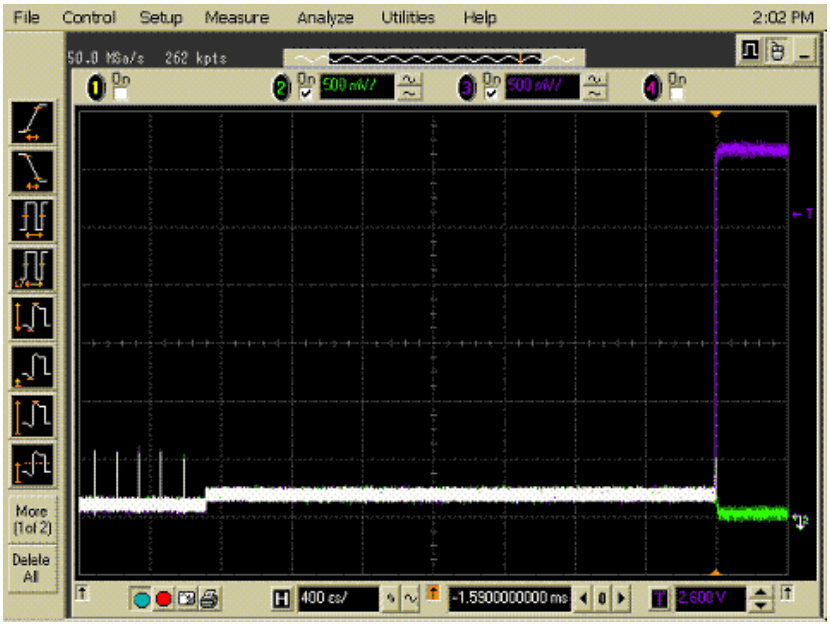

4 Click **OK** to close the Test Instructions dialog.

EL_41 Resume Timing Response

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, select **RESUME** from the Port Control drop down menu.

2 Enter the port number. Click **[EXECUTE]** once to resume the port.

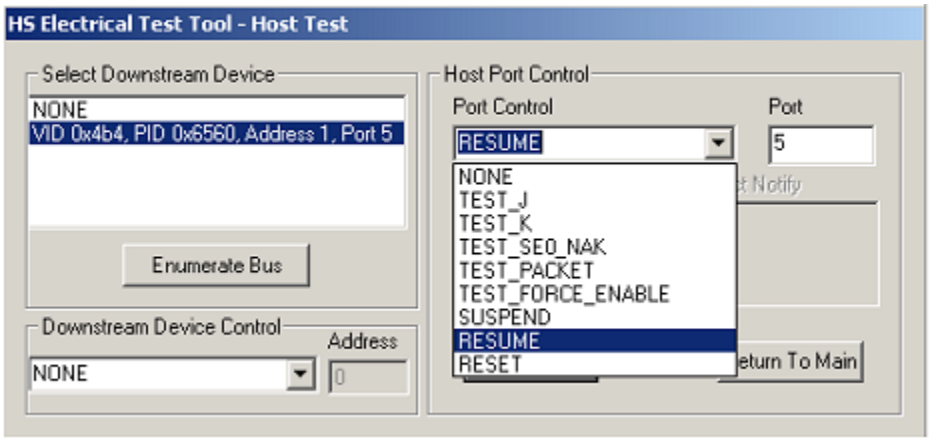

The captured transition should be as in the figure below.

File Control Setup Measure Analyze Utilities Help
26 May 2009 11:04 AM
1.00 GSa/s 524 kpts
500 mV/
Setup Channel 3
More (1 of 2)
Delete All
50.0 µs/
200.0000000 µs
1.80 V
Scales
Source Vertical Scale Offset Horizontal Scale Position
channel 2 500 mV/div 1.5300 V 50.0000 µs/div 230.0000000 µs
channel 3 500 mV/div 1.5300 V 50.0000 µs/div 230.0000000 µs

3 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host Test J/K, SE0_NAK

Equipment Used

Table 32 Equipment Used in Host Test J/K, SE0_NAK Tests

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	Host test bed computer	Any computer with hi-speed USB ports
1	Host Hi-Speed Signal Quality test fixture and 4" USB cable	Agilent E2649-66402 (old fixture P/N E2645-66508)
1	5V power supply	Agilent 0950-2546 or equivalent

Selecting the Tests

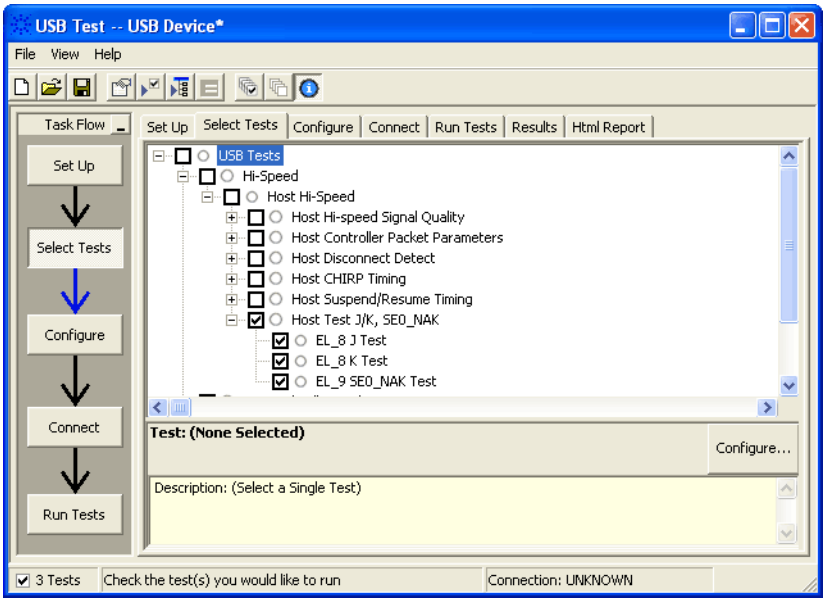

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Attach the 5V power supply to J5 of the E2649-66402 (E2645-66508 if you are using the old fixture) Host High-Speed Signal Quality test fixture. Verify the green Power LED is lit. Place the TEST switch (S1) in the Test position and the yellow Test LED is lit.

2 Connect the [TEST PORT] of the test fixture into the port of under test, using the 4" USB cable.

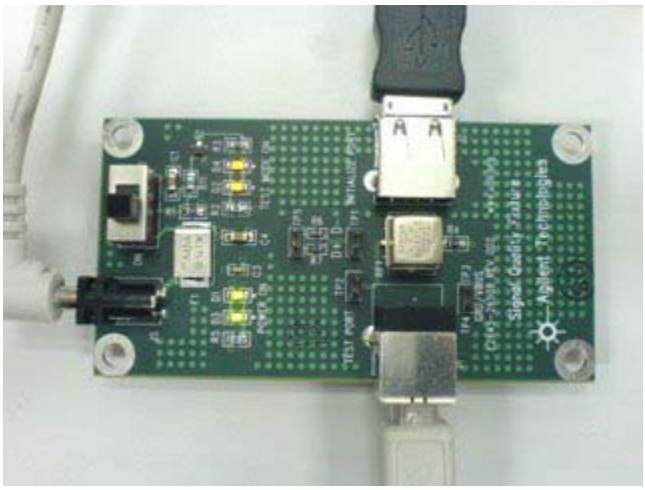

3 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

EL_8 J Test

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, select **TEST_J** from the Port Control drop down menu.

2 Enter the port number. Click **[EXECUTE]** once to place the port under test into the TEST_J test mode.

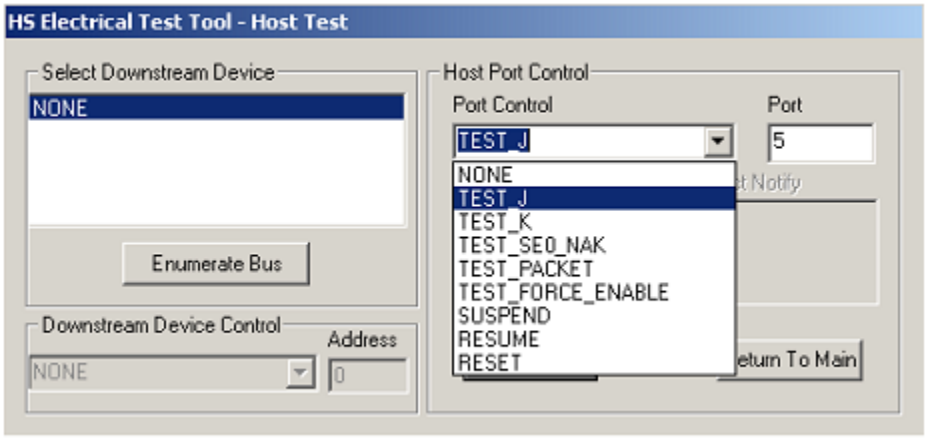

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

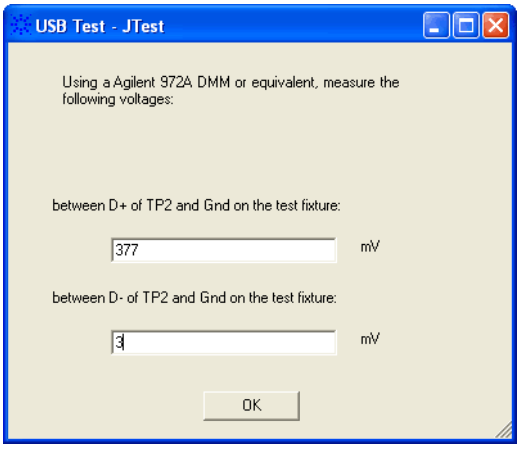
USB Test - JTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
377
mV
between D- of TP2 and Gnd on the test fixture:
3
mV
OK

EL_8 K Test

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, select **TEST_K** from the Port Control drop down menu.

2 Enter the port number. Click **[EXECUTE]** once to place the port under test into the TEST_K test mode.

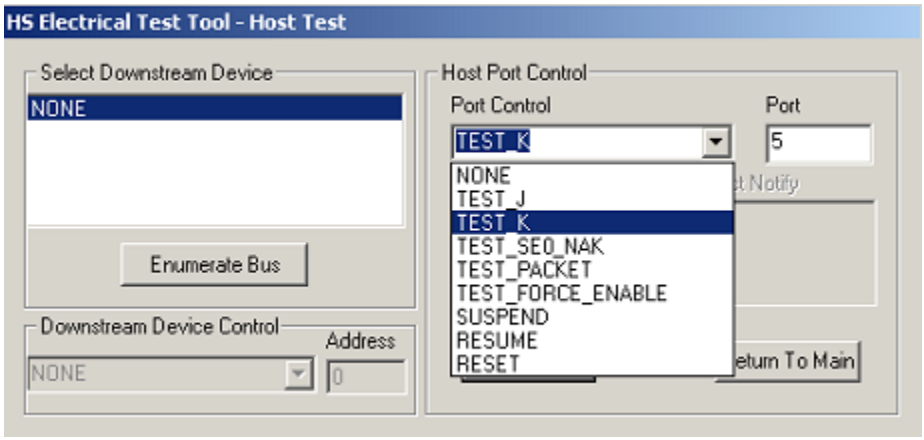

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

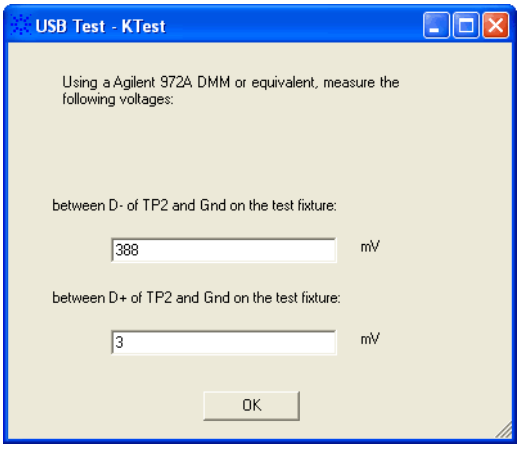
USB Test - KTest
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D- of TP2 and Gnd on the test fixture:
388
mV
between D+ of TP2 and Gnd on the test fixture:
3
mV
OK

EL_9 SE0_NAK Test

The USB automated test application will prompt you to perform these steps:

1 On the Host Test menu of the HS Electrical Test Tool software, select **TEST_SE0_NAK** from the Port Control drop down menu.

2 Enter the port number. Click **[EXECUTE]** once to place the port under test into the TEST_SE0_NAK test mode.

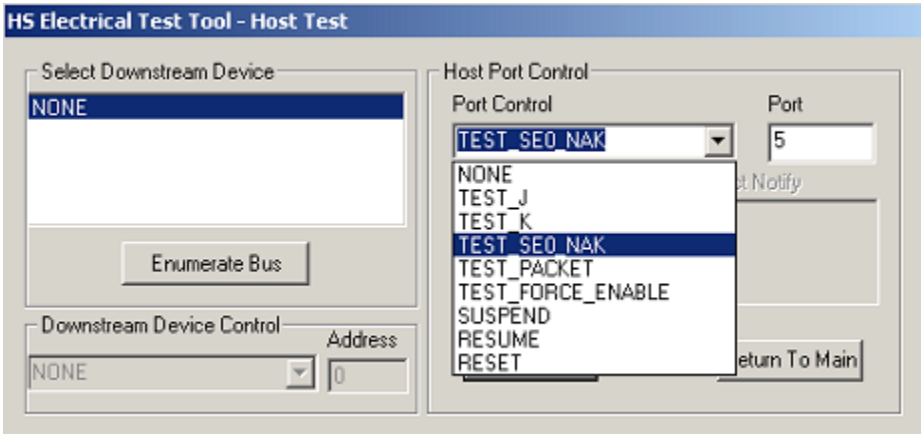

3 Click **OK** to close the Test Instructions dialog.

The USB automated test application will prompt you for the following voltage measurements:

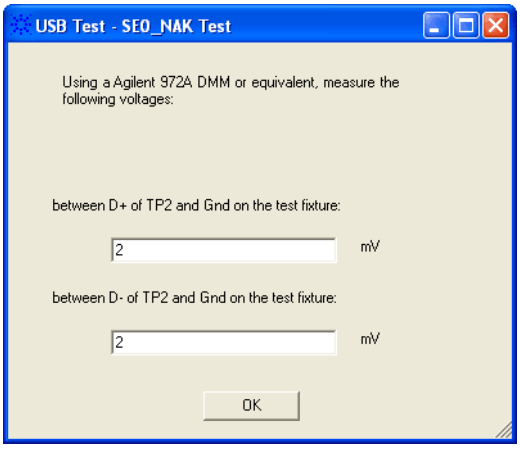
USB Test - SE0_NAK Test
Using a Agilent 972A DMM or equivalent, measure the following voltages:
between D+ of TP2 and Gnd on the test fixture:
2
mV
between D- of TP2 and Gnd on the test fixture:
2
mV
OK

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

6 Troubleshooting Hi-Speed Test Failures

In the Configure tab's Debug Mode, there are several options that can help you troubleshoot hi-speed test failures:

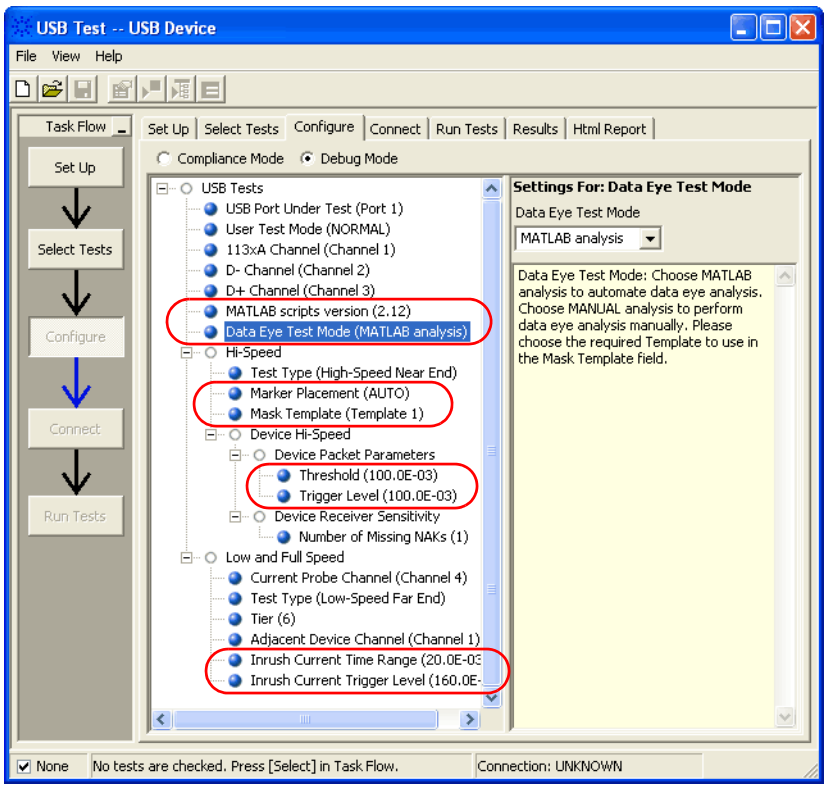
USB Test -- USB Device
File View Help
Task Flow
Set Up
Select Tests
Configure
Connect
Run Tests
Set Up | Select Tests | Configure | Connect | Run Tests | Results | Html Report
Compliance Mode
Debug Mode
USB Tests
USB Port Under Test (Port 1)
User Test Mode (NORMAL)
113xA Channel (Channel 1)
D- Channel (Channel 2)
D+ Channel (Channel 3)
MATLAB scripts version (2.12)
Data Eye Test Mode (MATLAB analysis)
Hi-Speed
Test Type (High-Speed Near End)
Marker Placement (AUTO)
Mask Template (Template 1)
Device Hi-Speed
Device Packet Parameters
Threshold (100.0E-03)
Trigger Level (100.0E-03)
Device Receiver Sensitivity
Number of Missing NAKs (1)
Low and Full Speed
Current Probe Channel (Channel 4)
Test Type (Low-Speed Far End)
Tier (6)
Adjacent Device Channel (Channel 1)
Inrush Current Time Range (20.0E-03
Inrush Current Trigger Level (160.0E-
Settings For: Data Eye Test Mode
Data Eye Test Mode
MATLAB analysis
Data Eye Test Mode: Choose MATLAB analysis to automate data eye analysis. Choose MANUAL analysis to perform data eye analysis manually. Please choose the required Template to use in the Mask Template field.
None
No tests are checked. Press [Select] in Task Flow.
Connection: UNKNOWN

Figure 3 Debug Mode Options for Hi-Speed Testing

- Marker Placement — Lets you manually adjust the markers around the required packet/pattern before proceeding with the test analysis. When "MANUAL" is selected, the automated search for the correct pattern/packet to analyze is turned off.
- Data Eye Test Mode — Lets you perform the eye test without using the MATLAB scripts. The oscilloscope will form the eye diagram using the E2688A serial data analysis (SDA) and clock recovery software option.

- Mask Template — If you choose to use the SDA software option to perform data eye tests, you need to select the appropriate mask template to use for the eye diagram.
- MATLAB scripts version — Allows you to select between MATLAB scripts version 2.10 or 2.12.
- Threshold — Allows you to select or enter the voltage level to use when measuring SYNC field or EOP widths. Noisy signals may have ripples at the end of the EOP; therefore, a higher level should be chosen to avoid the ripples.
- Trigger Level — Allows you to select or enter the voltage level to use when triggering on the inter-packet gaps. Noisy signals may have low amplitudes; therefore, the trigger level should be reduced.
- Inrush Current Time Range — Allows you to select the total time range to capture inrush current.
- Inrush Current Trigger Level — Allows you to select the trigger level to use to capture inrush current. Self-powered devices may draw very little current, so the trigger level should be reduced.

Also useful for debugging problems is the EZJIT analysis software option for the oscilloscope.

7 Low and Full Speed Tests

Droop/Drop Test 178
Inrush Current Test 197
Signal Integrity Test 200
Back-Voltage Test Before Enumerate 221
Back-Voltage Test After Enumerate 224

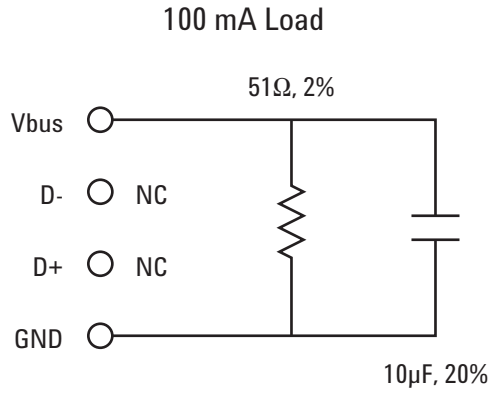

Figure 4 100 mA Load Board Schematic

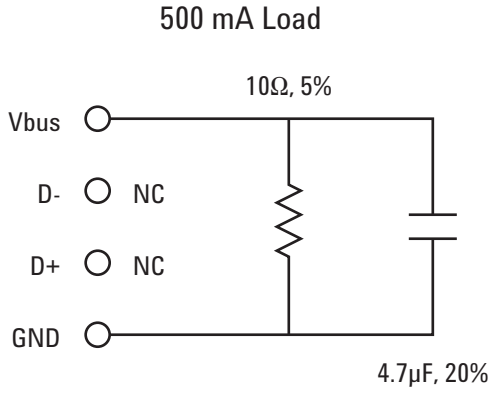

Figure 5 500 mA Load Board Schematic

Droop/Drop Test

The Drop test is a measure of a hub's ability to host full load current while keeping the output voltage above spec. To perform this test, V_{BUS} is measured with all downstream ports loaded with 500 mA loads (for host and self powered hubs) or 100 mA loads (for bus powered hubs). The lowest value measured across all ports must be between 4.75 V and 5.25 V for host and self powered hubs or it must be greater than or equal to 4.4 V for bus powered hubs.

The Droop test is a transient test on adjacent ports. When a device is hot plugged into another port, the droop in V_{BUS} supplied to a port must be less than or equal to 220 mV for host, self powered, and bus powered hubs.

New E2649-66405 Droop/Drop Test Fixture

Below is a picture of the new E2649-66405 Droop/Drop test fixture along with labels for each of its main components.

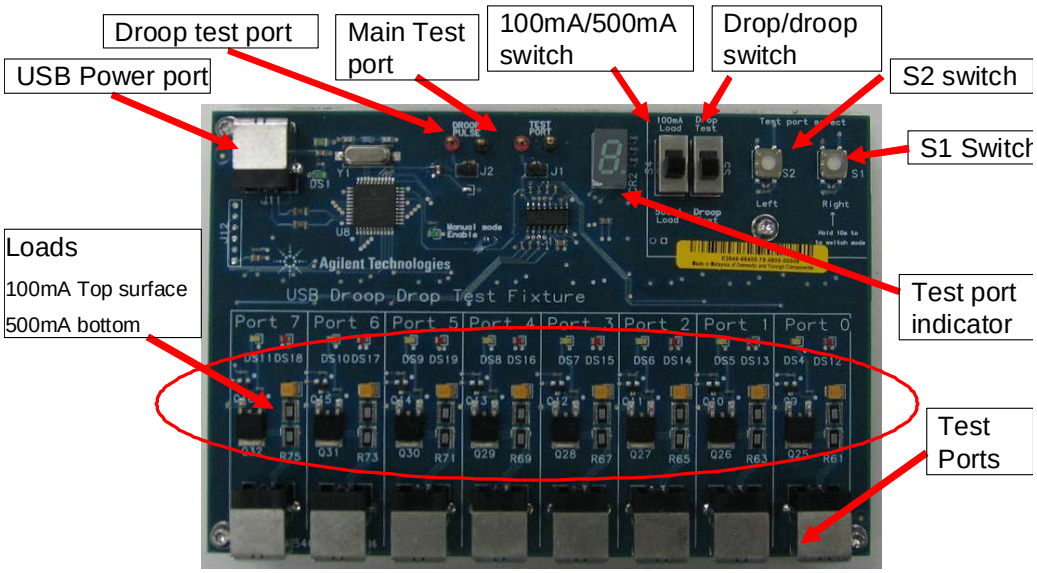

To begin, plug the USB cable from your oscilloscope into the USB Power port to power the test fixture. The DS1 LED should illuminate (green LED). See the picture below for the location of DS1 (the picture is zoomed in on the upper left hand corner of the test fixture).

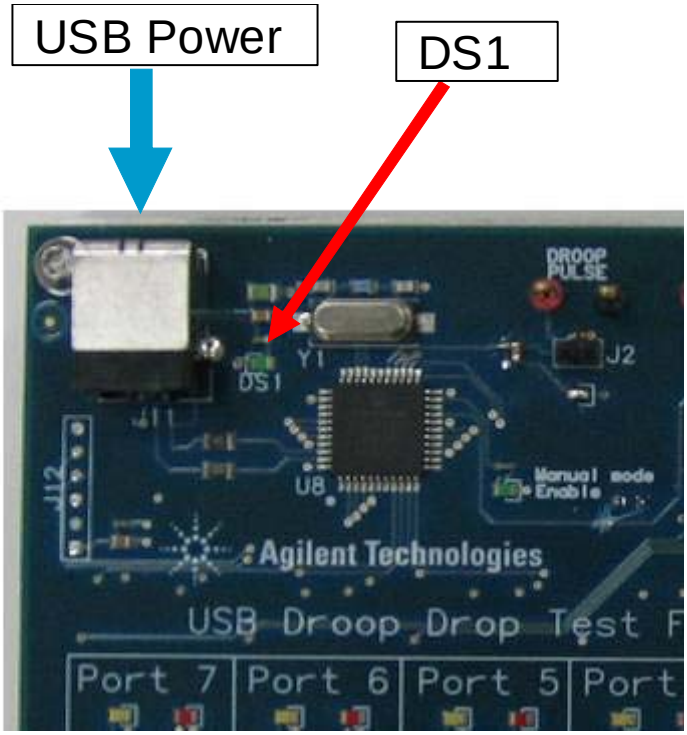

There are several switches/buttons that are used for general control of the test fixture. These include (see picture below):

- Switch S5 allows you to select either the Droop or Drop test.
- Switch S4 allows you to select either the 100 mA or 500 mA load.
- Press and hold S1 for at least three seconds to turn the test fixture on.
- While pressing and holding S2, press S1 to turn the test fixture off.

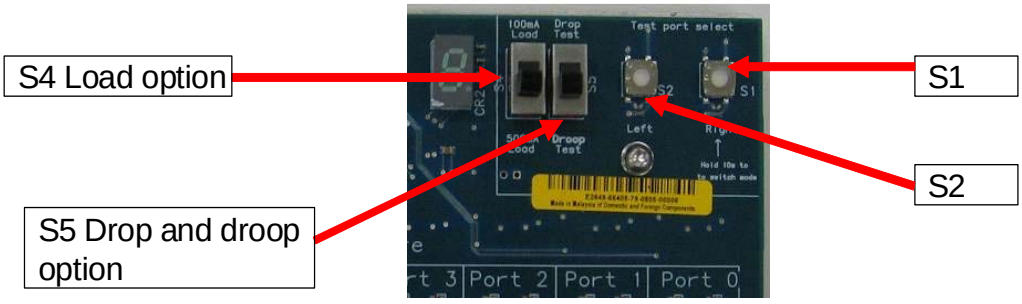

You are now ready to begin the Drop or Droop tests. Continue to read this chapter for specific instructions on performing each of these tests.

Host and Self-Powered Hubs

Equipment Used

Table 33 Equipment Used in Host and Self-Powered Hubs Droop/Drop Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA, 9000A Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 9000A Series, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	Droop/Drop test fixture	Agilent E2649-66405
1	SQiDD board[1]	Agilent E2646A/B
1	500 mA load board[1]	(see the schematic in Figure 5 on page 177)
1	1 meter USB cable	Any listed on USB-IF web site

[1] If you have the Agilent E2649-66405 Droop/Drop test fixture, you do not need the SQiDD board or the 500 mA load board.

Selecting the Tests

Note: To do manual testing, choose **Both** for the **Test Method** option under the **Setup** tab. There will then be several manual tests to choose from under the **Select Test** tab.

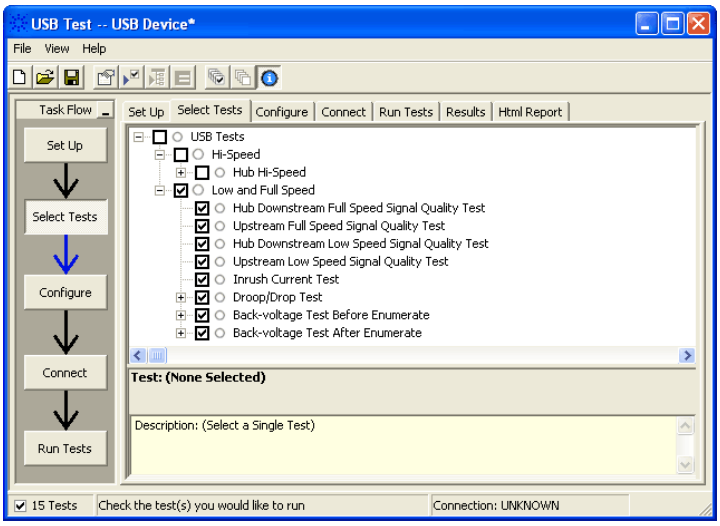

Configuring the Tests

Drop Test - Connecting and Using the New E2649-66405 Droop/Drop Test Fixture

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000, and 90000A Series oscilloscopes, use E2697A high-impendance converter with 10:1 passive probes, or 1156A active probes. The picture after Step 12 shows the connection setup.

2 Click on the **Set Up** tab and check the **New DroopDrop Fixture** box. Also click on the **Droop Drop Ports** button and select the test ports you want to use on the fixture. Select either **Hub** or **Host** as your **Device Test Point**.

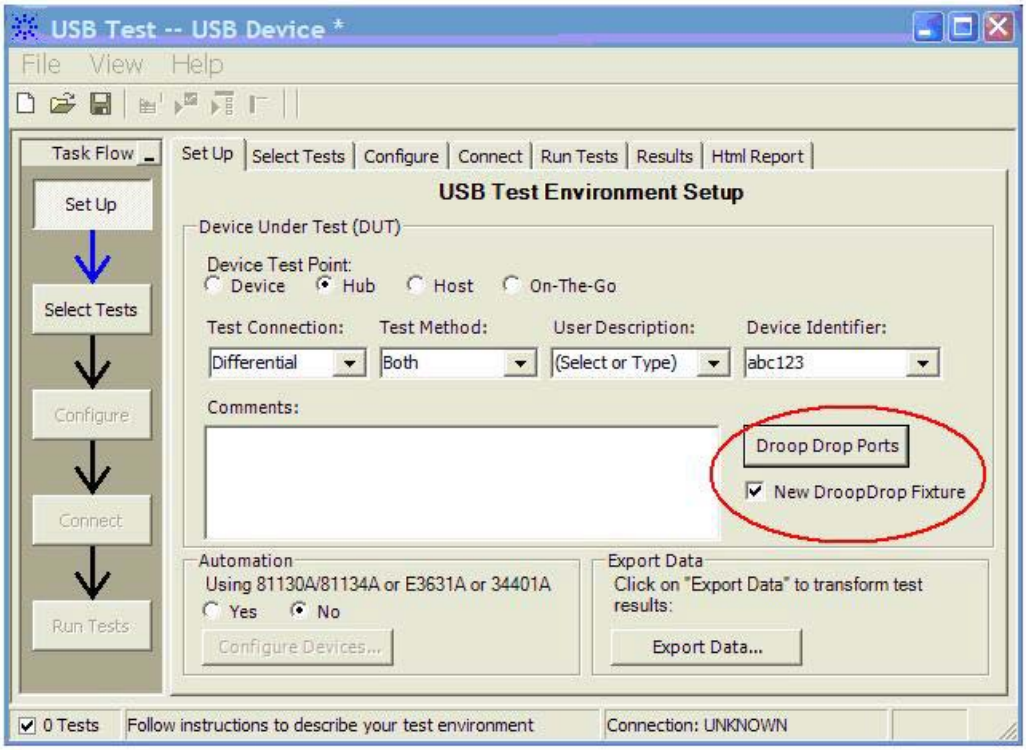

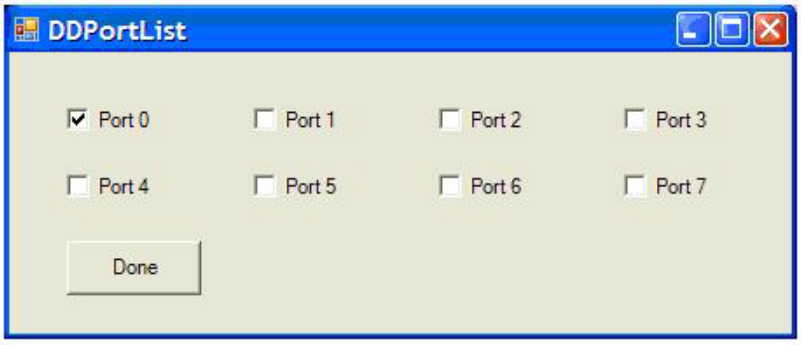

3 Under the Select Tests tab, check the box next to Droop/Drop Test.

4 Click on the Configure tab and scroll to the bottom of the left pane. There will be several listings under the Droop/Drop Test entry that allow you to configure your tests. Set these to the appropriate values for your specific testing conditions.

5 The new E2649-66405 Droop/Drop test fixture supports both manual and automatic testing. Manual testing requires you to adjust the settings on the test fixture manually while automatic testing allows the application to walk you through the testing procedure. The following instructions will be for manual testing as the application will instruct you on how to use automatic testing.

6 To configure the fixture for drop testing, switch S5 to the drop mode position.

7 Select the 500 mA current load by using the S4 switch.

8 Press and hold S1 until the 7-segment LED test port indicator lights up. The test fixture is now turned on.

9 U7 will illuminate with a zero, indicating the initial state. This allows you to make the V_{no_load} measurement for port 0.

10 Select the port under test by pressing either the S2 (switches to the test port on the left) or S1 (switched to the test port on the right).

11 After you have measured V_{no_load}, press S1 and while holding it down, press S2. This allows you to make the V_{load} measurement.

12 To exit manual mode, press S2 and while holding it down, press S1. All of the LEDs will go off.

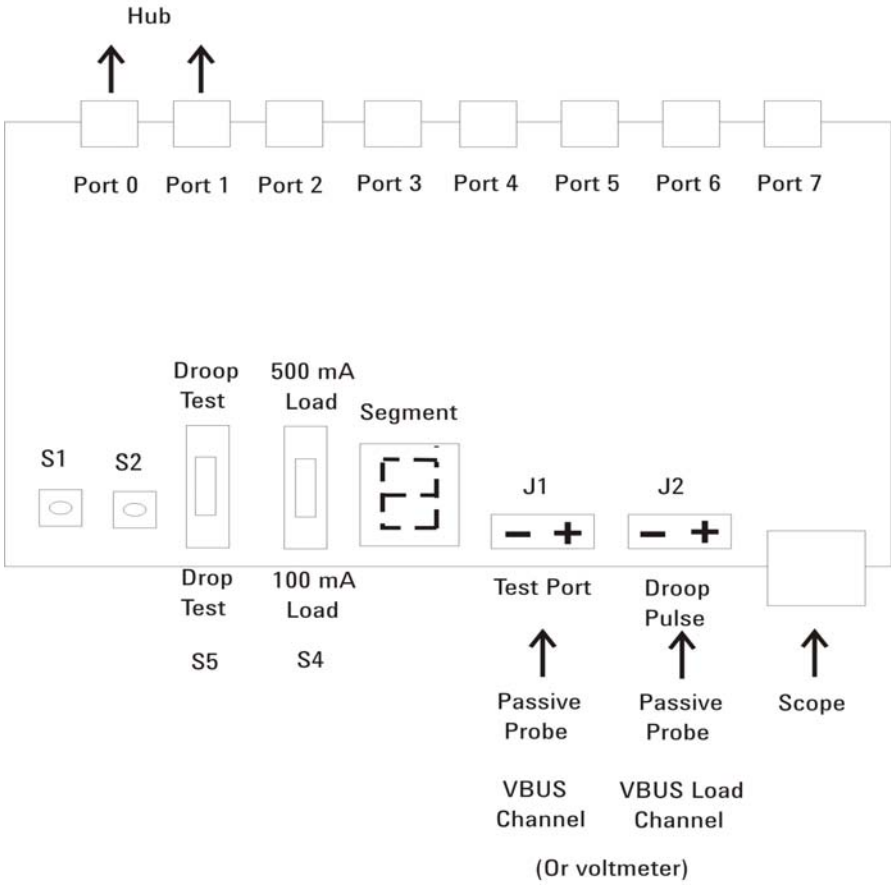

Droop Test -Connecting and Using the New E2649-66405 Droop/Drop Test Fixture

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000, and 90000A Series oscilloscopes, use E2697A high-impendance converter with 10:1 passive probes, or 1156A active probes. The picture after Step 12 shows the connection setup.

2 Click on the **Set Up** tab and check the **New DroopDrop Fixture** box. Also click on the **Droop Drop Ports** button and select the test ports you want to use on the fixture. Select either **Hub** or **Host** as your **Device Test Point**.

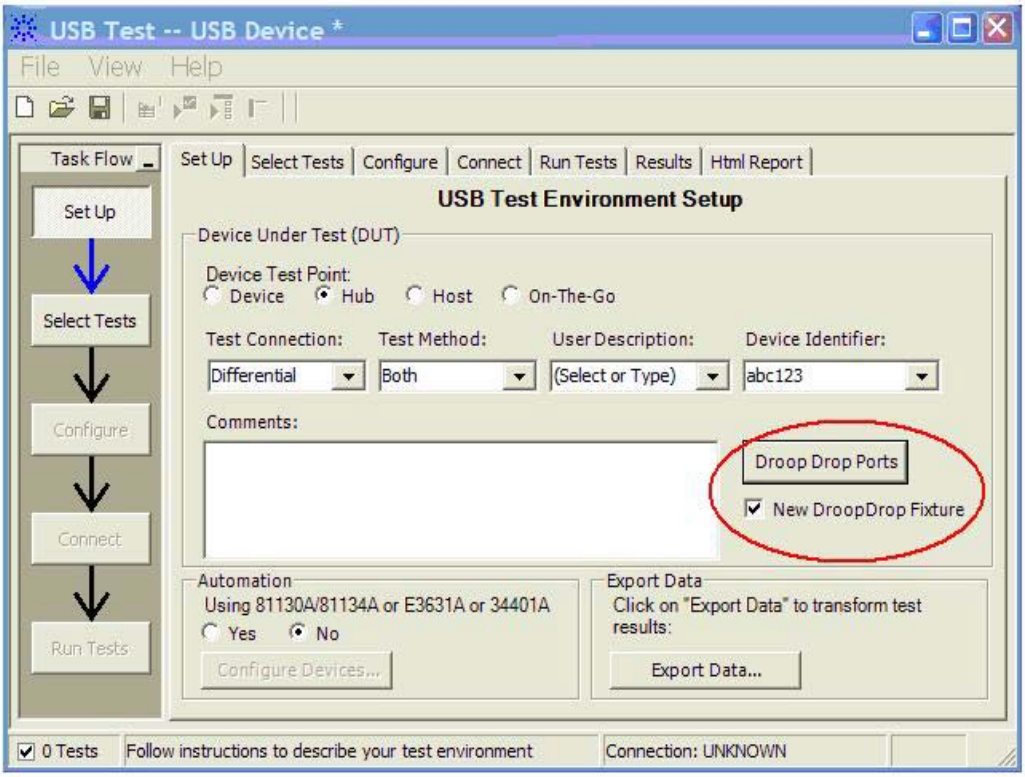

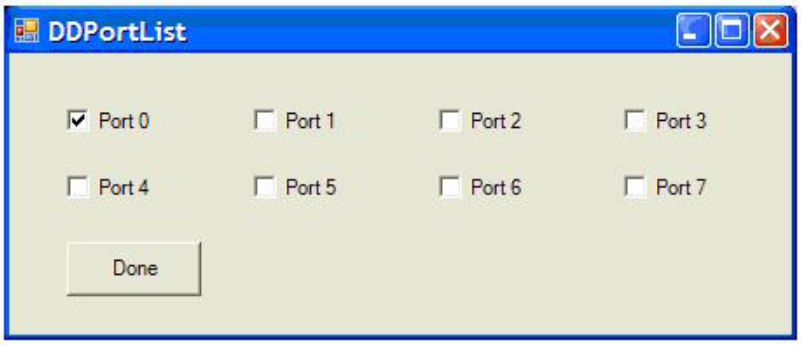

3 Under the Select Tests tab, check the box next to Droop/Drop Test.

4 Click on the Configure tab and scroll to the bottom of the left pane. There will be several listings under the Droop/Drop Test entry that allow you to configure your tests. Set these to the appropriate values for your specific testing conditions.

5 The new E2649-66405 Droop/Drop test fixture supports both manual and automatic testing. Manual testing requires you to adjust the settings on the test fixture manually while automatic testing allows the application to walk you through the testing procedure. The following instructions will be for manual testing as the application will instruct you on how to use automatic testing.

6 To configure the fixture for droop testing, switch S5 to the droop mode position.

7 Select the 500 mA current load by using the S4 switch.

8 Press and hold S1 until the 7-segment LED test port indicator lights up. This turns the test fixture on.

9 All of the port LEDs will be lit up, but the Port 1 LED will be blinking. This indicates that Port 1 is the Droop port. Port 0 will be the test port (indicated by the number 0 illuminated on the 7-segment LED test port indicator).

10 Press S2 to increase Droop test port sequence (0 & 1, 1 & 2, ...) or press S1 to reverse the Droop test port sequence (2 & 1, 1 & 0, ...). The port under test is always indicated by the 7-segment LED test port indicator while the Droop port is indicated by a blinking LED (see picture below)

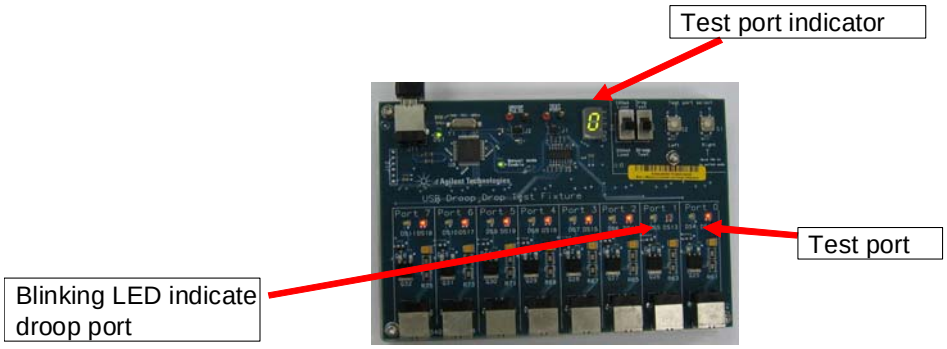

11 To exit manual mode, press S2 and while holding it down, press S1. All of the LEDs will go off.

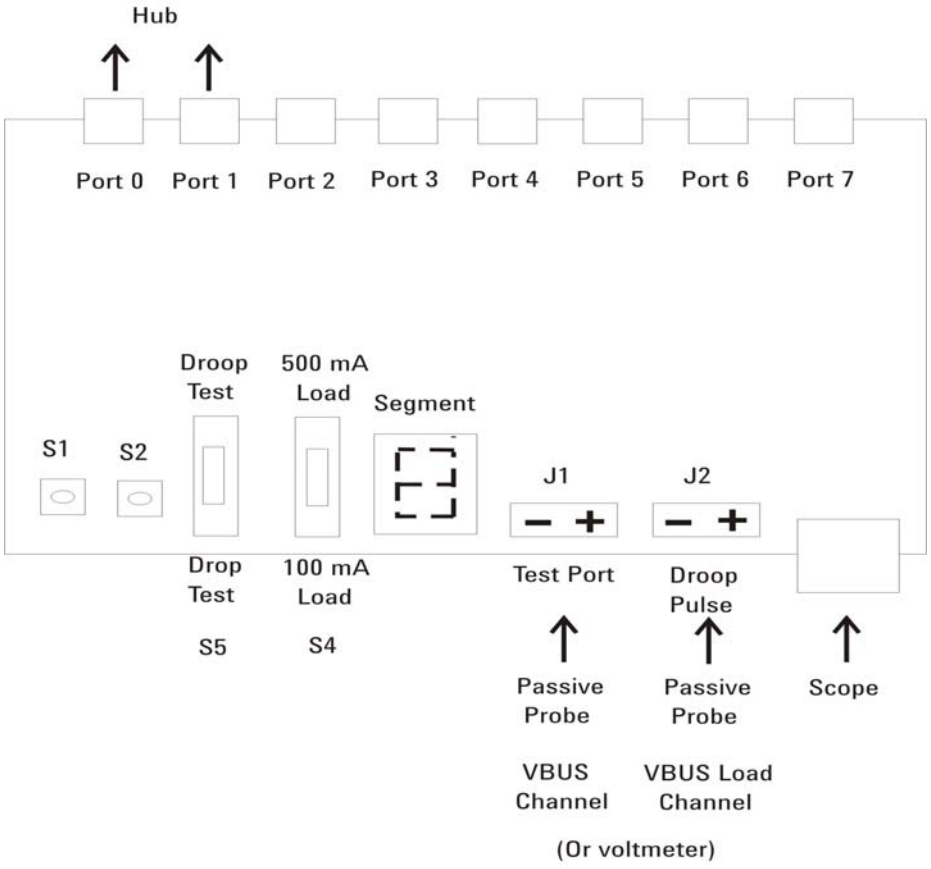

Connecting the Equipment (if you do not have the new E2649-66405 Droop/Drop Test Fixture)

The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Connect 500mA load boards to all but the adjacent port on the host or self-powered hub under test. Connect the SQiDD board to the hub/host port under test prior to connecting the load board .

3 Attach the passive probes to the oscilloscope's Channel 1 and Channel 2 inputs.

4 Connect the Channel 1 probe to Vbus on the SQiDD board with the probe's ground to GND on one of the 500mA load boards. This is the port under test.

5 Connect the Channel 2 probe to the Vbus test point on the load board connected adjacent to the USB port to be measured. This provides the oscilloscope trigger.

6 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Connect 500 mA load boards to all but the adjacent port on the host or self-powered hub under test. Connect the SQiDD board to the hub/host port under test prior to connecting the load board .

3 Attach the passive probes to the oscilloscope's Channel 1 and Channel 2 inputs.

4 Connect the Channel 1 probe to Vbus on the SQiDD board with the probe's ground to GND on one of the 500mA load boards. This is the port under test.

5 Connect the Channel 2 probe to the Vbus test point on the load board connected adjacent to the USB port to be measured. This provides the oscilloscope trigger.

6 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Bus-Powered Hubs

Equipment Used

Table 34 Equipment Used in Bus-Powered Hubs Droop/Drop Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 9000A Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 9000 SeriesA, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Droop/Drop test fixture	Agilent E2649-66405
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	SQiDD board[1]	Agilent E2646A/B
1	100 mA load board[1]	*(see the schematic in* Figure 4 on page 177*)*
1	1 meter USB cable	Any listed on USB-IF web site

[1] If you have the Agilent E2649-66405 Droop/Drop test fixture, you do not need the SQiDD board or the 100 mA load board.

Selecting the Tests

Note: To do manual testing, choose **Both** for the **Test Method** option under the **Setup** tab. There will then be several manual tests to choose from under the **Select Test** tab.

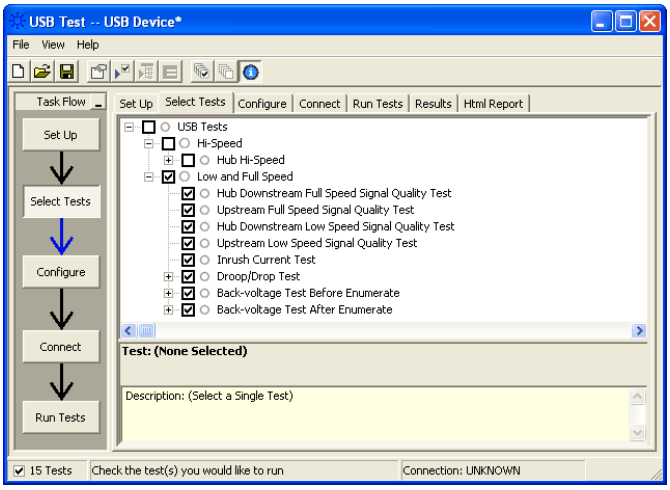

Configuring the Tests

Drop Test - Connecting and Using the New E2649-66405 Droop/Drop Test Fixture

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 9000A Series, 80000, and 90000A Series oscilloscopes, use E2697A high-impendance converter with 10:1 passive probes, or 1156A active probes. The picture after Step 12 shows the connection setup.

2 Click on the **Set Up** tab and check the **New DroopDrop Fixture** box. Also click on the **Droop Drop Ports** button and select the test ports you want to use on the fixture. Select either **Hub** or **Host** as your **Device Test Point**.

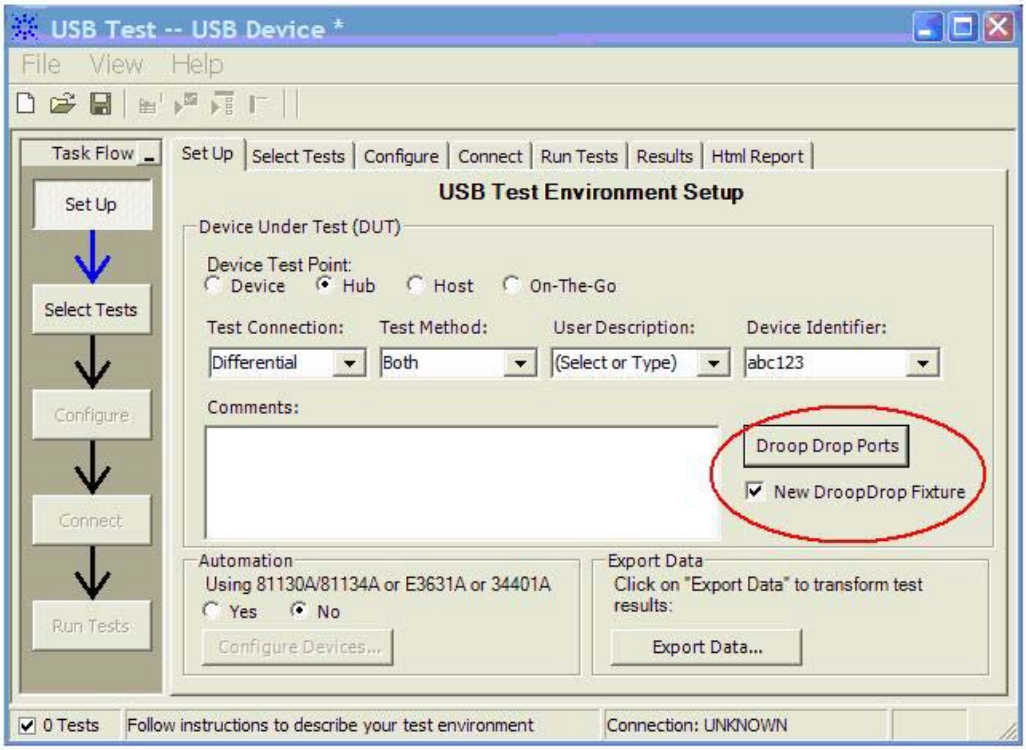

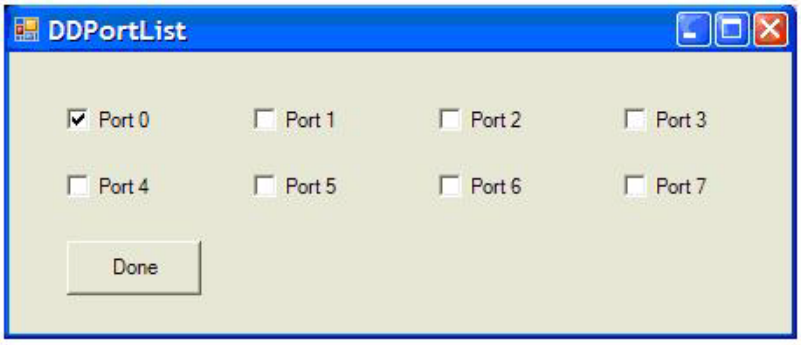

3 Under the Select Tests tab, check the box next to Droop/Drop Test.

4 Click on the Configure tab and scroll to the bottom of the left pane. There will be several listings under the Droop/Drop Test entry that allow you to configure your tests. Set these to the appropriate values for your specific testing conditions.

5 The new E2649-66405 Droop/Drop test fixture supports both manual and automatic testing. Manual testing requires you to adjust the settings on the test fixture manually while automatic testing allows the application to walk you through the testing procedure. The following instructions will be for manual testing as the application will instruct you on how to use automatic testing.

6 To configure the fixture for drop testing, switch S5 to the drop mode position.

7 Select the 100 mA current load by using the S4 switch.

8 Press and hold S1 until the 7-segment LED test port indicator lights up. The test fixture is now turned on.

9 U7 will illuminate with a zero, indicating the initial state. This allows you to make the V_{no_load} measurement for port 0.

10 Select the port under test by pressing either the S2 (switches to the test port on the left) or S1 (switched to the test port on the right).

11 After you have measured V_{no_load}, press S1 and while holding it down, press S2. This allows you to make the V_{load} measurement.

12 To exit manual mode, press S2 and while holding it down, press S1. All of the LEDs will go off.

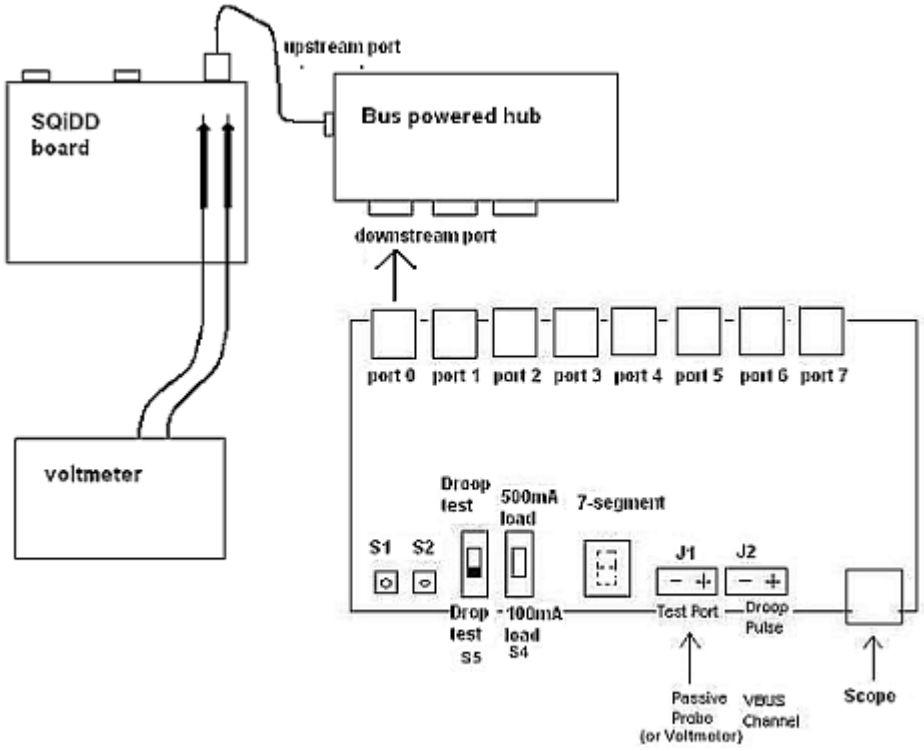

Droop Test -Connecting and Using the New E2649-66405 Droop/Drop Test Fixture

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000, and 90000A Series oscilloscopes, use E2697A high-impendance converter with 10:1 passive probes, or 1156A active probes.

2 Click on the **Set Up** tab and check the **New DroopDrop Fixture** box. Also click on the **Droop Drop Ports** button and select the test ports you want to use on the fixture. Select either **Hub** or **Host** as your **Device Test Point**.

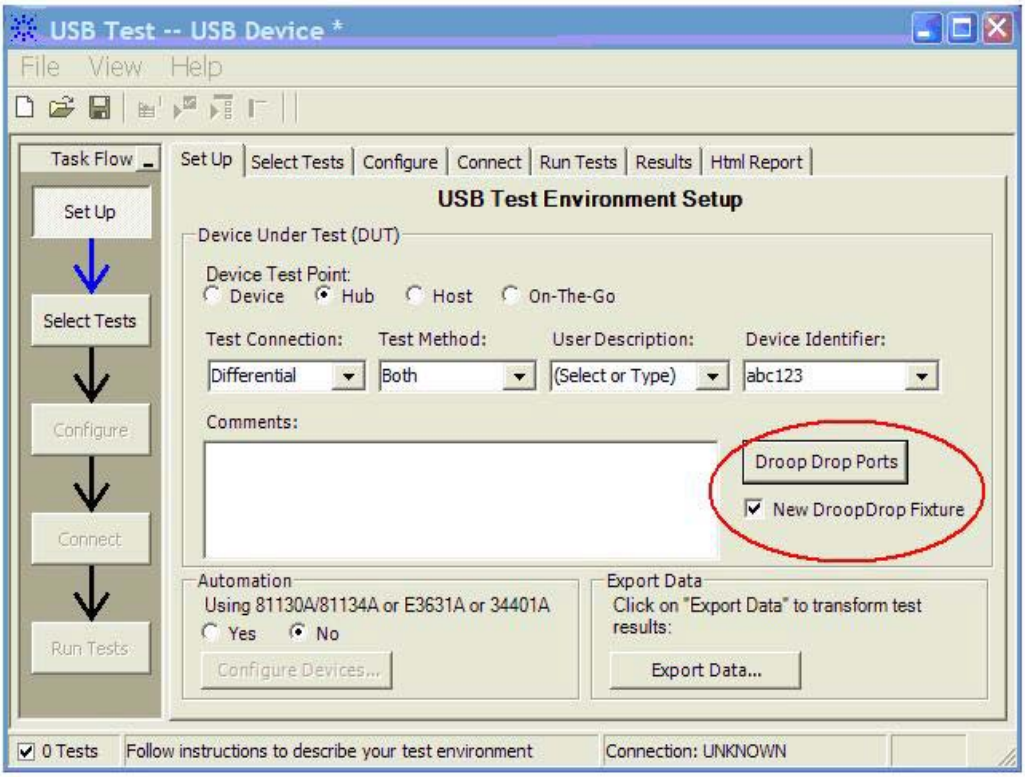

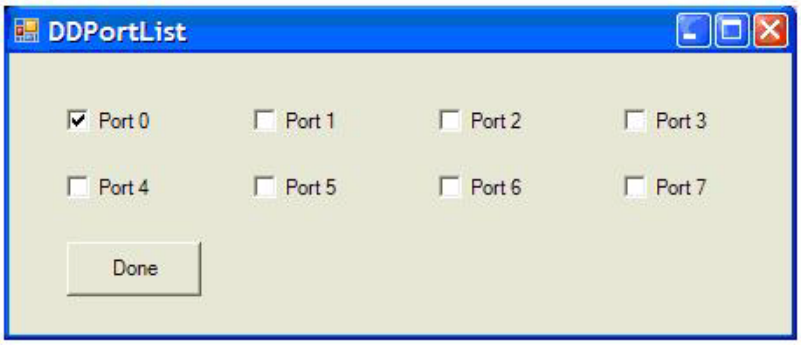

3 Under the Select Tests tab, check the box next to Droop/Drop Test.

4 Click on the Configure tab and scroll to the bottom of the left pane. There will be several listings under the Droop/Drop Test entry that allow you to configure your tests. Set these to the appropriate values for your specific testing conditions.

5 The new E2649-66405 Droop/Drop test fixture supports both manual and automatic testing. Manual testing requires you to adjust the settings on the test fixture manually while automatic testing allows the application to walk you through the testing procedure. The following instructions will be for manual testing as the application will instruct you on how to use automatic testing.

6 To configure the fixture for droop testing, switch S5 to the droop mode position.

7 Select the 100 mA current load by using the S4 switch.

8 Press and hold S1 until the 7-segment LED test port indicator lights up. This turns the test fixture on.

9 All of the port LEDs will be lit up, but the Port 1 LED will be blinking. This indicates that Port 1 is the Droop port. Port 0 will be the test port (indicated by the number 0 illuminated on the 7-segment LED test port indicator).

10 Press S2 to increase Droop test port sequence (0 & 1, 1 & 2, ...) or press S1 to reverse the Droop test port sequence (2 & 1, 1 & 0, ...). The port under test is always indicated by the 7-segment LED test port indicator while the Droop port is indicated by a blinking LED (see picture below)

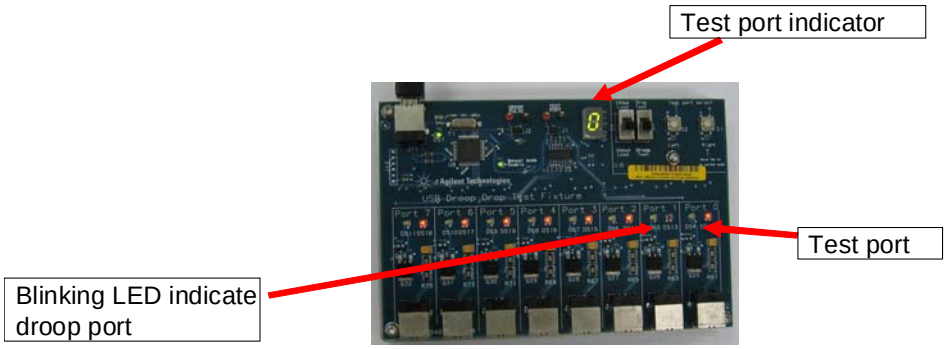

11 To exit manual mode, press S2 and while holding it down, press S1. All of the LEDs will go off.

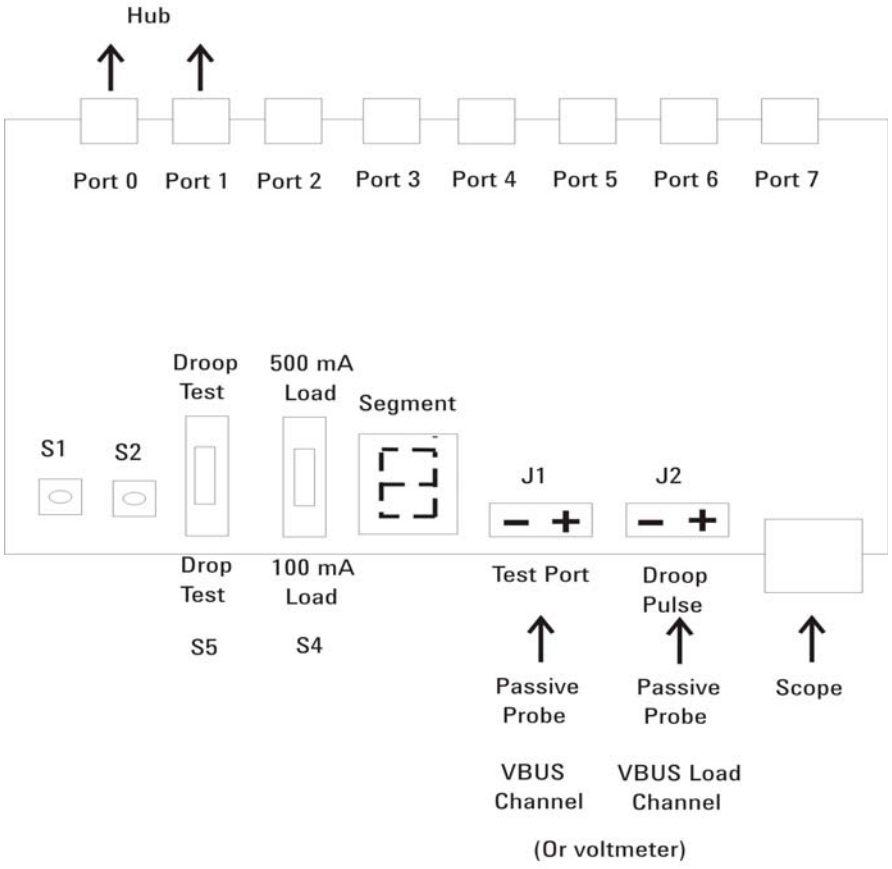

Connecting the Equipment (if you do not have the E2649-66405 Droop/Drop Test Fixture)

The USB automated test application will prompt you to perform these connection steps:

1. For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.
2. Connect 100mA load boards to all but the adjacent port on the bus-powered hub under test. Connect the SQiDD board to the hub/host port under test prior to connecting the load board .
3. Attach the passive probes to the oscilloscope's Channel 1 and Channel 2 inputs.

4 Connect the Channel 1 probe to Vbus on the SQiDD board with the probe's ground to GND on one of the 100mA load boards. This is the port under test.

5 Connect the Channel 2 probe to the Vbus test point on the load board connected adjacent to the USB port to be measured. This provides the oscilloscope trigger.

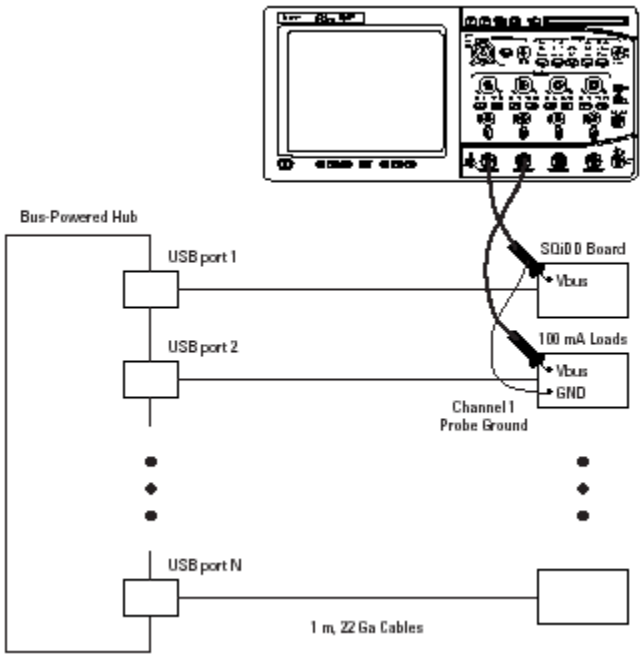

6 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Connect 100 mA load boards to all but the adjacent port on the bus-powered hub under test. Connect the SQiDD board to the hub/host port under test prior to connecting the load board .

3 Attach the passive probes to the oscilloscope's Channel 1 and Channel 2 inputs.

4 Connect the Channel 1 probe to Vbus on the SQiDD board with the probe's ground to GND on one of the 100 mA load boards. This is the port under test.

5 Connect the Channel 2 probe to the Vbus test point on the load board connected adjacent to the USB port to be measured. This provides the oscilloscope trigger.

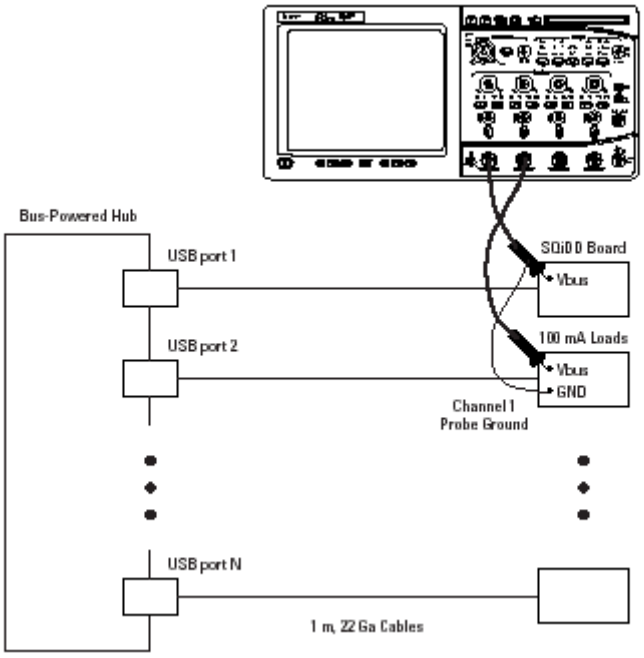

6 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Inrush Current Test

Equipment Used

Table 35 Equipment Used in Inrush Current Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
1	Current probe	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A high impedance converter, N2774A current probe, and N2775A power supply For 54831B/D and 54832B/D oscilloscopes: • Agilent 1147A
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	SQiDD board	Agilent E2646A/B
1	USB self-powered hub	Any listed on USB-IF web site
1	1 meter USB cable	Any listed on USB-IF web site

Selecting the Tests

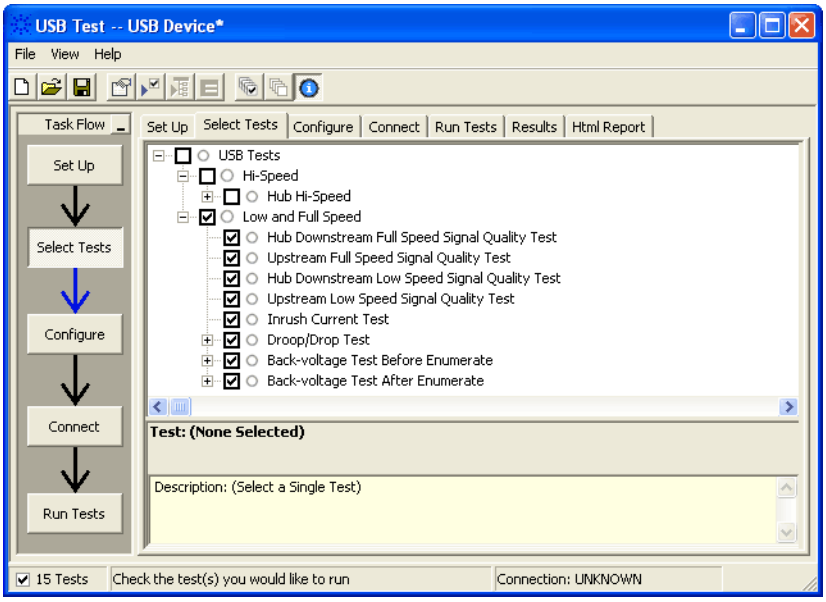

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Attach the current probe:

For the 54831B/D or 54832B/D oscilloscope, attach the 1147A current probe to the oscilloscope's Channel 4 input.

For the 54853A, 54854A, 54855A oscilloscope:

- **a** Attach the E2697A high-impedance connector to the Channel 4 input.
- **b** Attach the N2774A current probe to the E2697A.
- **c** Attach the N2775A power supply to the N2774A.
- **d** Choose the Setup->Channel 4->Probes->Configure Probing System command and select "Connect 0.1V/A Current Probe".

2 Zero the current probe.

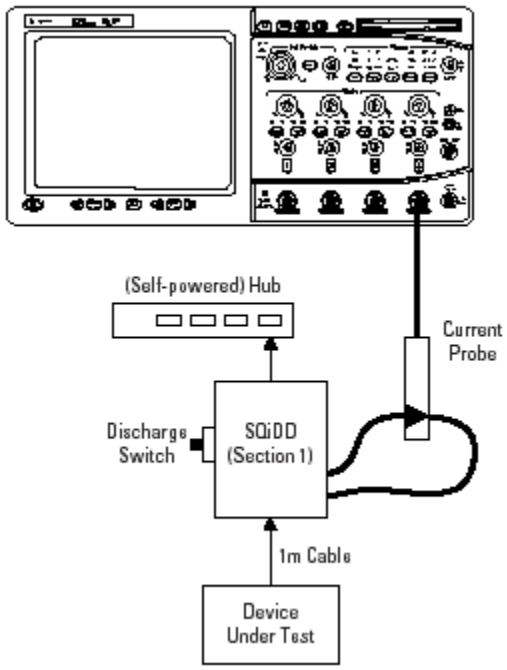

3 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions, Part 1

The USB automated test application will prompt you to perform these steps:

1 Attach the current probe to the current loop on the SQiDD board with the arrow on the probe toward the device under test.

2 Attach the device under test to the SQiDD board.

3 Place the switch on the SQiDD board to the discharge position (opposite the ON position) .

4 Disconnect the device under test from the SQiDD board.

5 Place the switch on the SQiDD board to the ON position.

6 Click **OK** to close the Test Instructions dialog.

Test Instructions, Part 2

The USB automated test application will prompt you to perform these steps:

1 Re-connect the device under test to the SQiDD board in order to capture the inrush current waveform.

2 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Signal Integrity Test

Host Downstream Signal Quality Test

Host Low Speed Test

Equipment Used

Table 36 Equipment Used in Host Downstream Low Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	low speed USB device	Logitech mouse, P/N 830311-1000, Model #: M-BB48

Selecting the Tests

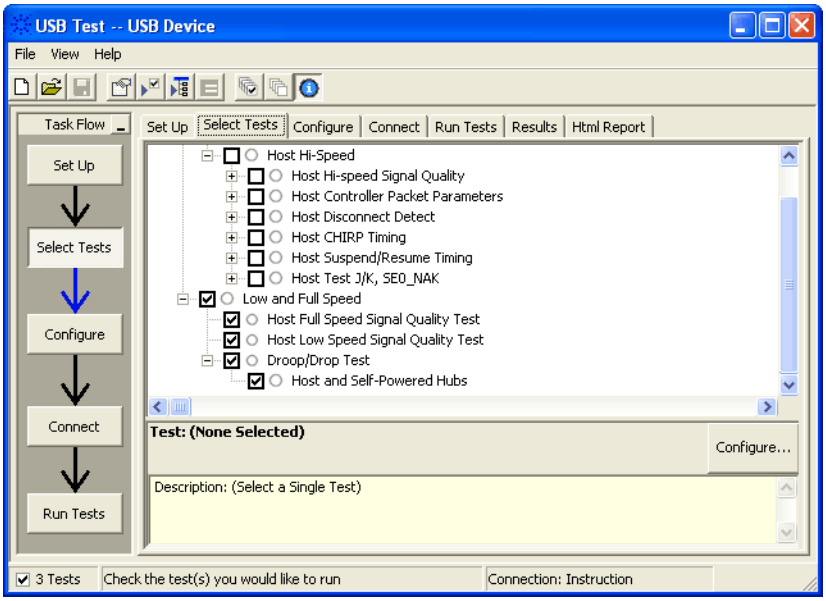

Configuring the Tests Make sure you set the Test Type configuration option to “Low-Speed Near End” before running the test.

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's Channel 3 and Channel 2 inputs.

3 Attach the SQiDD board to the root hub on the host under test.

4 Attach a low speed device to the same section of the SQiDD board. If the section has a switch, it should be set to ON.

5 Connect the oscilloscope Channel 2 probe to D- probe point on the SQiDD board. Connect the oscilloscope Channel 3 probe to the D+ probe point on the SQiDD board.

6 Exit the HS Electrical Test Tool if you have previously launched it.

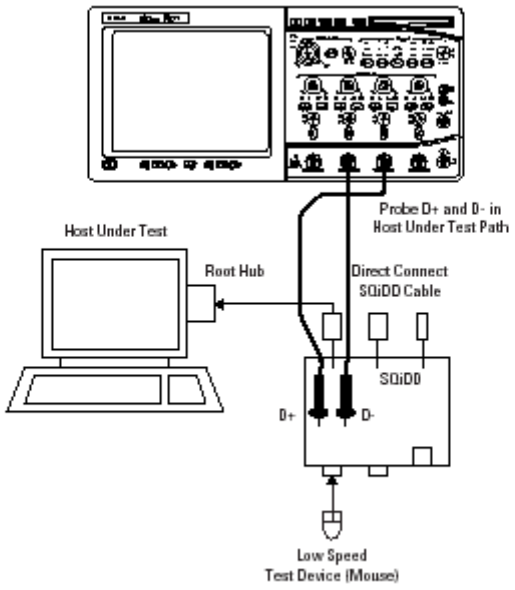

7 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Host Full Speed Test

Equipment Used

Table 37 Equipment Used in Host Downstream Full Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	full speed USB device	Intel Create and Share USB camera, P/N 735147-001, Model #: CS330
5	USB self-powered hubs	Any listed on USB-IF web site
6	5 meter USB cables	Any listed on USB-IF web site

Selecting the Tests

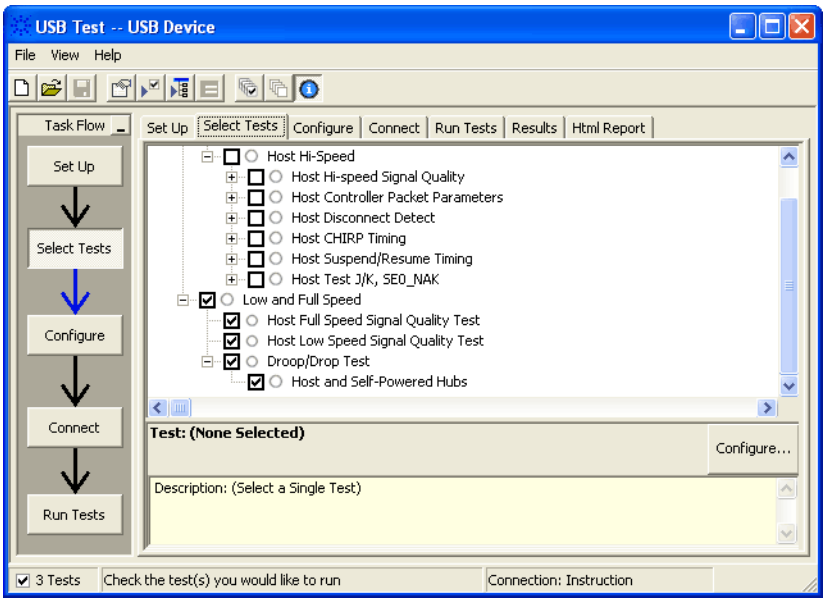

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's Channel 3 and Channel 2 inputs.

3 Attach the SQiDD board to the root hub on the host under test.

4 Attach 5 self-powered hubs and a full-speed device to the same section of the SQiDD board. If the section has a switch, it should be set to ON. Hub #1 has to be a full-speed hub and hub #2 a Hi-speed hub. The other hubs can be either full speed or hi-speed hubs.

NOTE Placing a full speed and/or a high-speed device downstream of a full speed hub forces both to operate in full speed mode.

5 Connect the oscilloscope Channel 2 probe to D- probe point of the device under test portion. Connect the oscilloscope Channel 3 probe to the D+ probe point of the device under test portion.

6 Exit the HS Electrical Test Tool if you have previously launched.

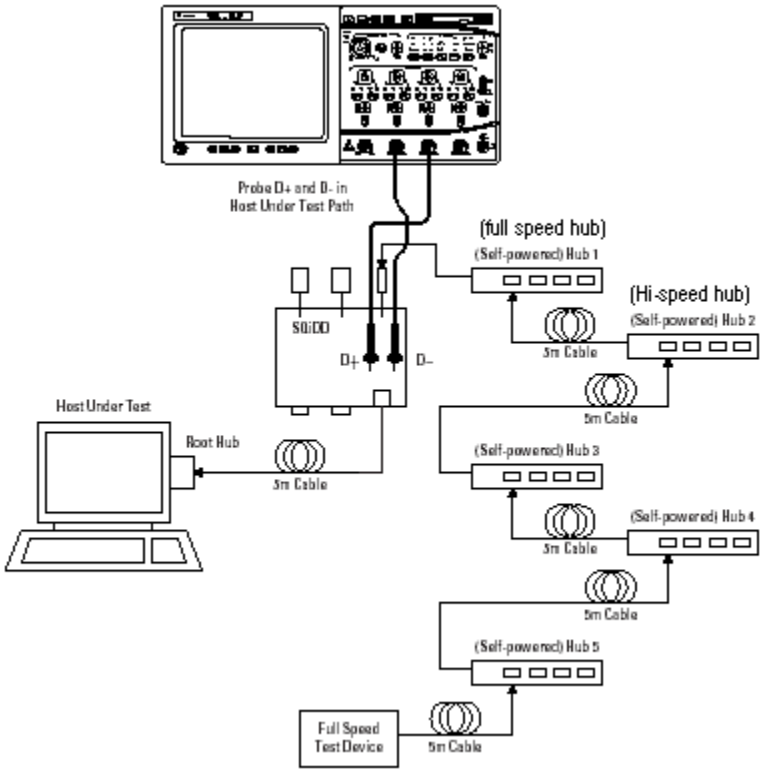

7 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Downstream Signal Quality Test

Hub Downstream Low Speed Test

Equipment Used

Table 38 Equipment Used in Hub Downstream Low Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	low speed USB device	Logitech mouse, P/N 830311-1000, Model #: M-BB48
5	USB self-powered hubs	Any listed on USB-IF web site
5	5 meter USB cables	Any listed on USB-IF web site

Selecting the Tests

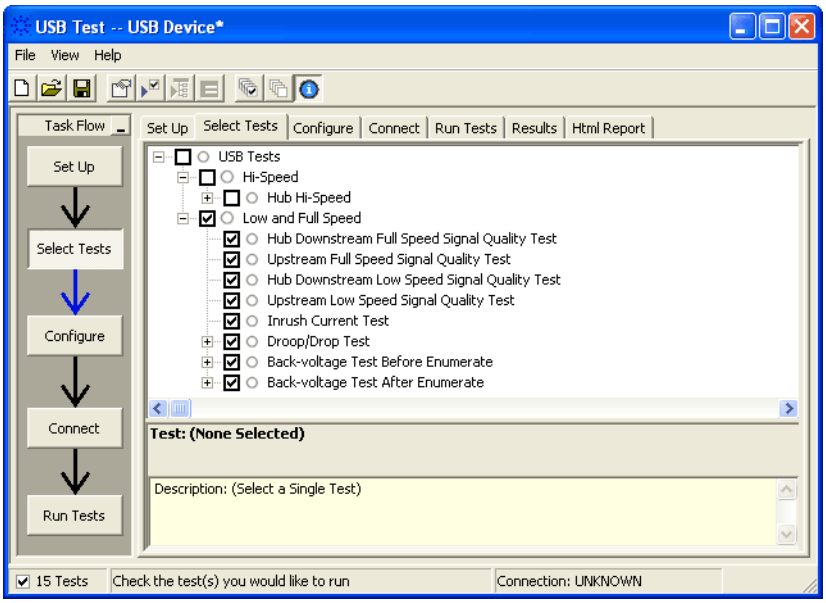

Configuring the Tests Make sure you set the Test Type configuration option to “Low-Speed Near End” before running the test.

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's Channel 3 and Channel 2 inputs.

3 Attach the SQiDD board to the hub under test.

4 Attach the upstream port of the hub under test to the end of 4 self-powered hubs and a host system. Hub #1 has to be a full speed hub. The other hubs can be either full speed or hi-speed hubs.

NOTE

The best method to capture and analyze low-speed downstream signal quality is to capture both a keep-alive (low speed EOP) if present and a SOF packet. Hubs are required to generate keep-alives when there is full speed traffic and pass them on to low speed devices.

5 Attach a low speed device to the same section of the SQiDD board. If the section has a switch, it should be set to ON.

6 Connect the oscilloscope Channel 2 probe to D- probe point of the device under test portion. Connect the oscilloscope Channel 3 probe to the D+ probe point of the device under test portion.

7 Exit the HS Electrical Test Tool if you have previously launched it.

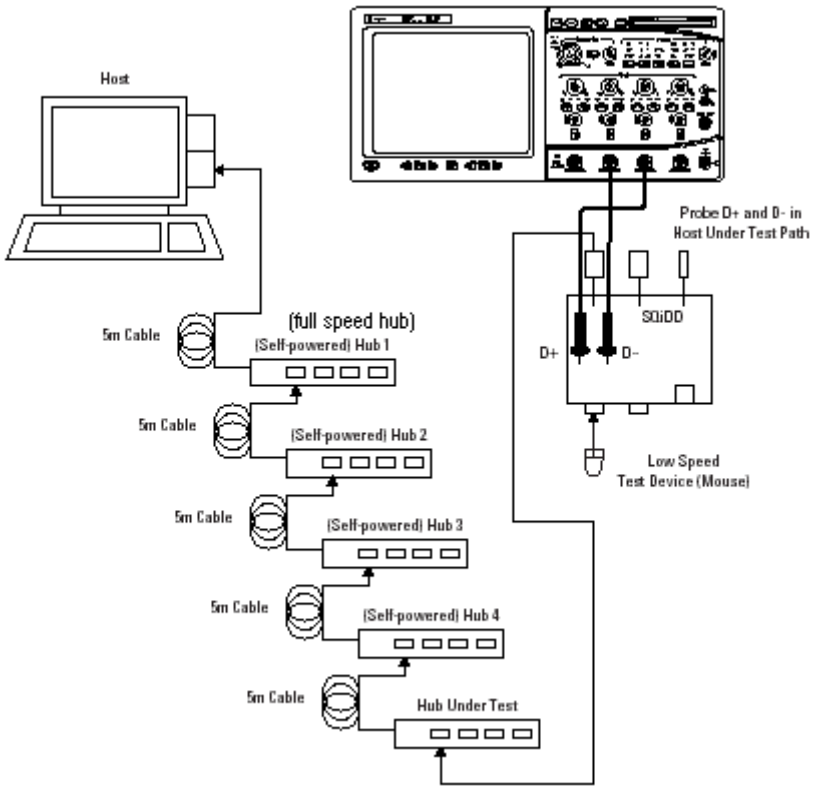

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Hub Downstream Full Speed Test

Equipment Used

Table 39 Equipment Used in Hub Downstream Full Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	full speed USB device	Intel Create and Share USB camera, P/N 735147-001, Model #: CS330
5	USB self-powered hubs	Any listed on USB-IF web site
6	5 meter USB cables	Any listed on USB-IF web site

Selecting the Tests

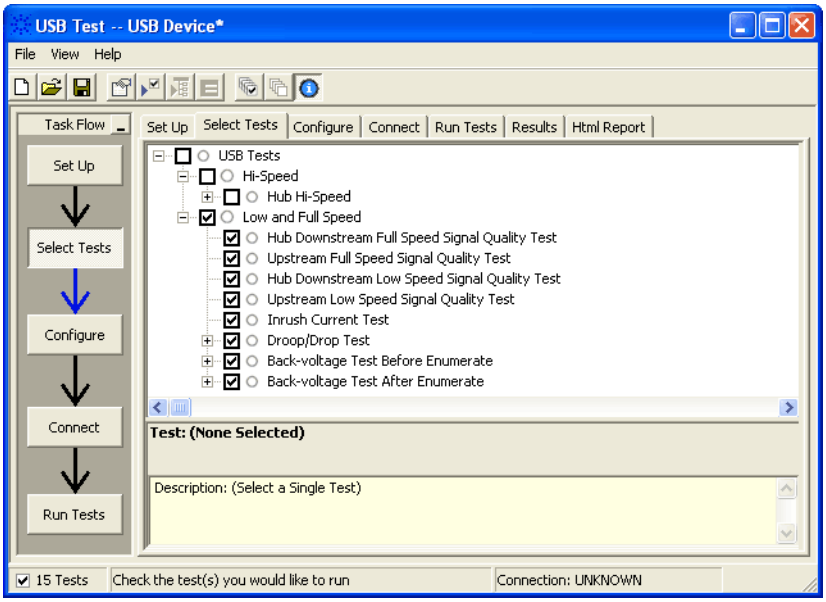

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's Channel 3 and Channel 2 inputs.

3 Attach the SQiDD board to the hub under test.

4 Attach the upstream port of the hub under test to the end of 4 self-powered hubs and a host system. Hub #1 has to be a full-speed hub and hub #2 a Hi-speed hub. The other hubs can be either full speed or hi-speed hubs.

NOTE Placing a full speed and/or a high-speed device downstream of a full speed hub forces both to operate in full speed mode.

5 Attach a full speed device to the same section of the SQiDD board. If the section has a switch, it should be set to ON.

6 Connect the oscilloscope Channel 2 probe to D- probe point of the device under test portion. Connect the oscilloscope channel Channel 3 probe to the D+ probe point of the device under test portion.

7 Exit the HS Electrical Test Tool if you have previously launched it.

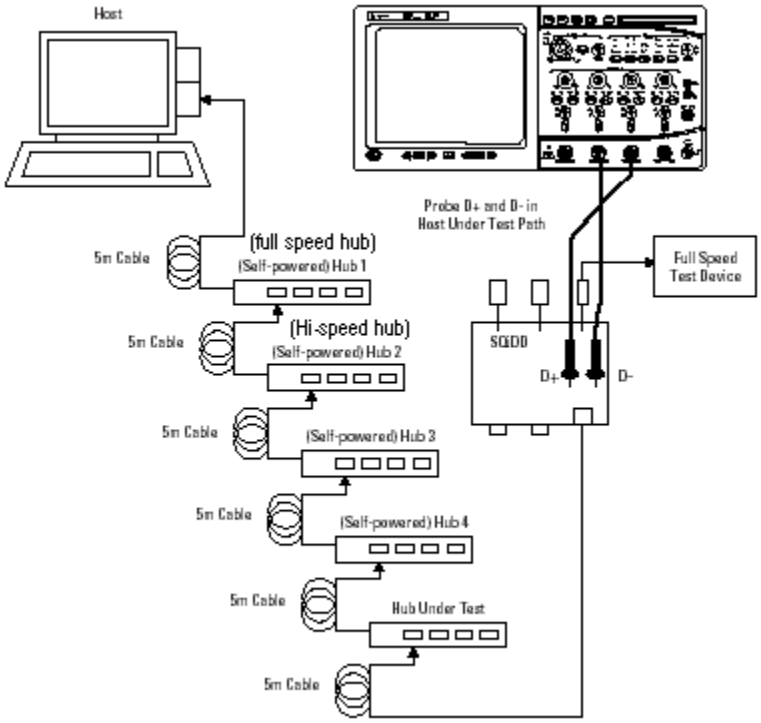

8 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Upstream Signal Quality Test

Upstream Low Speed Test

Equipment Used

Table 40 Equipment Used in Upstream Low Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
3	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	low speed USB device	Logitech mouse, P/N 830311-1000, Model #: M-BB48
5	USB self-powered hubs	Any listed on USB-IF web site
6	5 meter USB cables	Any listed on USB-IF web site

Selecting the Tests

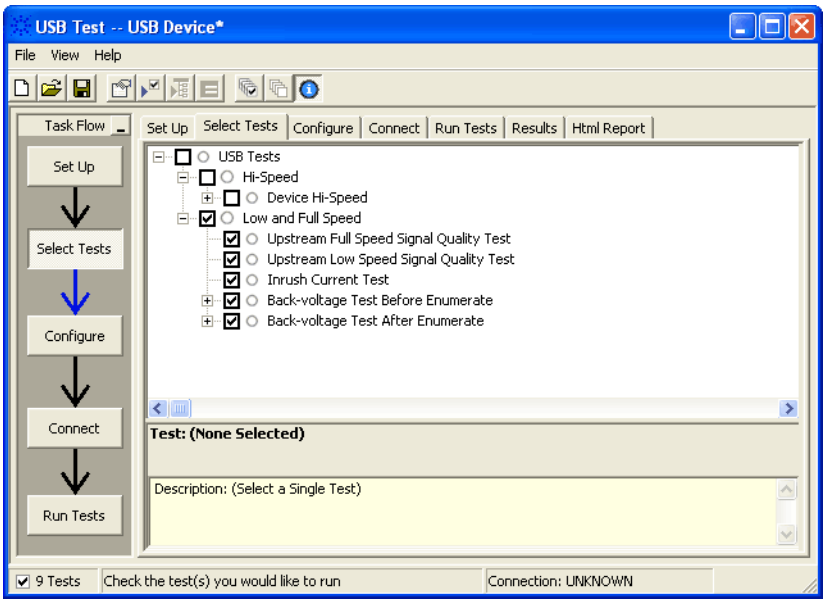

Configuring the Tests Make sure you set the Test Type configuration option to “Low-Speed Far End” before running the test.

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's Channel 2, Channel 3 and Channel 1 inputs.

3 Attach the SQiDD board to two USB ports at the end of 5 self-powered hubs and a host system. Hub #1 has to be a hi-speed hub and hub #2 has to be a full speed hub. The rest of the hubs can be either hi-speed or full speed hubs.

NOTE Placing a full speed and/or a high-speed device downstream of a full speed hub forces both to operate in full speed mode.

4 Attach a low speed device under test to the same section of the SQiDD board. If the section has a switch, it should be set to ON.

5 Attach another low speed device to the adjacent section of the SQiDD board. This is for triggering purposes.

6 Connect the oscilloscope Channel 2 probe to D- probe point of the device under test portion. Connect the oscilloscope Channel 3 probe to the D+ probe point of the device under test portion. Connect the oscilloscope Channel 1 probe to the D- probe point on the adjacent device section of the SQiDD board.

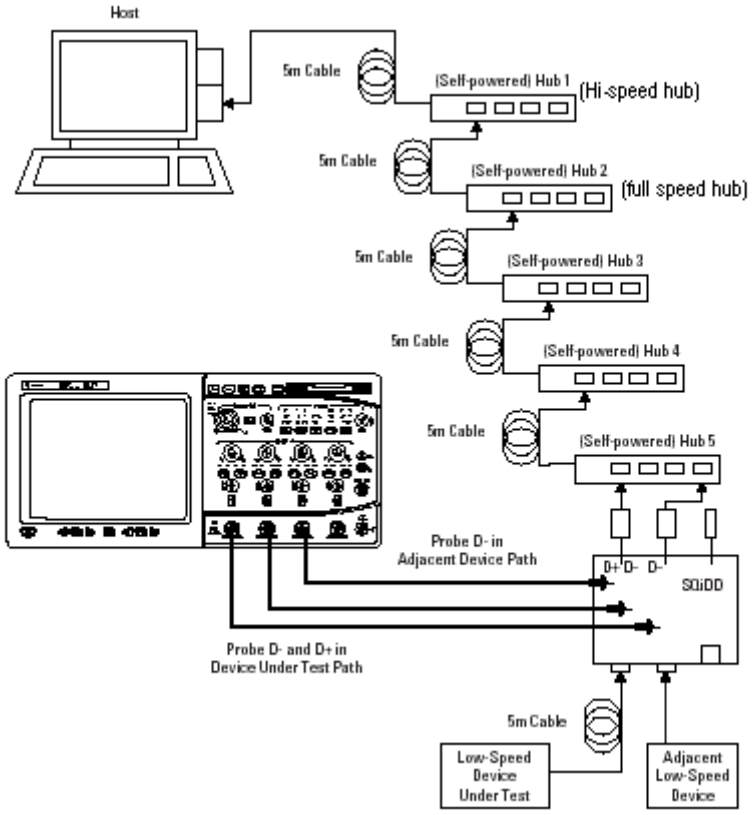

7 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer. Select **Device** and click the **[TEST]** button to enter the Device Test menu.

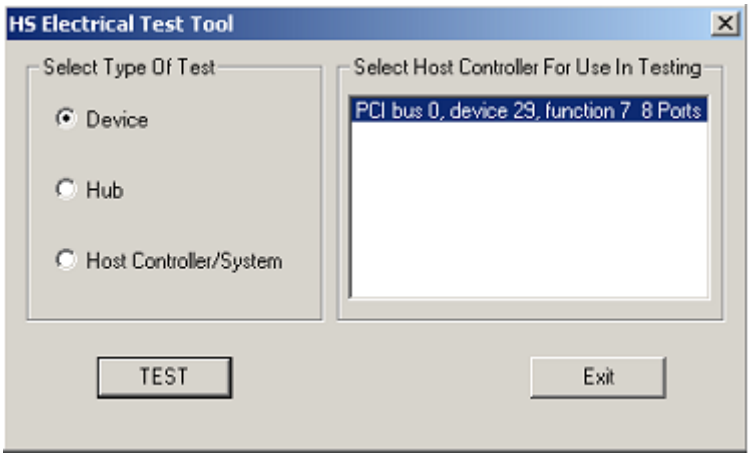

2 On the Device Test Menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once. All devices attached to the host controller should appear in the device enumeration list.

3 Highlight the device under test and select **LOOP DEVICE DESCRIPTOR** from the Device Command drop down menu. Click **EXECUTE** once.

4 If you do not know which VID/PID belongs to the device under test, unattach the device under test and enumerate the bus once. Then reattach the device under test and enumerate again, this time paying attention to the new device attached.

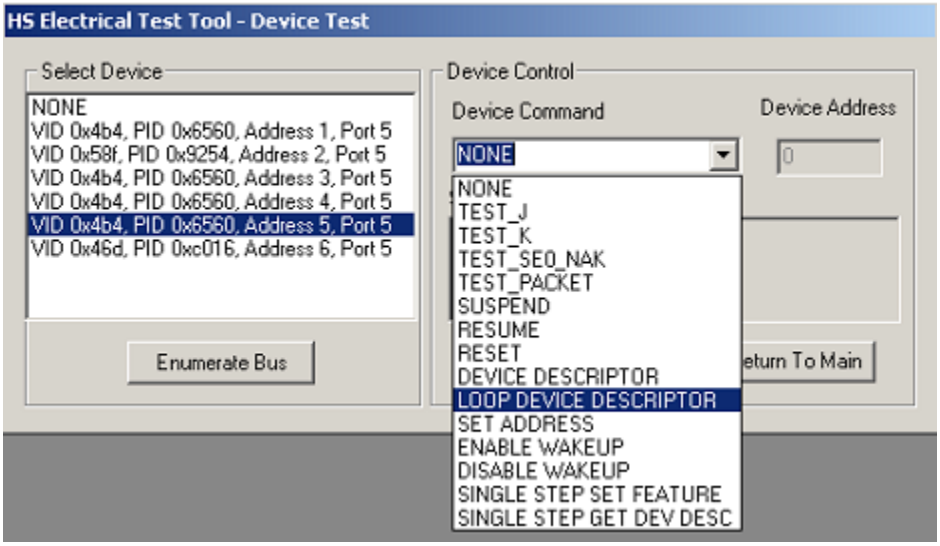

5 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Upstream Full Speed Test

Equipment Used

Table 41 Equipment Used in Upstream Full Speed Signal Quality Test

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
3	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent E2697A with 10073C, or 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Host test bed computer	Any computer with hi-speed USB ports
1	SQiDD board	Agilent E2646A/B
1	full speed USB device	Intel Create and Share USB camera, P/N 735147-001, Model #: CS330
5	USB self-powered hubs	Any listed on USB-IF web site
6	5 meter USB cables	Any listed on USB-IF web site

Selecting the Tests

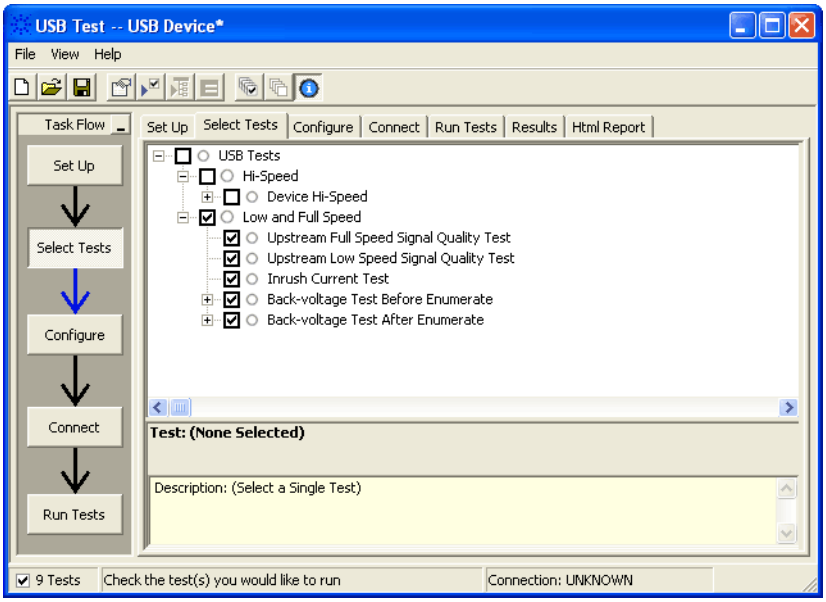

Connecting the Equipment The USB automated test application will prompt you to perform these connection steps:

1 For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use E2697A high-impedance converter with 10:1 passive probes, or 1156A active probes.

2 Attach the passive probes to the oscilloscope's channel Channel 2, Channel 3 and Channel 1 inputs.

3 Attach the SQiDD board to two USB ports at the end of 5 self-powered hubs and a host system. Hub #1 has to be a hi-speed hub and hub #2 has to be a full speed hub. The rest of the hubs can be either hi-speed or full speed hubs.

NOTE Placing a full speed and/or a high-speed device downstream of a full speed hub forces both to operate in full speed mode.

4 Attach a full speed device under test to the same section of the SQiDD board. If the section has a switch, it should be set to ON.

5 Attach another full speed device to the adjacent section of the SQiDD board. This is for triggering purposes.

NOTE Use a full-speed hub if device under test has embedded hub function. Otherwise the scope will falsely trigger.

6 Connect the oscilloscope Channel 2 probe to D- probe point of the device under test portion. Connect the oscilloscope Channel 3 probe to the D+ probe point of the device under test portion. Connect the oscilloscope Channel 1 probe to the D+ probe point on the adjacent device section of the SQiDD board.

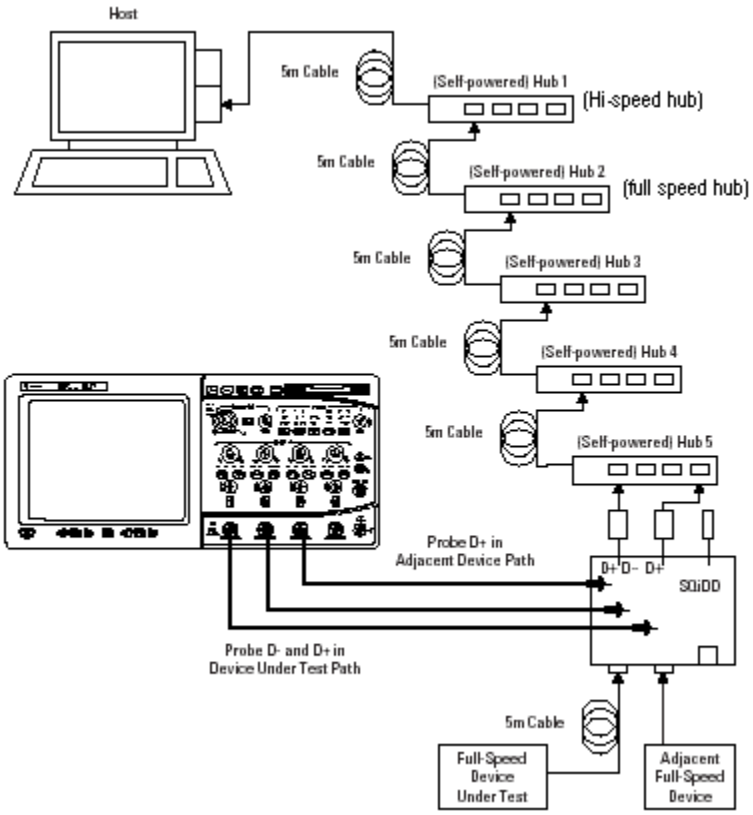

7 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

The USB automated test application will prompt you to perform these steps:

1 Invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer. Select **Device** and click the **[TEST]** button to enter the Device Test menu.

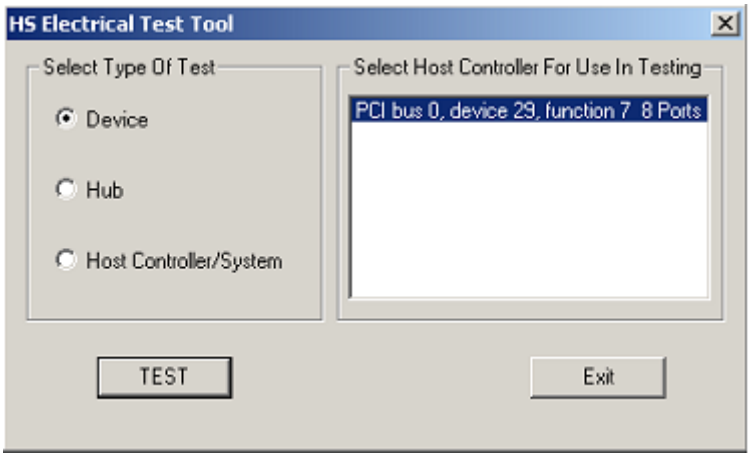

2 On the Device Test Menu of the HS Electrical Test Tool software, click **[Enumerate Bus]** once. All devices attached to the host controller should appear in the device enumeration list.

3 Highlight the device under test and select **LOOP DEVICE DESCRIPTOR** from the Device Command drop down menu. Click **EXECUTE** once.

4 If you do not know which VID/PID belongs to the device under test, unattach the device under test and enumerate the bus once. Then reattach the device under test and enumerate again, this time paying attention to the new device attached.

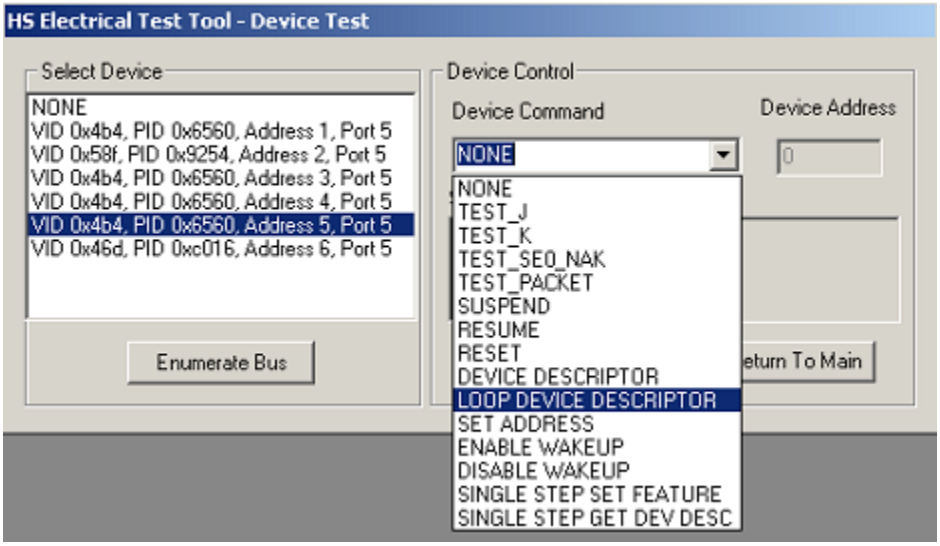

5 Click **OK** to close the Test Instructions dialog.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Back-Voltage Test Before Enumerate

Equipment Used

Table 42 Equipment Used in Back-Voltage Test

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	SQiDD board or back-voltage test fixture	Agilent E2646A/B
1	1 meter USB cable	Any listed on USB-IF web site

Selecting the Tests

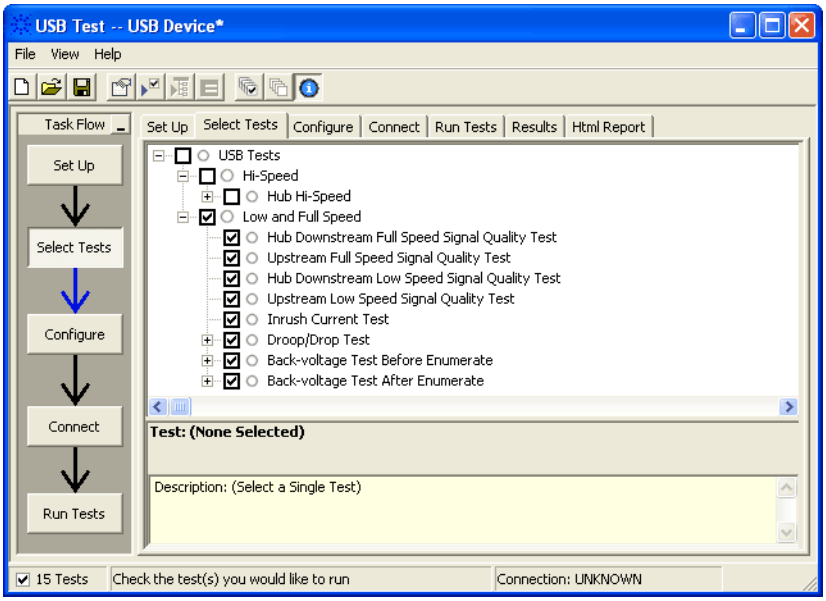

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect power supply to device/hub under test, and connect the device/hub upstream port to the SQiDD board using a known good USB cable.

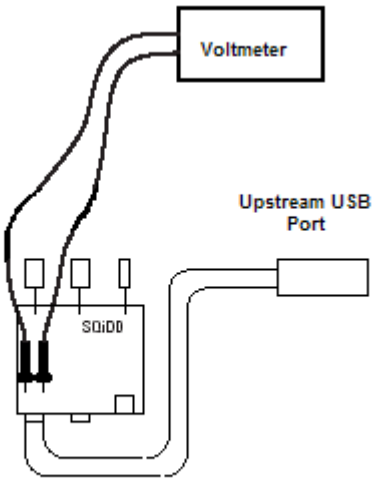

2 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

VBUS

The USB automated test application will prompt you to: measure the voltage between Vbus and Gnd on the SQiDD board and record the value.

D+

The USB automated test application will prompt you to: measure the voltage between D+ and Gnd on the SQiDD board and record the value.

D-

The USB automated test application will prompt you to: measure the voltage between D- and Gnd on the SQiDD board and record the value.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Back-Voltage Test After Enumerate

Equipment Used

Table 43 Equipment Used in Back-Voltage Test

Quantity	Item	Description/Model
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	SQiDD board or back-voltage test fixture	Agilent E2646A/B
1	1 meter USB cable	Any listed on USB-IF web site

Selecting the Tests

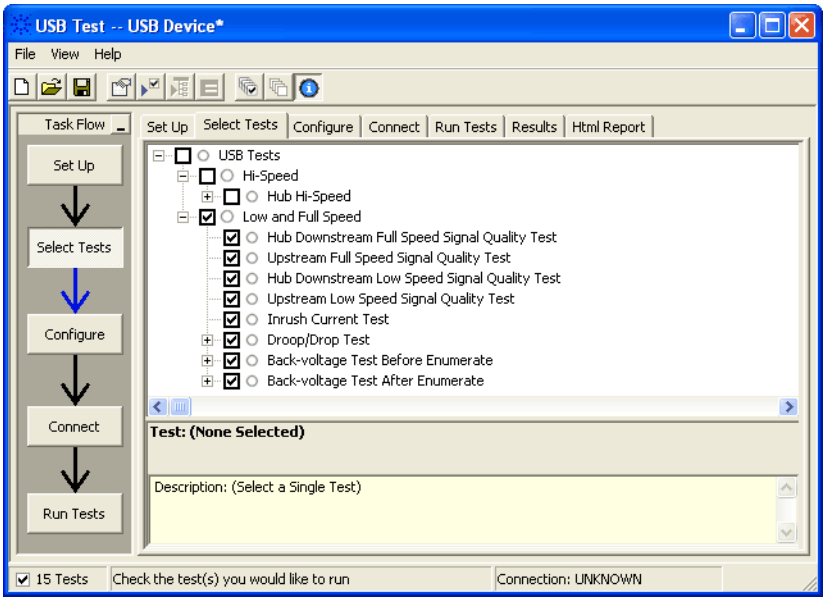

Configuring the Tests

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

1 Connect power supply to device/hub under test. Plug device/hub under test into a known good host. Verify proper enumeration. Unplug USB

cable from the host. Connect the device/hub upstream port to the SQiDD board using a known good USB cable.

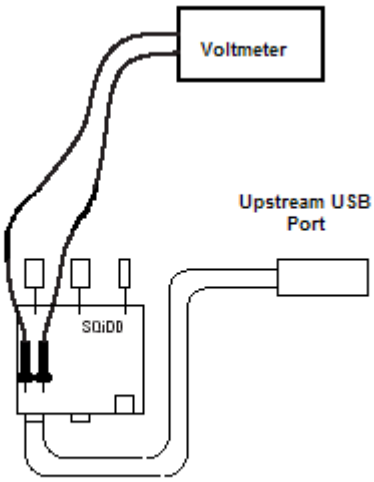

2 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

Test Instructions

VBUS

The USB automated test application will prompt you to: measure the voltage between Vbus and Gnd on the SQiDD board and record the value.

D+

The USB automated test application will prompt you to: measure the voltage between D+ and Gnd on the SQiDD board and record the value.

D-

The USB automated test application will prompt you to: measure the voltage between D- and Gnd on the SQiDD board and record the value.

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

8 On-The-Go Electrical Tests

Equipment Used 228
Installing the USB-OET (OTG Electrical Test) Fixture Driver 229
Selecting the Tests 229
Configuring the Tests 230
Connecting the Equipment 230
Running the Tests 231
Viewing Test Results 233

All of the On-The-Go electrical tests use the same test setup.

Equipment Used

Table 44 Equipment Used in On-The-Go Electrical Tests

Quantity	Item	Description/Model
1	Oscilloscope	Agilent 5485xA Series, 9000A Series, 80000 or 90000A Series, 54831B/D, or 54832B/D
2	Passive or active probes	For 5485x, 80000 and 90000A Series oscilloscopes: • Agilent 1156A For 54831B/D and 54832B/D oscilloscopes: • Agilent 1165A
1	Digital Multimeter (DMM)	Agilent 34401A or equivalent
1	USB OTG test fixture	Agilent N5417A
1	Power supply	Agilent E3631A or equivalent
1	USB/GPIB interface	Agilent E2357A
1	GPIB cable	Agilent 10833B

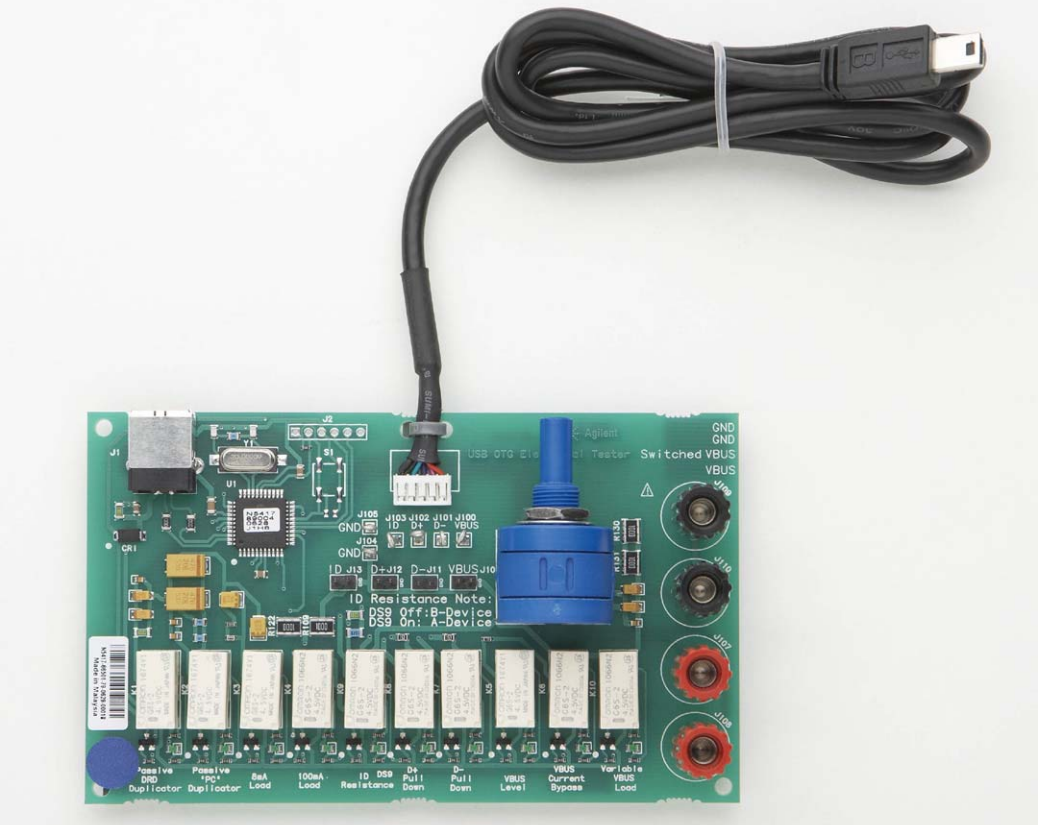

Figure 6 Agilent N5417A USB OTG Test Fixture

Installing the USB-OET (OTG Electrical Test) Fixture Driver

1 Plug the OET fixture to any USB port.

2 A Found New Hardware Wizard window will pop up (Windows XP).

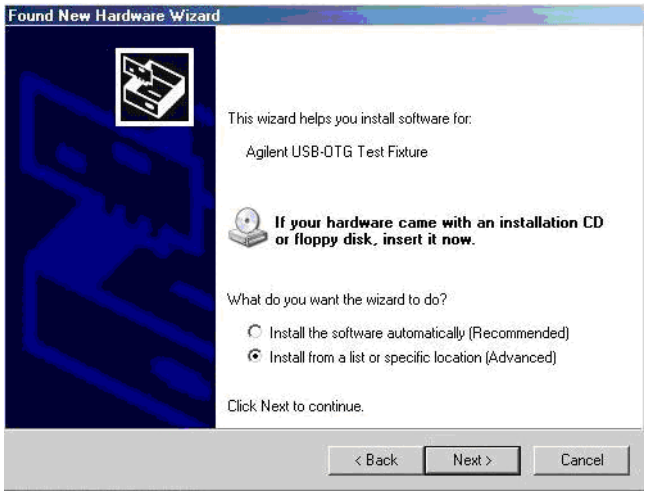
Found New Hardware Wizard
This wizard helps you install software for:
Agilent USB-OTG Test Fixture
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

3 Select **Install the software automatically** from the wizard window.

Selecting the Tests

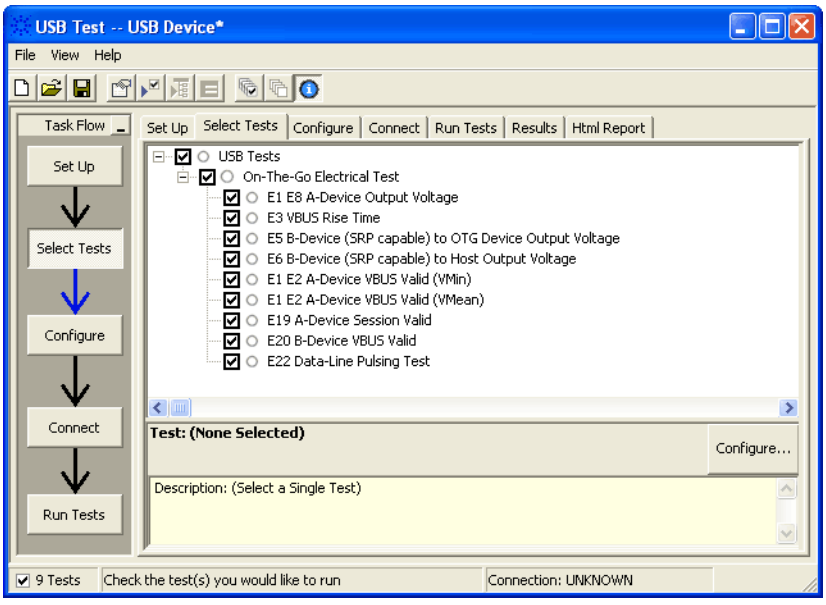

Configuring the Tests

If the power supply's SICL address is different from the default, make sure you set the E3631A Instrument Address configuration option to the power supply's SICL address.

Connecting the Equipment

The USB automated test application will prompt you to perform these connection steps:

NOTE

Note: For 54831B/D and 54832B/D oscilloscopes, use 1165A passive probes. For the 5485XA, 80000 and 90000A Series oscilloscpes, use 1156A active probes.

1. Please refer to the "Installing the USB-OET (OTG Electrical Test) Fixture Driver" on page 229 for instructions on installing the drivers for the N5417A OTG Electrical Test board.
2. Connect the Channel 1 probe of the oscilloscope to the J100, VBUS test point of the OET. Connect the probe's ground to the J104, GND test point nearest to the VBUS test point.
3. Connect the Channel 3 probe of the oscilloscope to the J102, D+ test point of the OET. Connect the probe's ground to the J105, GND test point nearest to the D+ test point.
4. Connect the black multimeter lead from INPUT LOW to J110, GND terminal, of the OET.
5. Connect the red multimeter lead from INPUT HI to J108, VBUS terminal, of the OET.

WARNING

Make sure the power supply voltage is 6 V. An incorrect voltage can damage the USB-OET test fixture, and a damaged test fixture can be a shock hazard to the operator.

6. Connect the black supply lead from the power supply 6 volt supply negative output to J109, GND terminal, of the OET.
7. Connect the red power supply lead from the power supply 6 volt supply positive output to J107, Switched VBUS terminal, of the OET.
8. Connect the 34401A digital multi-meter to E3631A power supply using the 10833B GPIB cable.

9 Connect the E3631A power supply to the oscilloscope using the 82357A USB/GPIB Interface.

10 Connect the OET test fixture to the oscilloscope's USB port .

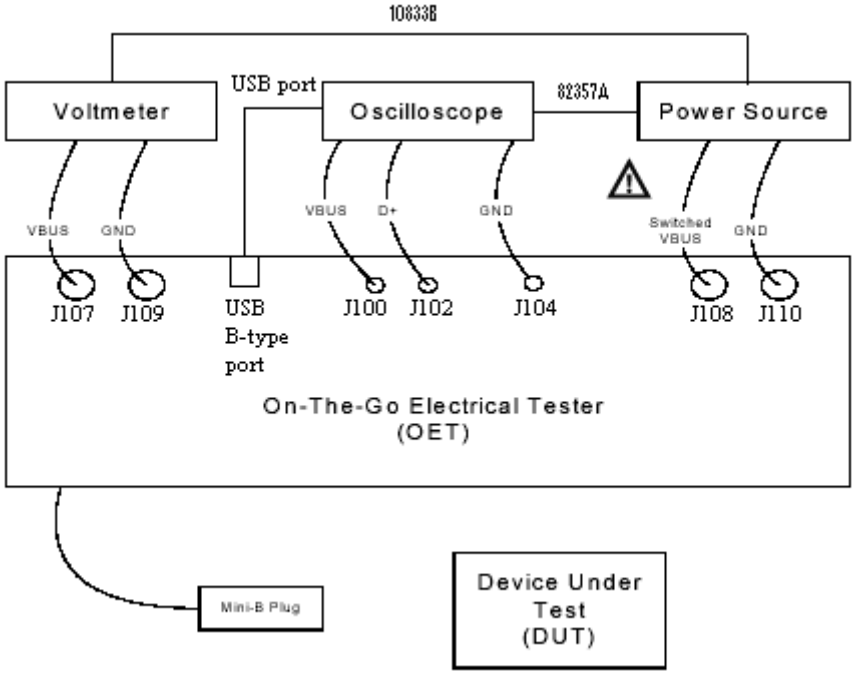

11 Check **I have completed these instructions**.

Running the Tests

1 Click **Run Tests**.

E1 E8 A-Device Output Voltage

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
8 mA Load	OFF	OFF	**ON**	OFF	OFF	OFF	OFF	OFF	A-Device	OFF

E3 VBUS Rise Time

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
8 mA Load	OFF	OFF	**ON**	OFF	OFF	OFF	OFF	OFF	A-Device	OFF

E5 B-Device (SRP capable) to OTG Device Output Voltage

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
Passive OTG Device Duplicator	**ON**	OFF	OFF	OFF	OFF	OFF	**ON**	**ON**	B-Device	OFF

E6 B-Device (SRP capable) to Host Output Voltage

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
Passive "PC" Duplicator	OFF	**ON**	OFF	OFF	OFF	OFF	**ON**	**ON**	B-Device	OFF

E19 A-Device Session Valid

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
Pre-A-Device VBUS Level	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	A-Device	OFF

E20 B-Device VBUS Valid

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
Pre-VBUS Current Bypass Test	OFF	OFF	OFF	OFF	OFF	OFF	**ON**	**ON**	B-Device	OFF

E22 Data-Line Pulsing Test

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
Passive OTG Device Duplicator	**ON**	OFF	OFF	OFF	OFF	OFF	**ON**	**ON**	B-Device	OFF

A-Device VBUS Valid (VA_VBUS_VLD)

1 Set the OET switches to the following settings.

Mode	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
100 mA Load	OFF	OFF	OFF	**ON**	OFF	OFF	OFF	OFF	A-Device	OFF

E1 E2 A-Device VBUS Valid (VMin)

E1 E2 A-Device VBUS Valid (VMean)

Viewing Test Results

1 When the Testing Complete dialog appears, click **OK**.

The Results tab shows the test results.

Index

Numerics

100 mA load board schematic, 177
10073C miniature passive probes, 26
1156A probes, 26
500 mA load board schematic, 177
81134A pulse generator, 98
81134A/81130A Instrument Address configuration option, 66, 98
82357A GPIB-USB converter, 98
82357A USB/GPIB interface, 21

C

cables, 21
calibrate probes, 26
calibration, 26
common ground reference, 26
compensate passive probes, 26
computer, high-speed electrical test bed, 22
configure, 29
connect, 29

D

Data Eye Test Mode configuration option, 175
debug mode, 175
device CHIRP timing, 48
device hi-speed signal quality test, 35
device hi-speed tests, 33
device packet parameters, 41
device receiver sensitivity, 65
device suspend/resume/reset timing, 51
device test J/K, SE0_NAK, 59
differential probe, 25
digital signal generator, 21, 27
driver, USB-OET (OTG Electrical Test) fixture, 229
droop/drop test, 178

E

E2688A serial data analysis (SDA) and clock recovery software option, 175
E2697A adapters, 26
E3631A Instrument Address configuration option, 230
EHCI driver stack, 22
electrical test bed computer, 22
enhanced bandwidth software option, 20, 33, 71, 141
entitlement certificate, 17
equipment required, 20
equipment, setting up, 25

G

ground reference, common, 26

H

high-speed electrical test bed computer, 22
High-Speed Electrical Test Tool Kit software, 22
host CHIRP timing, 159
host controller packet parameters, 148
host disconnect detect, 155
host downstream signal quality test, 200
host hi-speed electrical tests, 141
host hi-speed signal quality, 143
host suspend/resume timing, 164
host test J/K, SE0_NAK, 169
HTML report, 29
hub CHIRP timing - upstream facing port, 117
hub disconnect detect, 86
hub downstream signal quality test, 205
hub hi-speed signal quality test - downstream facing ports, 78
hub hi-speed signal quality test - upstream facing ports, 73
hub hi-speed tests, 71
hub jitter test - downstream facing ports, 82
hub packet parameters - upstream facing port, 90
hub receiver sensitivity - upstream facing port, 97
hub repeater test - downstream facing port, 106
hub repeater test - upstream facing port, 111
hub suspend/resume/reset timing - upstream facing port, 120
hub test J/K, SE0_NAK - downstream facing port, 134
hub test J/K, SE0_NAK - upstream facing port, 128

I

identify test environment, 29
in this book, 4
inrush current test, 197
Inrush Current Time Range configuration option, 176
Inrush Current Trigger Level configuration option, 176
installing the license key, 17
installing the software, 16

L

license code, 17
license key, installing, 17
load board, 23

M

Marker Placement configuration option, 175
Mask Template configuration option, 176
MATLAB scripts, 175
MATLAB scripts version configuration option, 176
memory upgrade option, 20, 33, 71, 141
monitor, optional, 25
multimeter, 21

N

N5416A USB 2.0 Compliance Test Option, 3, 20
noise reduction software option, 20, 33, 71, 141

O

On-The-Go electrical tests, 227
optional computer monitor, 25
oscilloscope required, 20
oscilloscope, software, and accessories, 20

P

passive probes, compensating, 26
power supply's SICL address, 230
probes, calibrating, 26
pulse generator's SICL address, 66, 98
pulse/pattern generator, 21

R

report, 29
required equipment and software, 20
results, 29
run tests, 29
running tests, 31

S

select tests, 29
SICL address, power supply, 230
SICL address, pulse generator, 66, 98
software, installing, 16
SQiDD board, 23
starting the USB automated test application, 28

T

test bed computer, high-speed electrical, 22
test fixtures, USB electrical, 24
Test Type configuration option, 201, 206, 212
tests, running, 31
Threshold configuration option, 176
Trigger Level configuration option, 176
troubleshooting hi-speed test failures, 175

U

upstream signal quality test, 211
USB automated testing—at a glance, 3
USB electrical test fixtures, 24
USB Implementers Forum web site, 4
USBHSET software, 22

W

web site, USB Implementers Forum, 4